

SP5500+ / SP6000+ / SP7000+ User Guide

4 to 32-Zone Expandable Security Systems



P ▲ R ▲ D O X™

Warranty

For complete warranty information on this product please refer to the Limited Warranty Statement found on the website www.paradox.com/terms. Your use of the Paradox product signifies your acceptance of all warranty terms and conditions.

Limitations of Alarm Systems

We strongly advise that you review and take into consideration the "Limitations of Alarm Systems" document available on our website at <http://paradox.com/Terms/>.

Warning for Connections to Non-Traditional Telephony (e.g. VoIP)

Paradox alarm equipment was designed to work effectively around traditional telephone systems. For those customers who are using a Paradox alarm panel connected to a non-traditional telephone system, such as "Voice Over Internet Protocol" (VoIP) that converts the voice signal from your telephone to a digital signal traveling over the Internet, you should be aware that your alarm system may not function as effectively as with traditional telephone systems.

For example, if your VoIP equipment has no battery back-up, during a power failure your system's ability to transmit signals to the central station may be compromised. Or, if your VoIP connection becomes disabled, your telephone line monitoring feature may also be compromised. Other concerns would include, without limitation, Internet connection failures which may be more frequent than regular telephone line outages.

We therefore strongly recommend that you discuss these and other limitations involved with operating an alarm system on a VoIP or other non-traditional telephone system with your installation company. They should be able to offer or recommend measures to reduce the risks involved and give you a better understanding.

WARNINGS: Information to User

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to equipment intermittently, the user is encouraged to try to correct the interference by one or more of the following measures: (1) re orient or relocate the receiving antenna; (2) increase the separation between the equipment and receiver; (3) connect the equipment to an outlet on a circuit other than the one to which the receiver is connected, or (4) consult the dealer or an experienced radio/TV technician for assistance. CAUTION: The user is cautioned that any changes or modifications not expressly approved by Paradox Security Systems could void the user's authority to operate/use the equipment.

Patents

One or more of the following US patents may apply: 7046142, 6215399, 6111256, 5920259, 5886632, and RE39406. Canadian and international patents may also apply.

© 2022 Paradox Security Systems Ltd. All rights reserved. Specifications may change without prior notice.

Paradox, StayD, Magellan and Spectra are trademarks or registered trademarks of Paradox Security Systems (Bahamas) Ltd. or its affiliates in Canada, the United States and/or other countries.

Table of Contents

User Settings	4	Auto-Arming	16
Zone Settings	5	No Movement Auto Arming	17
User Codes	6	Alarms	18
Adding / Modifying a User	6	Alarm Display	18
Deleting a User	6	Disarming & Deactivating an Alarm	18
Setting the Time & Date	7	Panic Alarms	18
Setting Chime Zones	7	Fire Alarms	18
Trouble Display	8	Testing & Maintenance	18
Keypads	9	Communicating Through the Internet (IP150+)	19
Auditory Feedback	9	Communicating Using Text Messages (PCS Series)	19
Visual Feedback	9	Receiving Text Messages	19
Keypad Muting	9	Sample Text Messages	20
Keypad Backlight	9	Sending Text Messages to Arm / Disarm	21
Keypad Overviews	10	PCS Module Phone Number	21
K32+ Keypad Overview	12	Advanced System Features	22
K32LCD+ Keypad Overview	12	Programmable Outputs (PGMs)	22
Remote Controls	13	Partitioning	22
Remote Control Feedback (REM2/REM25)	13	Quick Function Keys	22
Arming & Disarming with StayD	14	System Notes	23
To Turn On/Off StayD Mode	14	Zone Description	23
To Change Arm Mode	14	Special Keys and Features	23
To change the level of security - Stay to Sleep:	14	Panic Alarms	23
To change the level of security - Sleep to Stay:	14	PGMs	23
Leaving the site - Stay to Full:	14	PGM Utility Keys	23
Entering the site - Full to Stay:	14	System Timers	23
Leaving the site without changing arm mode:	14	PCS Module Phone Number	23
Advanced StayD Settings	14	Other Information	23
Arming & Disarming	15	Quick Programming	24
Regular Arming	15	Master Quick Menus	24
Sleep Arming	15	Index	26
Stay Arming 1	5		
Bypassing a Zone	15		
Bypass Recall Feature	16		
One-Touch Arming	16		

User Settings

For security reasons, write only the user's name and not their user code. 4-Digit Codes 6-Digit Codes

User # and Name	Partition 1	Partition 2	Byp*	Stay*	Force*	Arm* only	PGM* only	Duress*
01: Master _____	<input type="checkbox"/>							
02: Master 1 _____	<input type="checkbox"/>							
03: Master 2 _____	<input type="checkbox"/>							
04: _____	<input type="checkbox"/>							
05: _____	<input type="checkbox"/>							
06: _____	<input type="checkbox"/>							
07: _____	<input type="checkbox"/>							
08: _____	<input type="checkbox"/>							
09: _____	<input type="checkbox"/>							
10: _____	<input type="checkbox"/>							
11: _____	<input type="checkbox"/>							
12: _____	<input type="checkbox"/>							
13: _____	<input type="checkbox"/>							
14: _____	<input type="checkbox"/>							
15: _____	<input type="checkbox"/>							
16: _____	<input type="checkbox"/>							
17: _____	<input type="checkbox"/>							
18: _____	<input type="checkbox"/>							
19: _____	<input type="checkbox"/>							
20: _____	<input type="checkbox"/>							
21: _____	<input type="checkbox"/>							
22: _____	<input type="checkbox"/>							
23: _____	<input type="checkbox"/>							
24: _____	<input type="checkbox"/>							
25: _____	<input type="checkbox"/>							
26: _____	<input type="checkbox"/>							
27: _____	<input type="checkbox"/>							
28: _____	<input type="checkbox"/>							
29: _____	<input type="checkbox"/>							
30: _____	<input type="checkbox"/>							
31: _____	<input type="checkbox"/>							
32: _____	<input type="checkbox"/>							

*Programmed by your installer.

Zone Settings

Write the device type (motion detector, door contact etc.) and location.

Zone Number and Description	Partition 1 or 2	Byp	Stay	Sleep	Force	24Hr	Entry delay	Fire zone	Fire Delay
001: _____	___	<input type="checkbox"/>							
002: _____	___	<input type="checkbox"/>							
003: _____	___	<input type="checkbox"/>							
004: _____	___	<input type="checkbox"/>							
005: _____	___	<input type="checkbox"/>							
006: _____	___	<input type="checkbox"/>							
007: _____	___	<input type="checkbox"/>							
008: _____	___	<input type="checkbox"/>							
009: _____	___	<input type="checkbox"/>							
010: _____	___	<input type="checkbox"/>							
011: _____	___	<input type="checkbox"/>							
012: _____	___	<input type="checkbox"/>							
013: _____	___	<input type="checkbox"/>							
014: _____	___	<input type="checkbox"/>							
015: _____	___	<input type="checkbox"/>							
016: _____	___	<input type="checkbox"/>							
017: _____	___	<input type="checkbox"/>							
018: _____	___	<input type="checkbox"/>							
019: _____	___	<input type="checkbox"/>							
020: _____	___	<input type="checkbox"/>							
021: _____	___	<input type="checkbox"/>							
022: _____	___	<input type="checkbox"/>							
023: _____	___	<input type="checkbox"/>							
024: _____	___	<input type="checkbox"/>							
025: _____	___	<input type="checkbox"/>							
026: _____	___	<input type="checkbox"/>							
027: _____	___	<input type="checkbox"/>							
028: _____	___	<input type="checkbox"/>							
029: _____	___	<input type="checkbox"/>							
030: _____	___	<input type="checkbox"/>							
031: _____	___	<input type="checkbox"/>							
032: _____	___	<input type="checkbox"/>							

User Codes

User codes are personal identification numbers for each user that allow you to enter certain programming modes, arm or disarm your system, as well as activate or deactivate PGMs. The system supports the following:

- 1 System Master Code
- 2 Master Codes
- 29 User Codes

System Master Code (Default: 1234)

The System Master Code can arm or disarm any partition, and can create, modify or delete any user code.

Master Codes

Master Code 1 is permanently assigned to Partition 1 and can be used to create, modify or delete user codes that are assigned to Partition 1. Master Code 2 is permanently assigned to Partition 2 (exception: when partitioning is disabled, Master Code 2 will be assigned to Partition 1) and can be used to create, modify or delete user codes that are assigned to the same partition.

NOTE: Master Codes cannot modify or delete user codes assigned to both partitions. Only the System Master Code can modify or delete user codes assigned to both partitions.

Duress Code

If you are forced to arm or disarm your system, entering the user code with the duress option enabled will arm or disarm the system and immediately transmit a silent alert (Duress Code) to the monitoring station. The duress code must be enabled by your installer.

User Code Length

Your system can be programmed to use either 4- or 6-digit user codes, where each digit can be any value from 0 to 9. Six-digit codes are considered more difficult to "crack" and therefore, more secure. Avoid programming simple or obvious user codes, such as your telephone number, address, or codes such as 1234.

Adding / Modifying a User

	How do I add / modify a user?	Visual Feedback
1	Press the [⏻] key.	
2	Enter your [MASTER CODE].	[⏻] and [1] flash. When a number on the keypad is lit, the user is already programmed.
3	Select a user by entering a 2-digit user number (01 to 32).	"Arm" flashes.
4	Enter a 4- or 6-digit [USER CODE].	"Sleep" flashes.
5	Confirm the [USER CODE].	"Stay" flashes.
6	To register a remote, press and hold any remote button for 3 seconds. Release. Press and hold any remote button for 3 seconds. If you do not wish to assign a remote, press [ENTER].	"Off" flashes.
7	To program another user, go to step 3. To exit, press [CLEAR]. For partitioned systems, continue to step 8.	
8	Press [1] and/or [2] to assign the user to a partition. Press [ENTER].	
9	To program another user, go to step 3. To exit, press [CLEAR].	

Deleting a User

	How do I delete a user?
1	Press the [⏻] key.
2	Enter your [MASTER CODE].
3	Select a user by entering a 2-digit user number.
4	Press and hold the [SLEEP] key until you hear the confirmation beep.

Setting the Time & Date

How do I set the time & date?

- 1 Press the **[⏻]** key.
 - 2 Enter your **[MASTER CODE]**.
 - 3 Press **[TBL]**.
 - 4 Press **[5]**.
 - 5 Enter time* in the **[HH.MM]** format. If HH = 13 or more, skip to step 7.
 - 6 Select time format. **[1]** = 24hr; **[2]** = AM; **[3]** = PM.
 - 7 Enter the date in the **[YYYY/MM/DD]** format. You have now set the time & date. Press **[CLEAR]** to exit.
- *For SP4000 / SP65 systems, time must be entered in 24hr format. Omit step 6 (time format).

Setting Chime Zones

A chime-enabled zone will advise you every time it is opened by causing your keypad to beep. Each keypad must be chimed separately.

How do I chime zones?

- **For K32+:** Press & hold the **[🎵]** key. The Arm1, Arm2, Stay1, and Stay2 LEDs will flash. Enter the zone number corresponding to the zones you want to chime. The corresponding LED will light up. Press the **[ENTER]** key to exit.
- **For K35:** Press & hold the **[🎵]** key (K35). The word *Chime* will appear on the screen. Enter the zone number corresponding to the zones you want to chime. The corresponding LED will light up. Press the **[ENTER]** key to exit.
- **For K10V, K10H and K636:** Press & hold the zone key (**[1]** to **[0(10)]**). Accept beep = chime on.
- **For K32LCD+:** Press and hold the **[🎵]** key. Press **[1]** to select which zone to chime or press **[2]** to configure chime period. The chime period allows you to specify the time frame in which the zone will chime. Enter the zone number corresponding to the zones you want to chime. Press the **[ENTER]** key to exit.

How do I disable chime zones?

- **For K32+, K35, and K32LCD+:** To disable chime zones, repeat this process and enter the zone number to disable a chime zone, or press **[SLEEP]** to disable all chime zones instead of entering a zone number.
- **For K10V, K10H and K636:** Press & hold the zone key (**[1]** to **[0(10)]**). Fail beep = chime off.

NOTE: For a description of the confirmation and rejection beeps, see Keypad Feedback on page 9. To identify your keypad, see page 10.

Trouble Display

Your alarm system continuously monitors several trouble conditions that can be reported directly to your monitoring station. When a trouble condition occurs, the **[TBL]** key will illuminate. Press the **[TBL]** key, and the keypad will illuminate a number corresponding to the trouble the system is experiencing. Except for the Timer Loss trouble, contact your monitoring station or installer to resolve the trouble condition.

NOTE: If the keypad emits a BEEP every 5 seconds whenever a new trouble condition has occurred, press the **[TBL]** key to stop the "Trouble Beep".

Accessing the Trouble Display

	Key / LED Lit	Trouble Type	Trouble Details
Press [TBL]	[1]	Wireless Zone Low Battery	The batteries for one of the system's wireless devices needs to be replaced.
	[2]	Power Trouble	The control panel is experiencing power trouble.
	[3]	Bell Trouble	There is a bell disconnect/overload on the control panel.
	[4]	Communication Trouble	Your alarm system, if monitored, could not communicate with the monitoring station.
	[5]	Tamper/Zone Wiring Failure	A wiring problem is occurring on one or more devices.
	[6]	Module Tamper Trouble	A device's anti-tamper switch has been triggered.
	[7]	Fire Loop Trouble	One of the zones is in fire loop trouble.
	[8]	Timer Loss	Your alarm system's clock must be reprogrammed. See <i>Setting the Time and Date</i> on page 7 to set your system's time and date.
	[9]	Wireless Zone Supervision Loss	One or more wireless zones are no longer communicating with the system.
	[0 (10)]	Module Supervision Loss	One or more modules are no longer communicating with the system.
	[16] / [SLEEP]	Keypad Fault	There is a problem with one of your system's keypads

Keypads

Auditory Feedback

When you enter information on the keypad, it will guide you with beep tones that communicate confirmation or rejection of your entries. You should be familiar with these two keypad beep tones:

Confirmation Beep: When an operation (e.g. arming/disarming) is successfully entered on the keypad or when the system switches to a new status/mode, the keypad produces an intermittent beep tone ("BEEP-BEEP-BEEP-BEEP").

Rejection Beep: When the system reverts to its previous status or when an operation is incorrectly entered on the keypad, it will emit a continuous beep tone ("BEEEEEEEEEP").

The following are other types of auditory feedback, and will always be accompanied by the flashing of an arm key or LED ([**ARM**], [**STAY**], or [**SLEEP**]):

- Continuous beep = Alarm
- Variable beep = Fire alarm
- Intermittent beep = Beginning of exit delay
- Fast Intermittent beep = Last 10 seconds of exit delay

Visual Feedback

The keypad includes colored lights which convey the current status of your system. The state of each light represents a specific condition in your system.

NOTE: Many of the features in your system must be enabled by the installer. If the feature is not programmed, the keypad will emit a rejection beep and the action will be canceled. Refer to Zone Settings on page 5 for details.

Keypad Muting

When muted, the keypad will only emit the confirmation beep and rejection beep, and will beep when a key is pressed. Therefore, when muted, the keypad will not beep during an alarm and will not beep for chime enabled zones. Each keypad must be muted separately.

How do I mute the keypad?

- **For K32+, K35, K636, K10V and K10H:** Press & hold the [CLEAR] key for 6 seconds to enable or disable keypad muting. If the keypad emits a confirmation beep, Keypad Muting is enabled for that keypad. If the keypad emits a rejection beep, the feature is disabled.
- **For the K32LCD+:** Press and hold the [⊙] key for keypad settings. Press [4] for Mute Control. Press [arm] to enable or disable keypad muting.

Keypad Backlight

The illumination level behind the keys can be modified to suit your needs.

How do I modify the backlight?

- **For K32+:** Press and hold the [⊙] key. Press the [⊙] key to set the desired backlight level. Press [CLEAR] or [ENTER] to exit.
- **For K35:** Press and hold the [▲] key for 4 seconds. Keys 1, 2, 3, 5 and 6 will flash. Press [CLEAR] to exit the menu without saving the information or press [ENTER] to exit the menu and save the information. Press the desired key and scroll using the [▲] and [▼] to adjust:
 - [1] To adjust the scrolling speed.
 - [2] To adjust the backlight (0 = Off, 1 = Lowest brightness / 7 = Maximum brightness)
 - [3] To adjust the contrast (0 = Low contrast, 4 = High contrast)
 - [5] To adjust the auto dim backlight level (0 = Off, 1 = Lowest auto dim backlight, (...) 7 = Highest auto dim backlight)
 - [6] To adjust the auto dim delay (0 = Off, 1 = 1 sec., 2 = 5 sec., 3 = 10 sec., 4 = 20 sec., 5 = 1 min., 6 = 2 min., 7 = 4 min.)
- **For the K10V, K10H and K636:** Press and hold the [MEM] key. **THE [MEM] KEY WILL ILLUMINATE. PRESS THE [MEM] KEY TO SET THE DESIRED BACKLIGHT LEVEL.** Press [CLEAR] or [ENTER] to exit.
- **For the K32LCD+:** Press and hold the [⊙] key. Press [2] to modify the backlight. Scroll using the [▲] and [▼] keys. Press [ENTER] to save.

Keypad Overviews


K636 Keypad Overview

[TBL] Trouble display
 ON = Trouble(s) occurring (page 8)
[MEM] Alarm memory display
 ON = Alarm(s) occurred (page 18)
[BYP] Bypass programming
 ON = Zone(s) bypassed (page 15)

Zone Display:

The keys **[1]** to **[0(10)]** correspond to zones 1 to 10 respectively:
 Key lit= Open or entry delay
 Key flash= In alarm

 = Press once + **[MASTER CODE]** for Quick Menu Programming (see Master Quick Menus)

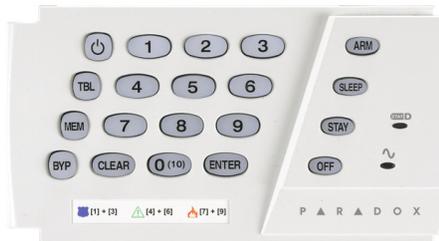

IMPORTANT: If installed on a partitioned system, the K636 will only display partition 1.

[ARM] (page 15)
[SLEEP] (page 15)
[STAY] (page 15)
 ON = System armed
 OFF = Zone disarmed
 Flash = Exit Delay
 Fast Flash = Exit Delay (final 10 sec.) / zone in alarm

Off Key:
 ON= Disarmed
 OFF= System armed
~ Light (AC):
 ON = Power on
 OFF = Power off

StayD Light:
 ON= StayD on
 OFF= StayD off

K10LEDV/H Keypad Overview

[TBL] Trouble display
 ON = Trouble(s) occurring (page 8)
[MEM] Alarm memory display
 ON = Alarm(s) occurred (page 18)
[BYP] Bypass programming
 ON = Zone(s) bypassed (page 15)

Zone Display:

The keys **[1]** to **[0(10)]** correspond to zones 1 to 10 respectively:
 Key lit= Open or entry delay
 Key flash= In alarm

 = Press once + **[MASTER CODE]** for Quick Menu Programming (see Master Quick Menus)

Partition 1 Status Partition 2 Status



[ARM] (page 15)
[SLEEP] (page 15)
[STAY](page 15)
 ON = System armed
 OFF = Zone disarmed
 Flash = Exit Delay
 Fast Flash = Exit Delay (final 10 sec.) / zone in alarm

Off Key:
 ON= Disarmed
 OFF= System armed
~ Light (AC):
 ON = Power on
 OFF = Power off

StayD Light:
 ON= StayD on
 OFF= StayD off

K35 Keypad Overview




 = Press once + [MASTER CODE] for Quick Menu programming
See Master Quick Menus.

 = Press & hold for keypad settings

 = Press & hold for chime programming
See Setting Chime Zones.

K35 Icon Display and Description

K35

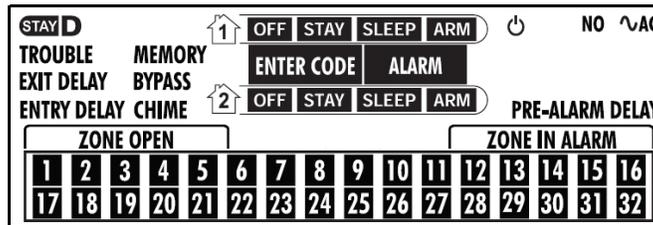

Icon	Description
StayD	On = StayD mode enabled
 	Indicate Partition 1 and 2
OFF	On = System is disarmed
STAY	On = System is Stay armed
SLEEP	On = System is Sleep armed
ARM	On = Partition is armed
ALARM	Flashing = System is in alarm
PRE-ALARM DELAY	On = Countdown to alarm on Pre-Alarm zones
ZONE OPEN	On = Illuminated zone(s) are open
ZONE IN ALARM	On = Illuminated zone(s) are in alarm

K32+ Keypad Overview

Partition 1 Status Partition 2 Status



[TBL] Trouble display
ON = Trouble(s) occurring (page 8)
[MEM] Alarm memory display
ON = Alarm(s) occurred (page 18)
[BYP] Bypass programming
ON = Zone(s) bypassed (page 15)

[ARM] (page 15)
[SLEEP] (page 15)
[STAY] (page 15)
ON = System armed
OFF = Zone disarmed
Flash = Exit Delay
Fast Flash = Exit Delay (final 10 sec.) / zone in alarm

Off Key:
ON= Disarmed
OFF= System armed
Light (AC):
ON = Power on
OFF = Power off

StayD Light:
ON= StayD on
OFF= StayD off
(see StayD Mode on page 14)

Zone Display:
The keys **[1]** to **[0(10)]** correspond to zones 1 to 10 respectively:
Key lit= Open or entry delay
Key flash= In alarm

 = Press once + **[MASTER CODE]** for Quick Menu Programming (see Master Quick Menus).

 = Press and hold to modify backlight (see page 9)

K32LCD+ Keypad Overview



Off Key:
ON= Disarmed
OFF= System armed
Light (AC):
ON = Power on
OFF = Power off

StayD Light:
ON= StayD on
OFF= StayD off
(see StayD Mode on page 14)

[TBL] Trouble display
ON = Trouble(s) occurring (page 8)
[MEM] Alarm memory display
ON = Alarm(s) occurred (page 18)
[BYP] Bypass programming
ON = Zone(s) bypassed (page 15)

 = Press once + **[MASTER CODE]** for Quick Menu Programming (see Master Quick Menus)

 = Press and hold to modify back light (see page 9)

 = Press and hold for chime programming (see page 7)

Remote Controls

Your security system supports three types of remote controls; the REM1, REM101, REM2, REM3, REM15, and REM25. The REM1, REM101 and REM15 are the most basic remote controls, with the ability to perform five actions (e.g. arming, disarming, activating a PGM, etc.). The REM2 and REM25 are more advanced, as they performs up to six different actions, as well as provides visual and auditory feedback (see table below). The REM3 is the most advanced remote control, as it has all the functionalities of a keypad (refer to the REM3 User Manual for more information). The following table describes the visual and auditory feedback of the REM2/REM25 remote controls.

Remote Control Feedback (REM2/REM25)

Full/Force Arming Feedback

Action	Visual Feedback	Auditory Feedback
Disarming	Green on	TWO BEEPS
Exit delay	Red / green slow flash	CONFIRMATION BEEP
Arming / Entry Delay	Red on	CONFIRMATION BEEP
Alarm	Red fast flash	ALARM BEEP

Stay/Sleep Arming Feedback

Action	Visual Feedback	Auditory Feedback
Disarming	Green on	TWO BEEPS
Exit delay	Yellow / green slow flash	CONFIRMATION BEEP
Arming / Entry Delay	Yellow on	CONFIRMATION BEEP
Alarm	Red fast flash	ALARM BEEP

Other Feedback

Action	Visual Feedback	Auditory Feedback
PGM on/off	Yellow on	CONFIRMATION BEEP

Arming & Disarming with StayD

StayD simplifies your life and makes it safer by protecting you 24 hours a day, 7 days a week without ever having to disarm the system – even when entering an armed area. StayD lives with you and protects you at all times, without any unprotected periods, and automatically re-arms the system so you don't need to remember to.

When entering/exiting a site, the system partly disarms to let you pass through: simply notify the system with your remote and go through the designated path which will automatically re-arm after you pass. All other zones remain armed. The result is a system that is always protecting, without the uncertainty of whether the system is armed or not.

Other benefits of StayD include knowing when your kids are accessing potentially dangerous areas, such as the balcony, pool or front door. Now you can truly have peace of mind knowing that you are always protected. Consult your installer for more information.

To Turn On/Off StayD Mode

To turn on StayD mode:

[STAY] + [CODE] + [STAY] → StayD light on

Press the **[STAY]** key followed by a valid code, then press the **[STAY]** key again within ten seconds. The StayD light will light up to confirm StayD activation, and the system will be in Stay mode.

To turn off StayD mode:

[OFF] + [CODE] + [OFF] → Off light on

Press the **[OFF]** key followed by a valid code, then press the **[OFF]** key again within ten seconds. The StayD light will turn off and the Off light will light up to confirm StayD deactivation. With StayD disabled, the system will function as a standard security system.

To Change Arm Mode

See *Arming & Disarming* on page 15.

To change the level of security - Stay to Sleep:

[SLEEP] for 2 sec. → Delay → Sleep light on

Press and hold the **[SLEEP]** key on any keypad. All zones which will be armed in Sleep mode go into exit delay, allowing you to move to the bedroom. When the exit delay ends, and you are in the bedroom, the rest of the interior will arm. The system is now in Sleep mode.

To change the level of security - Sleep to Stay:

[STAY] for 2 sec. → Stay light on

Press and hold the **[STAY]** key on the keypad located in the bedroom. The system will instantly switch from Sleep to Stay mode, allowing you to leave the bedroom and move freely inside the house. If you accidentally leave the bedroom without switching to Stay mode, all zones armed in Sleep mode will go into a delay, allowing you enough time to switch to Stay mode.

Leaving the site - Stay to Full:

Keypad: **[ARM]** for 2 sec. → Delay → Arm light on

Press and hold the **[ARM]** key on the keypad that the exit path is assigned to. This will start an exit delay period for all zones in the exit path. After you have left the property, all exit path zones will rearm. The system is now in Full mode.

Entering the site - Full to Stay:

Keypad: **[CODE]** → Stay light on

When entering the property through the entry path, all zones assigned to the entry path will go into delay, allowing you to enter the house. Entering a valid code on the keypad the entry path is assigned to ends the entry delay and switches the system to Stay Arm mode. The entry path zones will rearm. The system is now in Stay mode.

Leaving the site without changing arm mode:

[OFF] for 2 sec.

Press and hold the **[OFF]** key for 2 seconds on a keypad to leave the site without changing arm mode.

Advanced StayD Settings

Window Mode and Re-arm Delay

In a Stay-armed system: This mode allows you to open one exterior zone without triggering an alarm. To enter Window mode, press **[OFF]**, then your **[USER CODE]**. All zones that can be opened flash. The system will start an exit delay, allowing you to open an exterior zone such as a window or a door. The system will only allow you to open one zone as the exit delay will end after doing so. When you close the open zone (window, door, etc.) that zone will re-arm.

When closing an exterior zone such as a window or door, a delay will start allowing you to close the zone properly. The re-arm delay starts when you close the zone, and you must keep the zone closed for the entire delay period for it to re-arm. This is especially useful for windows that stick thus reducing false alarms.

Live View Mode:

During an alarm, press the **[CLEAR]** key to view the movement. The zone lights on the keypad will show the opening and closing of zones as they occur.

Arming & Disarming

Take full advantage of your system by familiarizing yourself with all the arming methods. If your system is not partitioned (see Partitioning on page 22), everything is considered as belonging to Partition 1.

NOTE: If you cannot arm because a zone is open, the system will enter in Bypass Programming. Enter the two digit zone you wish to bypass and press **[ENTER]**, or press **[ENTER]** to bypass all open zones.

Regular Arming

This method will arm all the zones in the selected partition. Please note that Regular arming can also be activated using Auto-Arming (see Auto-Arming on page 16) or One-Touch Arming (see One-Touch Arming on page 16).

How do I Regular arm?

1. Close all zones in the desired partition.
2. Press **[ARM]** + **[USER CODE]**.
3. If you have access to both partitions (see Partitioning on page 22): Press the key corresponding to the desired partition (**[1]** or **[2]**). For both partitions, press the other key after the confirmation beep.

Sleep Arming

Similar to Stay arming, Sleep arming allows users to remain in a protected area, but provides a higher level of protection. For example, in a two-story house, the perimeter is protected with Stay arming. With Sleep arming, the perimeter as well as the main floor are protected (motion detectors, etc.), allowing you to roam the second floor and sleeping quarters. Sleep zones are zones that are bypassed when Sleep arming. For example, when you go to sleep at night, the entire premises except your bedroom is fully armed. Sleep arming can also be activated using Auto-Arming (see Auto-Arming on page 16) or One-Touch Arming (see One-Touch Arming on page 16).

How do I Sleep arm?

1. Close all zones in the desired partition (except Sleep zones).
2. Press the **[SLEEP]** key.
3. Enter your **[USER CODE]**.
4. If you have access to both partitions (see Partitioning on page 22): Press the key corresponding to the desired partition, **[1]** or **[2]**. For both partitions, press the other key after the confirmation beep.

Stay Arming

This method allows you to roam freely within the premises while the perimeter is fully armed. Stay zones are zones that are bypassed when Stay arming. For example, if you plan on staying in for the night, doors and windows can be armed without arming other zones like motion detectors. Stay arming can also be activated using Auto-Arming (see Auto-Arming on page 16) or One-Touch Arming (see One-Touch Arming on page 16).

How do I Stay arm?

1. Close all zones in the desired partition (except Stay zones).
2. Press the **[STAY]** key.
3. Enter your **[USER CODE]**.
4. If you have access to both partitions (see Partitioning on page 22): press the key corresponding to the desired partition, **[1]** or **[2]**. For both partitions, press the other key after the confirmation beep.

Bypassing a Zone

Bypassing a zone allows you to ignore (deactivate) specified zones the next time the system is armed. For example, you may wish to bypass certain zones when workers are renovating part of your home. Once the system is disarmed, the bypass entries are erased. When zones are bypassed, the **[BYP]** key will illuminate. Zone bypassing can also be activated by using One-Touch Bypass Programming (see page 16). If One-Touch Bypass Programming is enabled, press the **[BYP]** key for three seconds to enter bypass programming. To remove the Bypass feature from a zone, in step 3 enter the zone number again or press **[CLEAR]** to erase all current entries. Press **[CLEAR]** + **[ENTER]** to delete bypassed zones.

How do I bypass zones?

1. Close all zones in the desired partition (except Stay zones).
2. Press the **[BYP]** key. The **[BYP]** key will flash. Press **[ENTER]** to bypass all open zones or go to step 3.
3. Illuminate the number(s) corresponding to the zone(s) you want to bypass by entering the zone number. Solid on = Zone open, Flash = Zone bypass, Off = Zone closed, not bypassed.
4. Press the **[ENTER]** key to save and exit. Press **[CLEAR]** twice to exit without saving.

Bypass Recall Feature

After disarming the system, bypass entries are erased. The Bypass Recall feature reinstates the previous bypass entries saved in memory. This eliminates the need to manually re-program the bypass entries every time you arm your system.

How do I recall bypass entries?

1. Press the **[BYP]** key.
2. Enter your **[USER CODE]**.
3. Press the **[BYP]** key.
4. Press the **[ENTER]** key.

One-Touch Arming

One-Touch arming allows you to arm the system without using a user code. This feature must be enabled by your installer. If One-Touch Arming is programmed, you can increase the security level of your system (from Disarm → Stay Arm → Sleep Arm → Full Arm) without a code. See Figure 1 below.

One-Touch Regular Arming

Press and hold the **[ARM]** key to arm all zones in the partition. If partitioned, keys **[1]** & **[2]** will flash. You can use this feature to allow specific individuals like service personnel (e.g. cleaners) to arm without giving them access to any other alarm system operations. See Regular Arming on page 15.

One-Touch Stay Arming

Press and hold the **[STAY]** key to arm the perimeter (no Stay zones). See Stay Arming on page 15.

One-Touch Sleep Arming

Press and hold the **[SLEEP]** key to arm all zones not defined as Sleep zones. See Sleep Arming on page 15.


One-Touch Bypass Programming

Press and hold the **[BYP]** key to access Bypass programming mode. See Bypassing a Zone on page 15.

Fast Exit

When the system is already Stay or Sleep armed: this feature will allow you to exit already armed premises and keep the system armed. Press and hold the **[OFF]** key for to start the exit delay. After the exit delay has elapsed, the system will switch to its previous arming mode.

Figure 1: Arming / Disarming

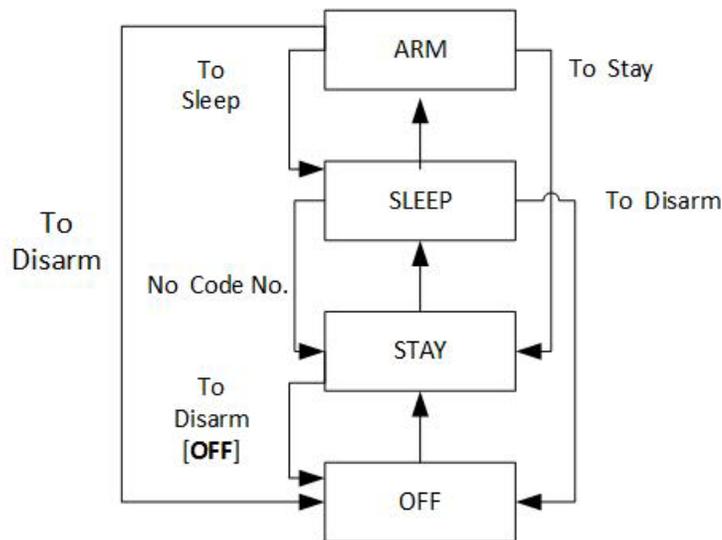

Auto-Arming

Timed Auto Arming

The alarm system can automatically arm itself at a specified time every day. As with Regular arming (see Regular Arming on page 15), the system will bypass any open zones.

How do I program the Auto-Arm Timer?

1. Press the **[⏻]** key.
2. Enter **[MASTER CODE]**.
3. Press the **[BYP]** key. The **[BYP]** key will flash.
4. Press key **[1]** to set partition 1, or press key **[2]** to set partition 2.
5. Enter the desired time for auto arm (24 hour clock, e.g. 18:30).
6. Press key **[1]** to regular arm, key **[2]** to sleep arm, or key **[3]** to stay arm the partition.

How do I disable the Auto-Arm Timer?

1. Press the [⏻] key.
2. Enter [MASTER CODE].
3. Press the [BYP] key. The [BYP] key will flash.
4. Press key [1] to set partition 1, or press key [2] to set partition 2.
5. Press and hold [SLEEP] to temporarily disable the Auto-Arm Timer.

No Movement Auto Arming

The alarm system can be programmed to arm the system and/or send a report to your monitoring station if no zone activity occurs for a pre-programmed amount of time. This is a particularly useful feature when supervising an individual with chronic health problems or for a person who lives alone. The system will bypass any open zones.

Alarms

Alarm Display

If an alarm has occurred on a zone, the respective zone key will flash, the **[MEM]** key will light up, and the zones will be stored in memory. These respective keys will continue to flash until disarming even if the zones are restored. To exit this mode and switch to live display mode before disarming, press the **[CLEAR]** key. When the system is disarmed, the zone keys will turn off, while the **[MEM]** key remains lit. Press the **[MEM]** key to illuminate the key corresponding to the zones that were in alarm. The alarm memory will be erased when the next alarm occurs and after a valid code is entered or upon full-arming the system.

Disarming & Deactivating an Alarm

To disarm an armed system or an alarm, press **[OFF]** and enter your **[USER CODE]**. An entry point, like the front door, will be programmed with one of two Entry Delay Timers. When an entry point is opened, the keypad will beep until you disarm the system. Your alarm system will not generate an alarm until this timer elapses. Any user can disarm a partition they have been assigned to, except users assigned with the Arm Only Option or PGM Only Option.

How do I disarm the system?

- Press the **[⏻]** key.

Panic Alarms

In case of an emergency, the system can provide three panic alarms that can immediately generate an alarm after simultaneously pressing and holding two specific keys for three seconds. Based on your needs, these panic alarms can generate audible alarms (sirens or bells) or silent alarms and can communicate specific messages to your monitoring station. For instance, pressing **[1]** and **[3]** can mean "call the police" or anything you require. This feature must be set by your installer.

Press and hold keys **[1]** and **[3]** for Panic type 1 (e.g. police).

Press and hold keys **[4]** and **[6]** for Panic type 2 (e.g. medical).

Press and hold keys **[7]** and **[9]** for Panic type 3 (e.g. fire).

Fire Alarms

Upon a fire alarm, the bell/siren will emit three "squawks" at 2 second intervals until silenced or reset by entering a valid user code. If the zone is a Delayed Fire Zone, there is a delay before the system contacts the monitoring station. This will prevent unnecessary reporting of false alarms. If there is no fire condition, contact your monitoring station immediately to avoid an unnecessary response.

What do I do if a delayed fire zone was set off accidentally?

1. Press the **[CLEAR]** key within 30 seconds of the alarm.
2. Try to correct the problem.
3. If the problem persists, after 90 seconds, the alarm will sound again. Press the **[CLEAR]** key again.

Minimizing Fire Hazards

The three most common causes of fires:

Cooking is the leading cause of home fires in the U.S. It's also the leading cause of fire injuries. Cooking fires often result from unattended cooking and human error, rather than mechanical failure of stoves or ovens. Careless smoking is the leading cause of fire deaths. Smoke detectors and smolder-resistant bedding and upholstered furniture are significant fire deterrents. Heating is the second leading cause of residential fires. However, heating fires are a larger problem in single family homes than in apartments since the heating systems in single family homes are often not professionally maintained.

Fire Safety Tips

In the event of a fire, escape first, then call for help. Develop a home fire escape plan and designate a meeting place outside. Make sure everyone in the family knows two ways to escape from every room. Practice feeling your way out with your eyes closed. Never stand up in a fire, always crawl low under the smoke and try to keep your mouth covered. Never return to a burning building for any reason; it may cost you your life. Finally, having at least one working smoke alarm dramatically increases your chances of surviving a fire. And remember to practice a home escape plan frequently with your family.

Providing a Fire Warning System

Household fires are especially dangerous at night. Fires produce smoke and deadly gases that can overcome occupants while they sleep. To warn against fire, smoke detectors should be installed outside each separate sleeping area in the immediate vicinity of the bedrooms and on each additional story of the family living unit, including basements.

Testing & Maintenance

With the system disarmed and the "OFF" light illuminated, activate motion detectors by walking in the protected area. Open and close protected doors and verify that the corresponding lights illuminate. Your installer can advise you of the best way to test your particular system.

Do not use open flame or burning materials to test your fire detection devices. Contact your installer for safe methods of testing your system.

Under normal use, your system requires virtually no maintenance other than regular testing. It is recommended that the standby battery be changed every three years. Speak to your installer about the necessary tests and how often they should be performed.

Communicating Through the Internet (IP150+)

You can communicate with your security system by using a system accessory called the IP150+ Internet Module (sold separately). The IP150+ controls and monitors your security system remotely and is configured by your system installer.

With the use of the Insite Gold app, it allows for email notifications of important system events such as alarms, arm/ disarm events, and troubles. For example, receive an email at work when your kids get back from school, or if an alarm occurs in your system at home. You can also view live status of your system and arm/ disarm your system. For example, you have just left your office for the weekend but are not sure you remembered to arm it. Simply check the status of your system and arm it remotely. Consult your installer for more information.

Communicating Using Text Messages (PCS Series)

You can communicate with your security system using text messages (SMS) by using system accessories called PCS250/PCS250G/PCS265LTE modules (sold separately). The PCS module allows you to receive text messages of system events, such as alarms or troubles, on your cellular phone. It also allows you to send text messages to arm or disarm your system from anywhere in the world. Consult your installer for more information.

Receiving Text Messages

To receive text messages from your system you need to:

- Program the telephone numbers you wish to receive text notifications.
- Select which event groups (alarm, arm/disarm, trouble and trouble restore) will generate text messages.
- Select which partition the phone number is assigned to.

How do I set up the PCS module to send me text messages?


1. Press the **[⏻]** key.
2. Enter **[MASTER CODE]**.
3. Press **[ARM]**.
4. Using the **[▲]** / **[SLEEP]** and **[▼]** / **[STAY]** keys or by entering [01] to [08], select one of the eight telephone numbers you wish to program and press **[ENTER]**.
5. Enter the telephone number and press **[ENTER]**.
6. Select the which group of events will send a text message to the phone number set in step 5 (see Event Call options below).
7. Press **[ENTER]**.
8. Select which partition(s) is assigned to this telephone number by pressing **[1]**, **[2]**, or both.
9. To save, press **[ENTER]**.

Event Call Options


Option	Events that send a text message
[1]	Any alarm (e.g. fire, burglary etc.)
[2]	Arming and disarming
[3]	Any trouble (e.g. battery loss)
[4]	Any trouble restore (e.g. battery restored)

Sample Text Messages

Alarm message

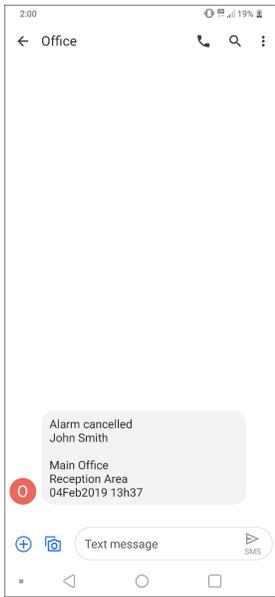


Arming / disarming message

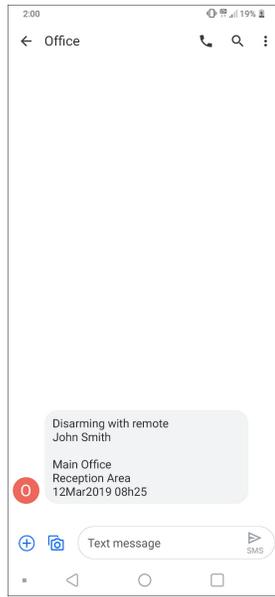

Trouble message



Trouble restore message

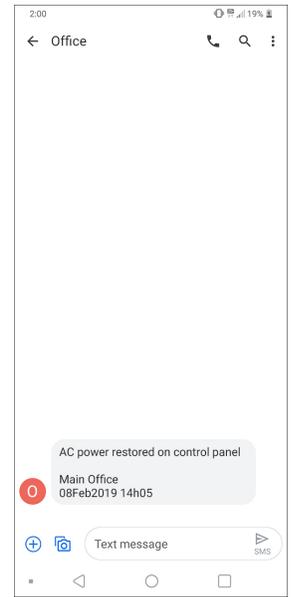

Sending Text Messages to Arm / Disarm

You can arm or disarm the system by sending a text message (SMS) from any cell phone. The message must be sent to the PCS module's phone number, as determined by the cell phone provider (consult your installer for more information). Text message commands have a specific format which follows this pattern:

C[USER CODE].[ACTION].A[PARTITIONS]

NOTE: SMS commands must be entered in capital letters.

Example: C1234.ARM.A1
C1234.OFF.A1

In the example above, user code 1234 will arm or disarm partition 1.

User Code

The first part of the text message is the user code (same code used on the alarm system). It must be prefaced with the letter C and followed by a period.

Example:**C1234**.

Action

It is possible to arm or disarm the system. The command must be entered after the user code and followed by a period. To arm the system, enter the ARM command. To disarm the system, enter the OFF command.

Example:C1234.**ARM**.

Partition

It is possible to arm or disarm specific partitions. The partitions must be prefaced by the letter A, and separated by commas for individual partitions. It is also possible to affect a series of partitions by writing TO between the start and end partitions of that series. The list of partitions must be followed by a period.

Examples:C1234.ARM.**A1**.

C1234.ARM.**A1TO2**.

IP Information

It is possible to receive the IP address of the PCS module via text message. A valid user code must be entered to receive the IP address. The IP address can be used to configure remote software. Consult your installer for more information.

Example:C1234.**IP**

PCS Module Phone Number

Enter the phone number of your PCS module here (consult your cell phone provider)

Advanced System Features

Programmable Outputs (PGMs)

Your system may include one or more PGMs. When a specific event or condition occurs in the system, The PGM can be used to reset smoke detectors, activate light switches in your home or office, open/close garage doors and much more. If programmed by your installer, you can press and hold keys [1] & [2], [2] & [3], [4] & [5], [5] & [6], [7] & [8], or [8] & [9] for each respective PGM. Press and hold [CLEAR] + [ENTER] or [⏻] for three seconds to perform a smoke reset. These features must be set by your installer.

Partitioning

Your system is equipped with a partitioning feature that can divide your alarm system into two distinct areas identified as Partition 1 and Partition 2. When partitioned, each zone, each user code and many of your system's features can be assigned to either Partition 1, Partition 2, or both partitions.

NOTE: If the system is not partitioned, all zones, user codes, and features will be recognized as belonging to Partition 1. Partitioning is not available when using a K636 keypad.

Quick Function Keys

Upon request of your installer or monitoring station you may have to perform one of the following. To enter Menu Programming, press [⏻] and then enter your [MASTER CODE]. In Menu programming, press:

Test Report

[MEM] + [2]

If your system is monitored by a monitoring station, this feature will send a test report code to the monitoring station.

Call PC

[MEM] + [1]

Will initiate a call to the monitoring station that is using the BabyWare software.

Answer PC

[MEM] + [1]

Will force your security system to answer a call made by your monitoring station that is using the BabyWare software.

Cancel Communication

[MEM] + [9]

Cancels all communication with the BabyWare software if it has been initiated.

System Notes

Zone Description

Is this system partitioned? Yes No

Partition 1 = _____

Partition 2 = _____

Special Keys and Features

- [ARM] One-Touch Regular arming is activated
- [STAY] One-Touch Stay arming is activated
- [SLEEP] One-Touch Sleep arming is activated
- [BYP] One-Touch Bypass Programming is activated

Panic Alarms

[1] & [3] Police or _____ Audible Off Report only

[4] & [6] Aux. or _____ Audible Off Report only

[7] & [9] Fire or _____ Audible Off Report only

PGMs

PGM 1	_____	PGM 2	_____	PGM 3	_____	PGM 4	_____
PGM 5	_____	PGM 6	_____	PGM 7	_____	PGM 8	_____
PGM 9	_____	PGM 10	_____	PGM 11	_____	PGM 12	_____
PGM 13	_____	PGM 14	_____	PGM 15	_____	PGM 16	_____

PGM Utility Keys

[1] & [2]: _____

[2] & [3]: _____

[4] & [5]: _____

[5] & [6]: _____

[7] & [8]: _____

[8] & [9]: _____

[CLEAR] + [ENTER] = Smoke Reset

System Timers

Enter and exit your premises through the designated doors.

Exit Delay 1 (Partition 1): _____ sec. = time to exit premises

Exit Delay 2 (Partition 2): _____ sec. = time to exit premises

Entry Delay 1 = _____ sec. = time to disarm before alarm; enter through zone # _____

Entry Delay 2 = _____ sec. = time to disarm before alarm; enter through zone # _____

Alarm will activate siren or bell for _____ min.

PCS Module Phone Number

Enter the phone number of your PCS module here (consult your cell phone provider)

Other Information

Installed by: _____

Date: _____

Serviced by: _____

Telephone: _____

Monitored by: _____

Telephone: _____

Your account number: _____

Alarm transformer location: _____

On circuit #: _____

Location of Telephone Connections: _____

Quick Programming

Master Quick Menus

Step	Action	Details
1	[] + [MASTER CODE]	The [] key will flash. LED/key on = programmed user. [PARTITION MASTER CODE] may also be used.
2	[user number]	2 digits: 01 to 32.
3	[code]	Enter a 4 or 6-digit code.
4	[confirm code]	Re-enter 4 or 6-digit code.
5	assign remote	Press any remote button twice. If you do not wish to assign a remote, press [ENTER]. To program another user, go to step 2.
6		To exit, press [CLEAR]. For partitioned systems, continue to step 7.
7	[1] and/or [2] + [ENTER]	Assign the user to one or both partitions and press [ENTER]. By default, users are assigned to partition 1. Goes to next available user.

Delays

Step	Action	Details
1	[] + [MASTER CODE]	The [] key will flash.
2	[tbl]	
3	[1] = Entry Delay 1 (sec.) [2] = Entry Delay 2 (sec.) [3] = Exit Delay (sec.) [4] = Bell Cut-Off (min.)	Default = 045 sec. Default = 045 sec. Default = 060 sec. Default = 004 min.
4	[000] to [255]	___/___/___ Enter a value between 000 and 255

Time and Date

Step	Action	Details
1	[] + [MASTER CODE]	The [] key will flash.
2	[tbl] + [5]	
3	[hh:mm]*	Enter time using the 24 hour format (e.g. 18:00 for 6:00 pm). *For SP4000 / SP65 systems, time must be entered in 24hr format. Omit step 4 (time format).
4	[1] = 24 Hour [2] = AM; [3] = PM	Select time format.
5	[yyyy/mm/dd]	Enter date.

Communicate with BabyWare / PCS

Step	Action	Details
1	[] + [MASTER CODE]	The [] key will flash.
2	[mem]	
3	[1] = Start communication [2] = Test Report [9] = Cancel communication	

System Options

Step	Action	Details
1	[] + [MASTER CODE]	The [] key will flash.
2	[byp]	
3	[4] = [5] = [6] =	Toggle to have the siren squawk on arm/disarm with keypad. Toggle to have the siren squawk on arm/disarm with remote. Toggle to have no exit delay when arming with remote.

Assigning a REM3 Hand-Held 2-Way Remote Keypad to the Panel

Step	Action	Details
1	[⏻] + [MASTER CODE]	The [⏻] key will flash. LED/Key on = programmed user
2	[user number]	[PARTITION MASTER CODE] may also be used. 2 digits: 01 to 32
3	[CODE]	Enter 4- or 6-digit code.
4	[CONFIRM CODE]	Re-enter 4- or 6-digit code.
5	[learn remote]	Press and hold the Information key (i) on the designated remote.
6	[1] and/or [2] + [enter]	Assign the user to one or both partitions and press [ENTER]. By default users are assigned to partition 1. Goes to the next available user.

Communicator

Step	Action	Details
1	[⏻] + [MASTER CODE]	The [⏻] key will flash.
2	[mem]	
3	[3] = Personal Phone #1 [4] = Personal Phone #2 [5] = Personal Phone #3 [6] = Personal Phone #4 [7] = Personal Phone #5	
4	[PHONE #] + [ENTER]	Enter phone # (up to 32 digits) and press [ENTER]. Goes to next phone#

Test Report

Step	Action	Details
1	[⏻] + [MASTER CODE]	The [⏻] key will flash.
2	[mem]	Press the [MEM] key
3	[2]	Send a test report to the monitoring station.

Auto Arm

Step	Action	Details
1	[⏻] + [MASTER CODE]	The [⏻] key will flash.
2	[byp]	
3	[1] = Auto arm (partition 1) [2] = Auto arm (partition 2)	
4	[hh:mm]	Enter time using the 24 hour format (e.g. 18:00 for 6:00 pm).
5	[1] = Regular arm [2] = Sleep arm [3] = Stay arm	

Erase Lost Remote Control

Step	Action	Details
1	[⏻] + [MASTER CODE]	
2	[byp]	
3	[3]	
4	[all remotes] + [enter]	Press a button on all remotes. Press [ENTER]
5	Press and hold [sleep] (3sec)	Press and hold [SLEEP] to erase all lost remotes.

Index

A

Access Code Length.....	6
Adding a User	6
Advanced StayD	14

Advanced System Features	21	One-Touch Force Arming	16
Alarm Display	18	One-Touch Stay Arming	16
Arming & Disarming	15	P	
Arming & Disarming with StayD	14	Panic Alarms	18, 22
Auditory Feedback	9	Partitioning	21
Auto Arm	24	PCS Series	19
Auto-Arming	16	PGMs	21
B		Programmable Outputs	21
Backlight	9	Q	
Bypass Recall	16	Quick Function Keys	21
Bypass Recall Feature	16	Quick Programming	23
Bypassing a Zone	15	R	
C		Re-arm Delay	14
Chime Zones	7	Receiving Text Messages	19
Communicate	23	Regular	15
Communicating Through the Internet (IP150+)	19	Regular Arming	15
Communicating Using Text Messages (PCS Series)	19	REM3	24
Communicator	24	S	
D		Sample Text Messages	19
Date	7	Sending Text Messages to Arm/Disarm	20
Deactivating an Alarm	18	Settings	4
Delays	23	Sleep Arming	15
Deleting a User	6	SMS Event Call Options	19
Disarming	15, 18	Special Keys	22
Display	18	Stay Arming	15
Display Mode	17	StayD	14
Duress Code	6	System Master Code	6
E		System Options	23
Erase Lost Remote Control	24	System Timers	22
Event Call Options	19	T	
F		Test Report	24
Fire Alarms	18	Testing	18
Fire Hazards	18	Text	19
Fire Safety	18	Time & Date	7
Function	21	Time and Date	23
I		Timed Auto Arming	16
Icon Display	11	Trouble	8
Internet	19	Trouble Display	8
IP150+	19	U	
K		User	23
K10LEDV/H	10	User Codes	6
K32+	12	User Settings	4
K636	10	Utility Keys	22
Keypad	10	V	
Keypad Backlight	9	Visual Feedback	9
Keypad Feedback	9	W	
Keypad Muting	9	Window Mode	14
Keypads	9	Z	
Keys	21	Zone	22
L		Zone Settings	5
Live View Mode	14	M	
M		Maintenance	18
Maintenance	18	Master Codes	6
Master Codes	6	Master Quick Menus	23
Master Quick Menus	23	Messages	19
Messages	19	N	
N		No Movement Auto Arming	17
No Movement Auto Arming	17	O	
O		One-Touch Arming	16
One-Touch Arming	16	One-Touch Bypass Programming	16
One-Touch Bypass Programming	16		

The whole Paradox team wishes you a successful and easy installation. We hope this product performs to your complete satisfaction.
Should you have any questions or comments, please contact us at support@paradox.com.
Additional information can be found on our website www.paradox.com/support

P ▲ R ▲ D O X™

Printed in Canada - 06/2022

PARADOX.COM

SP+-EU00