


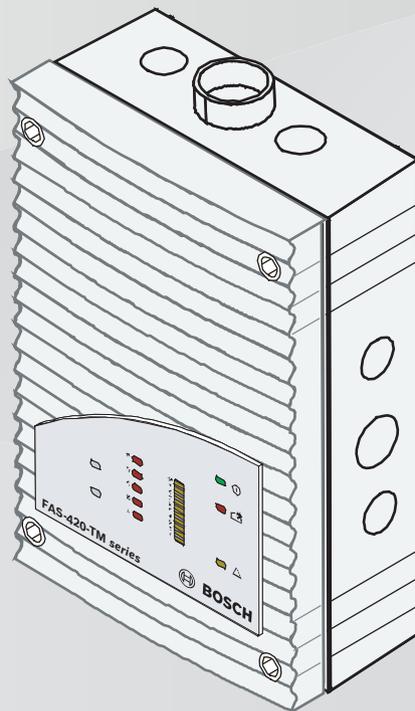

BOSCH

Aspiration smoke detector LSN improved

FAS-420-TM series



en

Operation guide

Table of contents

1	Safety	6
2	General	6
2.1	Introduction	6
2.2	Warranty	6
2.3	Copyright	6
2.4	Disposal	7
3	Technical specifications	7
3.1	Product description	7
3.2	Areas of Application	8
3.3	System overview	11
3.4	Functions	12
3.5	FAS-420-TM Aspiration smoke detector series and accessories	16
3.5.1	Overview	16
3.5.2	Connections	17
3.5.3	FAS-420-TM LEDs	18
3.5.4	FAS-420-TM-R LEDs	18
3.5.5	FAS-420-TM-RVB LEDs	18
3.5.6	FAS-ASD-DIAG Diagnostic Software	19
3.5.7	Remote Indicators	19
3.6	Pipe system components	20
3.6.1	Overview	20
3.6.2	Air Sampling Openings	21
3.6.3	Ceiling lead-through	22
3.6.4	Air-return pipe for pressure areas and atmospheric loads	23
3.6.5	Air filters for dusty areas	23
3.6.6	Water Separator for Humid Areas	24
3.7	Scope of Delivery: Smoke Aspiration System	25
3.8	Technical specifications	27
3.8.1	FAS-420-TM series Aspiration smoke detectors	27
3.8.2	Pipe system	29
3.8.3	Smoke Aspiration System Components	29
4	Planning	30
4.1	Regulations	30
4.2	Principles of pipe planning	31
4.3	Airflow Monitoring	33
4.4	Defining the Response Sensitivity	34
4.5	Planning Limits	35
4.6	Standard pipe planning	36
4.6.1	Determining the Necessary Accessories	36
4.6.2	Pipe Planning with Pipe Accessories	36
4.6.3	Planning with air filter	37
4.6.4	Opening Diameter	38
4.7	Planning with single-hole monitoring	40
4.7.1	I-pipe system	40
4.7.2	U-pipe system	41
4.7.3	M-pipe system	43
4.7.4	Double U-pipe system	44
4.8	Simplified pipe planning	45

4.8.1	I-Pipe System - Simplified Planning	45
4.8.2	U-Pipe System - Simplified Planning	46
4.8.3	M-pipe System - Simplified Planning	47
4.8.4	Double U-Pipe System - Simplified Planning	47
4.8.5	Project planning with branch pipes	48
4.9	Planning for forced airflow	50
4.10	Planning with air sampling hose	53
4.11	Planning with air return	54
4.12	Power Supply	55
5	Installing the Aspiration smoke detector	56
5.1	General	56
5.2	Setting the detector address	57
5.3	Installing the unit	57
5.4	Connection to the fire panel	62
5.4.1	Electrical Connection	62
5.4.2	LSN Configuration	63
5.4.3	Parameter Settings via Programming Software	63
5.4.4	Settings via the FAS-ASD-DIAG Diagnostic Software	64
5.5	Data logging	65
6	Installation of the pipe system	65
6.1	Length Change of the Pipe System	67
6.2	Air sampling openings	67
6.3	Ceiling Lead-through	69
6.4	Monitoring with Forced Airflow	69
6.4.1	Detection at Intake and Exhaust Openings	69
6.4.2	Detection in the Bypass	70
6.5	Air filter	70
6.5.1	Installing the Air Filter Box	70
6.6	Air-return pipe	71
6.7	Three-way tap	71
6.8	Water separator	72
6.9	Test Adapter	73
7	Commissioning	74
7.1	Preparation	74
7.2	Detection Module Commissioning	74
7.3	Calibrating the Airflow Sensor	75
7.3.1	Air-Pressure-Independent Calibration	75
7.3.2	Air-Pressure-Dependent Calibration	75
7.4	Checking the Detection Module and Alarm Transfer	76
7.5	Checking Malfunction Transmission	76
7.6	Checking Airflow Monitoring	77
7.7	Functional Test of Airflow Sensors	77
7.7.1	Preparations for the Functional Test	78
7.7.2	Conducting the Functional Test	79
7.8	Fire Source Identification Commissioning	80
8	Maintenance	81
8.1	Visual check	81
8.2	Detection Module and Alarm Transfer	81
8.3	Pipe System	81

8.4	Replacing the Detection Module	82
8.5	Replacing the Air Filter in the Housing Base	83
8.6	Filter Change on the Filterbox	84
8.7	Blowing-out Process for the Pipe System	85
8.8	Checking the Airflow Sensor Calibration	85
8.9	Testing the Fire Source Identification	87
8.10	Airflow monitoring	87
8.11	Malfunction Transmission	87
8.12	Maintenance Intervals	87
9	Appendix	88
9.1	DIP Switch Settings for Detector Addresses	89
9.2	Planning without air filter	90
9.2.1	Without any other pipe accessories	91
9.2.2	With water separator	91
9.3	Planning with Air Filter	91
9.3.1	Without Any Other Pipe Accessories	92
9.3.2	With water separator	92
9.4	Test Log for Aspirating Smoke Detectors in the FAS-420-TM Series	92
	Index	96

1 Safety

The following symbols identify points in this operation guide that require particular attention in order to guarantee smooth operation and prevent damage.

**Notice!**

Operational malfunction can be prevented and operational improvements can be achieved by observing these instructions.

**Caution!**

This symbol warns against actions and behavior which, if disregarded, could cause property damage.

**Warning!**

This symbol warns against actions and behavior which, if disregarded, could cause personal injury.

2 General

2.1 Introduction

This operation guide describes the smoke aspiration systems featuring FAS-420-TM series Aspirating Smoke Detectors and the associated aspiration pipe system.

The FAS-420-TM designation in this operation guide refers to all FAS-420-TM series versions. Specific references are made to differences between the individual versions.

2.2 Warranty

The operation guide is subject to technical modification without prior notice and makes no claim to completeness. Our "delivery and installation conditions" apply as a matter of principle. Warranty and liability claims in case of personal injury and property damage cannot be asserted if they are based on one or more of the following causes:

- Insufficient attention to the instructions with respect to planning, installation of the aspirating smoke detector, installation of the pipe system, commissioning and maintenance
- Use of the smoke aspiration system contrary to the regulations
- Insufficient monitoring of wearing parts
- Faulty repairs
- Arbitrary constructional changes to the smoke aspiration system
- Acts of God.

Bosch Sicherheitssysteme GmbH, hereinafter referred to as Bosch, assumes no liability for damage or malfunction arising through failure to comply with this operation guide.

**Caution!**


The equipment may only be installed by authorized and qualified personnel!

2.3 Copyright

The copyright to this operation guide remains with Bosch.

This operation guide is intended exclusively for installation engineers and their employees. Reprinting this operation guide or extracts thereof is permitted for internal purposes only.

2.4 Disposal

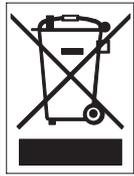

Unusable electrical and electronic devices or modules must not be disposed of with normal household refuse. They must be disposed of in compliance with the applicable regulations and directives (e.g. WEEE in Europe).

3 Technical specifications

3.1 Product description

Aspirating Smoke Detectors from the FAS-420-TM series are active fire detection devices that are connected directly to the Local SecurityNetwork (LSN) improved version for early fire detection. They are used for space and equipment protection as well as for monitoring air conditioning units or ducts (provided that the FAS-420-TM is installed outside of these units or ducts). You can also pinpoint the exact location of the fire using the innovative fire source identification operation.

FAS-420-TM Aspiration smoke detector series were developed specifically for connection to Bosch fire panels with LSN improved version technology and therefore offer the following extended features:

- Flexible network structures, including T-tapping with no additional elements
- Up to 254 LSN-improved elements per loop or stub line
- Unshielded cable can be used.

The FAS-420-TM series also offers all the established benefits of LSN technology. The operating data and fault messages can be read off the fire panel's operating and display unit.

Variants

All FAS-420-TM Aspiration smoke detector series have LEDs for operating mode, malfunction and main alarm, and also offer an infrared diagnostics port. In addition to this, the FAS-420-TM-R and FAS-420-TM-RVB variants offer an optical fire location display for up to five zones. The FAS-420-TM-RVB also includes a internal alarm display and a 10-segment smoke level display.

Fire source identification

Innovative fire source identification technology allows the exact location of the fire to be pinpointed by monitoring up to five distinct neighboring zones. To enable the emergency response teams to intervene as quickly as possible, the location of the fire can also be identified using the FNS-420-R LSN Strobes, for example, which are assigned to the various monitoring ranges.

Sensitivity

FAS-420-TM series Aspirating Smoke Detectors have a response sensitivity of 0.5%/m to 2%/m light obscuration. The sensitivity levels can be selected according to the area of application using the fire panel's programming software (see *Parameter Settings via Programming Software, page 63*). The smoke level display on the FAS-420-TM-RVB model allows a response sensitivity of 0.05%/m to 0.2%/m light obscuration.

With the new high-power light source technology, a broad detection spectrum including all standardized fires is achieved (see *Defining the Response Sensitivity, page 34*).

LOGIC×SENS

The intelligent signal processing LOGIC·SENS distinguishes between deception variables and fire events in order to prevent false alarms.

Reliable airflow monitoring

Analogous to point-type smoke detectors, which are monitored electronically for wire breaks and short-circuits, highly sensitive and dependable airflow monitoring is required for smoke aspiration systems. The airflow sensors used in the FAS-420-TM series reliably detect malfunctions such as pipe breakage or obstructions in the air sampling openings.

Airflow monitoring is temperature-compensated and can be set depending on the air pressure.

Plug-and-play

The plug-and-play function makes the installation and commissioning of the aspirating smoke detectors simple. The housing base is preinstalled on site. By preinstalling the detection module for standard applications, the FAS-420-TM series Aspirating Smoke Detectors are ready for operation as soon as they are inserted into the housing base.

Patented air sampling openings

The air sampling openings of the pipe system require clearly defined bore diameters that depend on the planning and design. These precise air sampling openings are created using patented aspiration reducing film sheets, marking tape, and clips, which not only permit easy installation, but also prevent "whistling" noises. Another advantage is the quick and easy detection and checking of the air sampling opening diameters.

Point-type detector projection

The system's aspiration points can be equated with point-type smoke detectors. The monitoring areas can therefore be planned in accordance with the applicable national regulations.

Diagnostics

A system with FAS-ASD-DIAG Diagnostic Software, which enables quick and convenient error containment, is available for maintenance and service. The current and stored (max. 72 hours) unit status is read out to the diagnostic appliance via the unit's infrared port. The data is transmitted from the diagnostic appliance to a laptop via a USB cable.

Selecting the fan voltage

The fan voltage can be increased for special planning from 9 V to 12 V via the fire panel's programming software. In addition, the fan voltage can be increased up to 13.5 V in intervals of 1 V via the FAS-ASD-DIAG Diagnostic Software. The increase in the fan voltage causes an increase in the air transport speed and therefore reduces detection time.

Extensive pipe accessories

The extensive range of accessories enables the FAS-420-TM aspirating smoke detectors to be used even in the most difficult conditions. Products from air filters and condensate separators to blowing-out systems increase the service life in extremely dusty, damp and cold environmental conditions.

3.2

Areas of Application

Thanks to their detection principle, FAS-420-TM aspirating smoke detectors represent an extremely versatile fire protection solution.

Principle

Air samples are taken from the monitoring range by a pipe system with defined aspiration borings and then fed to the detection module.


This is especially well-suited for areas in which point-type detectors cannot be used or can only be used under certain circumstances. These include:

- Areas that are difficult to access, in which point detectors are difficult to install and maintain
- Air-conditioned areas
- Areas that require the earliest detection possible
- Areas with a height greater than that allowed for point detectors
- Areas in which point detectors are not desired for aesthetic reasons
- Areas in which strong electromagnetic fields occur
- Areas that are exposed to high or low temperatures
- Areas with contaminated air that require filter elements
- Areas that must be protected against vandalism.

Space protection

The FAS-420-TM series is suitable for monitoring areas such as

- Those with double floors, false ceilings
- Tunnels, ducts, barely accessible hollow spaces
- Storage, high-rise warehouses, elevator shafts
- Museums, cultural institutions
- Hotel rooms, hospital rooms, offices, prison cells, train compartments
- Freezer storage

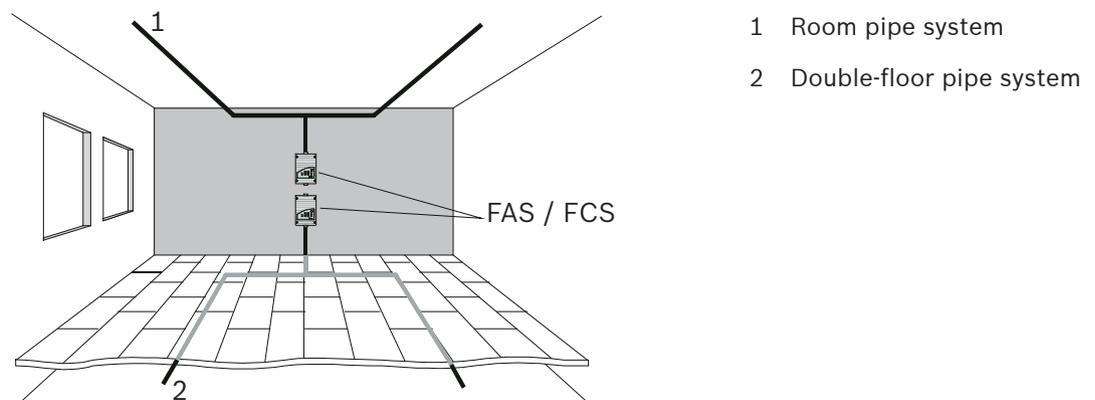


Principle of area monitoring with FAS-420-TM series Aspirating Smoke Detectors

Area monitoring with air-conditioning

Area monitoring occurs

- In rooms with air-conditioning for server rooms etc.
- In ventilation ducts
- In double floors, false ceilings
- In IT rooms, e-distributor rooms, transformer cells
- On air-conditioning units (see figure below) or
- In the bypass in air-conditioning ducts.

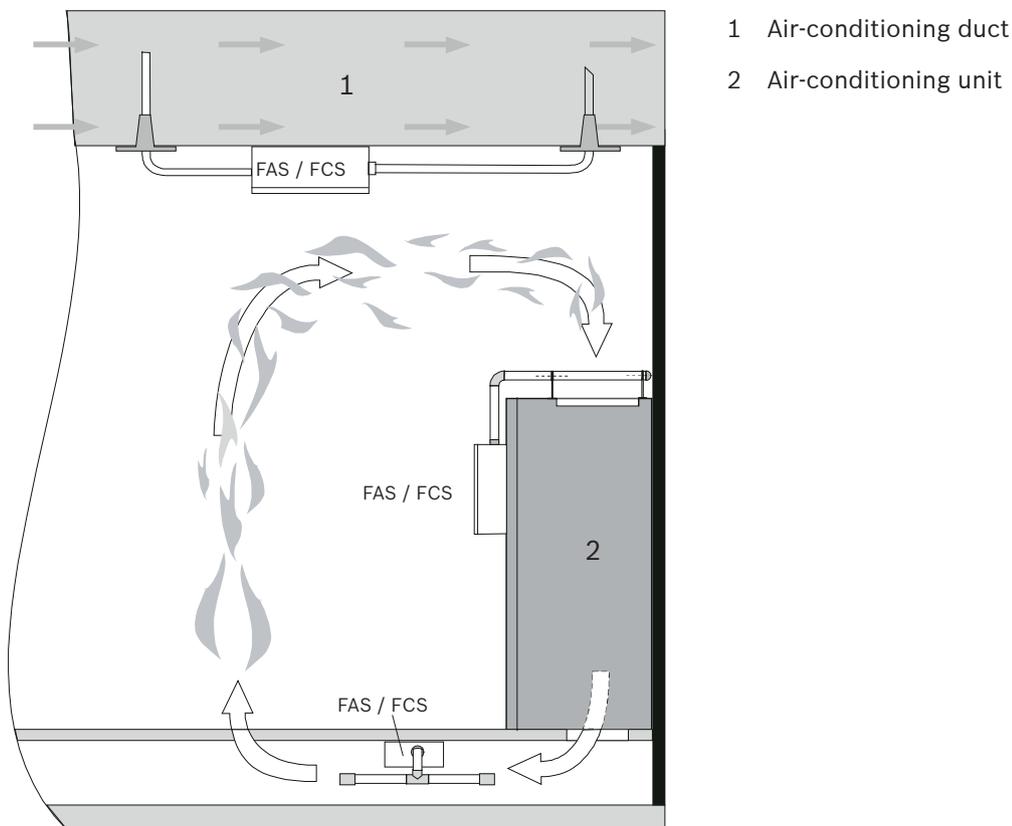

Monitoring options for an air-conditioning unit or an air-conditioning duct (depiction of principle)

The FAS-420-TM Aspirating Smoke Detector can be used for early fire detection in areas with special-purpose air conditioning.


Thanks to its high sensitivity, expensive goods and equipment can be monitored reliably. The aspirating smoke detectors from the FAS-420-TM series are therefore especially suitable for areas of application:

- Where early intervention is essential due to a high value concentration
- Where equipment must always be operational
- Where highly sensitive detection is necessary (e.g. in areas where, due to built-in filter elements, the air contains a low concentration of smoke particles)
- Where high air-exchange rates prevail.

Equipment protection

Equipment monitoring involves the direct monitoring of an object. These can be unventilated or force-cooled units or cabinets, e.g.

- Distributor cabinets, switching cabinets
- Telephone-switching equipment
- Measuring, control, and regulation equipment.

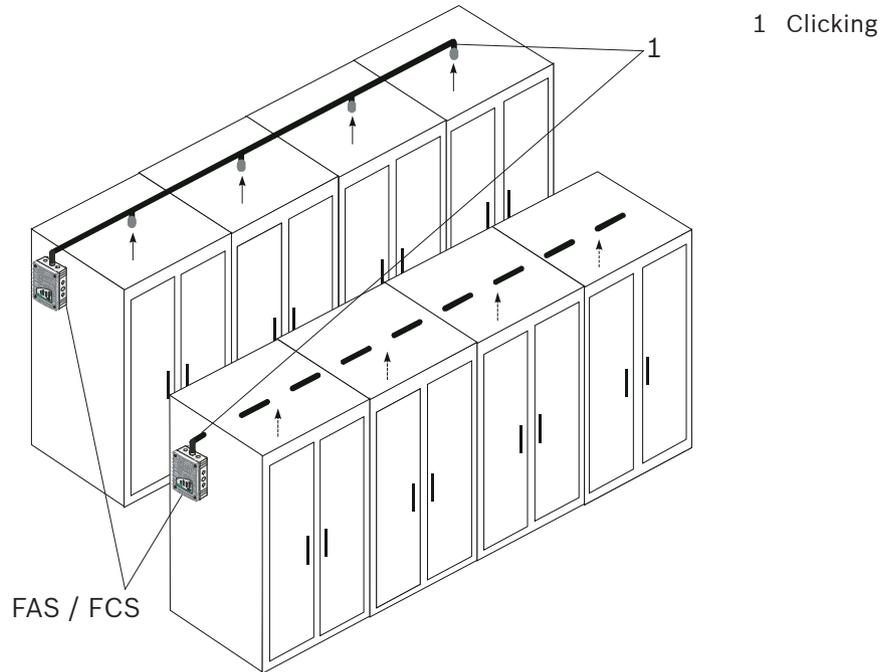


Principle of equipment monitoring with FAS-420-TM series Aspirating Smoke Detectors

3.3 System overview

The Smoke Aspiration Systems comprise a detection module, housing base and pipe system. The most important components of the Smoke Aspiration System are the sensitive detection module for detecting smoke aerosols and the aspiration unit with the built-in airflow sensor for transporting the air samples and monitoring the pipe system for breakage and obstructions. The pipe system comprises essentially pipe and fittings. The standard pipe system is made from PVC or ABS. The pipes used for equipment monitoring should be halogen-free.

Each air sampling opening in the pipe system represents a point detector in the planning.

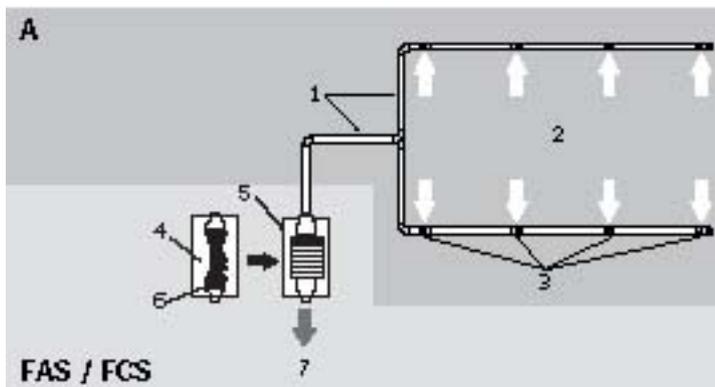

- A Pipe System
- FAS/FCS Aspiration Smoke detector
- 1 Smoke aspiration pipe
- 2 Air intake
- 3 Air sampling openings
- 4 Detection unit incl. airflow sensor
- 5 Housing Base
- 6 Aspiration unit
- 7 Air outlet

Example of the signal process of the airflow sensor in case of malfunctions

To guarantee reliable operation even under the most difficult conditions (clean rooms, recycling area), there are numerous accessories available, such as air filters and water separators (see *Pipe system components*, page 20).

3.4 Functions

Air samples are taken from the area to be monitored via the aspiration unit. They are fed via a pipe system with defined air sampling openings to the sensitive detection module.

Detection

Depending on the response sensitivity of the detection module in use and the alarm threshold programmed, the FAS-420-TM aspirating smoke detector triggers the alarm when the corresponding air obscuration threshold is reached. The alarm is displayed via the internal alarm or main alarm LED on the device and forwarded to a connected fire panel.

Various delay times can be set for the alarm thresholds, as well as for displaying and transferring malfunctions (see *Parameter Settings via Programming Software, page 63*). Alarm messages are saved and are reset after the cause has been eliminated.

LOGIC×SENS

The LOGIC-SENS intelligent signal processing compares the measured smoke level with known disturbance variables and decides whether something is an alarm or deception. LOGIC SENS can be activated or deactivated using the fire panel's programming software.

Fire source identification

Fire source identification is possible if an I pipe is planned for a maximum of five areas or devices. The procedure can be divided into four phases (*Fire source identification, page 12 to Fire source identification, page 12*).

– Phase 1

In its general operating state, the FAS-420-TM Aspirating Smoke Detector extracts air samples from the monitoring range and analyzes these for the presence of smoke particles.

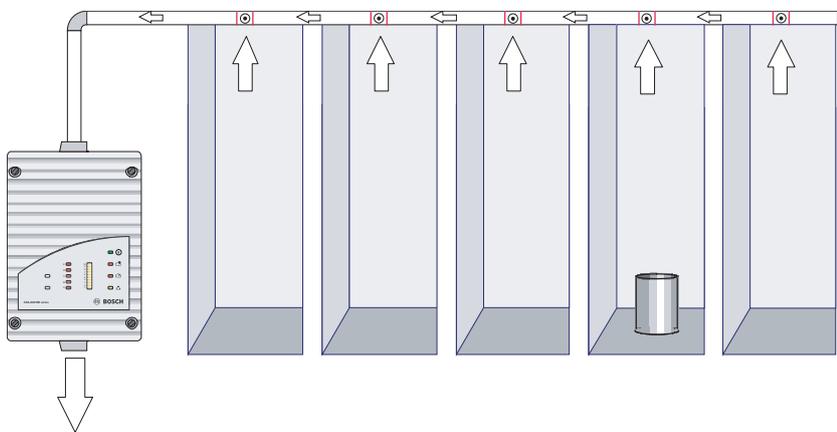


Figure 3.1: Phase 1: Normal operation

– Phase 2

As soon as the system has switched to alarm state as a result of a rise in the concentration of smoke particles typical of a fire, the alarm is signaled.

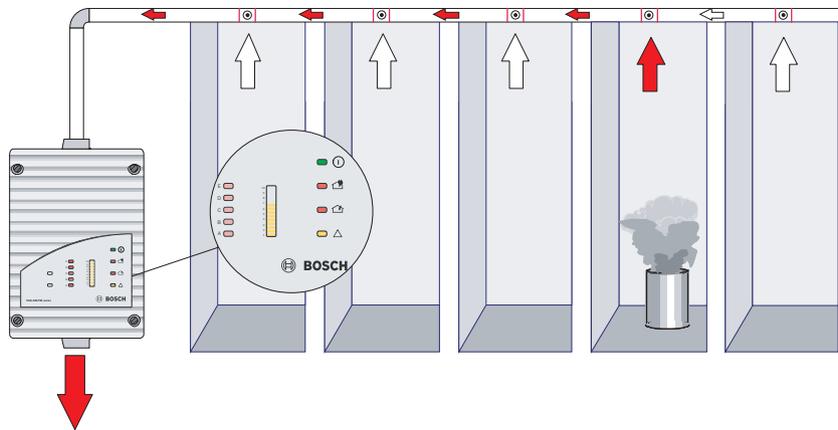


Figure 3.2: Phase 2: Early fire detection

– **Phase 3**

When the alarm is signaled, once the configurable internal alarm threshold is reached, the aspiration fan switches off and a second fan blows all smoke particles out of the pipe system in the opposite direction.

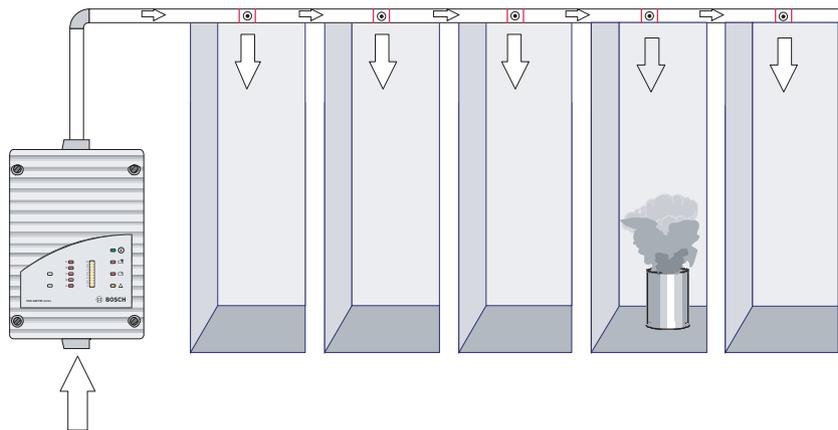


Figure 3.3: Phase 3: Blowing out

– **Phase 4**

Once the pipe system has been blown out, the direction of flow is reversed again and the time required for the smoke particles to penetrate into the detection module is measured. On the basis of this time, the location of the smoke source can be accurately traced to one of the monitored areas.

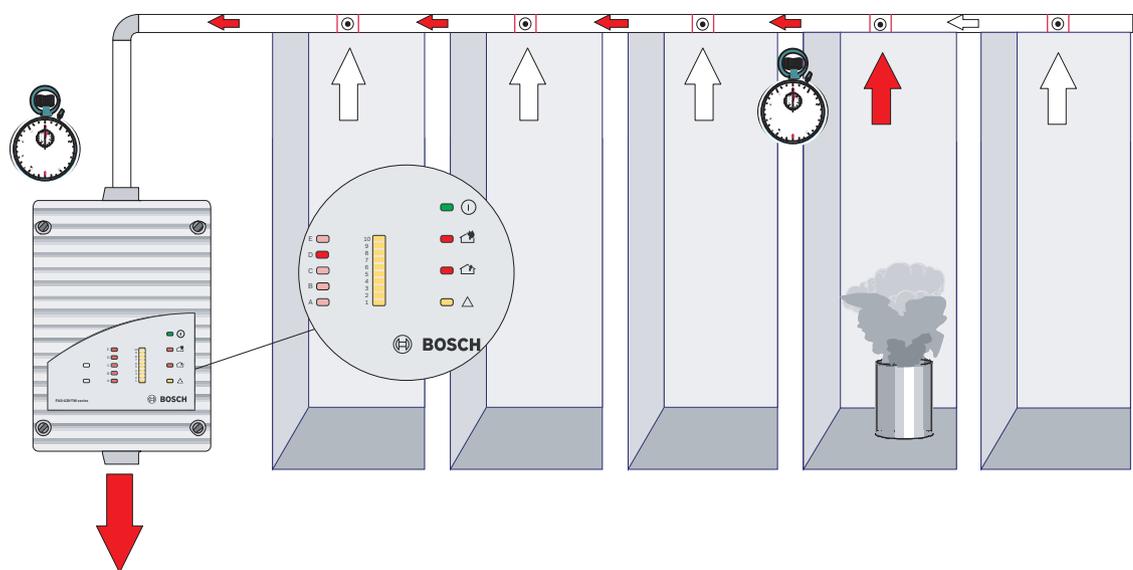


Figure 3.4: Phase 4: Identification of fire source by reversing the fan's direction of flow

Once the fire source has been identified, it is displayed via a corresponding display on the FAS-420-TM and on the operating and display unit of the fire panel.

Detection

Depending on the response sensitivity set on the detection module (0.5%/m to 2%/m light obscuration), the FAS-420-TM-R/-RVB triggers the main alarm when the appropriate light obscuration is reached. The sensitivities can also be set at intervals of 0.1%/m using the FAS-ASD-DIAG Diagnostic Software. The alarm is displayed via the alarm display on the unit and forwarded to the fire panel connected. The alarm thresholds and the display and transmission of malfunctions can be allocated different delay times. The intelligent LOGIC-SENS signal processing hides misleading values that are similar to those shown in the event of a fire, and ensures a high level of security against false alarms.

Alternative sensitivity

The LSN improved fire panel allows the sensitivity set on the detection module to be changed if necessary. Changes to the sensitivity of the detector module can be made in the following intervals: 2.0 / 1.0 or 0.5%/m light obscuration.

Changing the detector module's sensitivity setting allows you to adjust smoke detection to process-specific disturbance values, such as those caused by

- an increase in the aerosol or contamination levels in the monitoring range due to the time of day (day/night mode)
- an increase in the aerosol or contamination levels in the monitoring range due to the operation currently in progress (e.g. installation work, welding or increased generation of water vapor, exhaust fumes and dust etc.).

Monitoring unit

The detection module is monitored for contamination and for signal malfunction. A malfunction is displayed on the unit and forwarded to the fire panel. Malfunctions caused by brief environmental fluctuations can be eliminated with a time-delayed setting.


Airflow Monitoring

An airflow sensor checks the connected pipe system for breakage and obstruction.

The airflow sensor can – depending on the configuration of the pipe system (see *Principles of pipe planning, page 31*) and the setting of the airflow sensors - detect an obstruction of a single air sampling opening. Airflow monitoring is temperature-compensated and can be set depending on the air pressure.

On expiry of a defined delay, the malfunction is displayed on the aspirating smoke detector and the message is transmitted to the fire panel. The monitoring window thresholds can be modified to suit the environmental conditions (see *Airflow Monitoring, page 33*).

The principal signal curve of the airflow sensor is indicated in Airflow Monitoring.

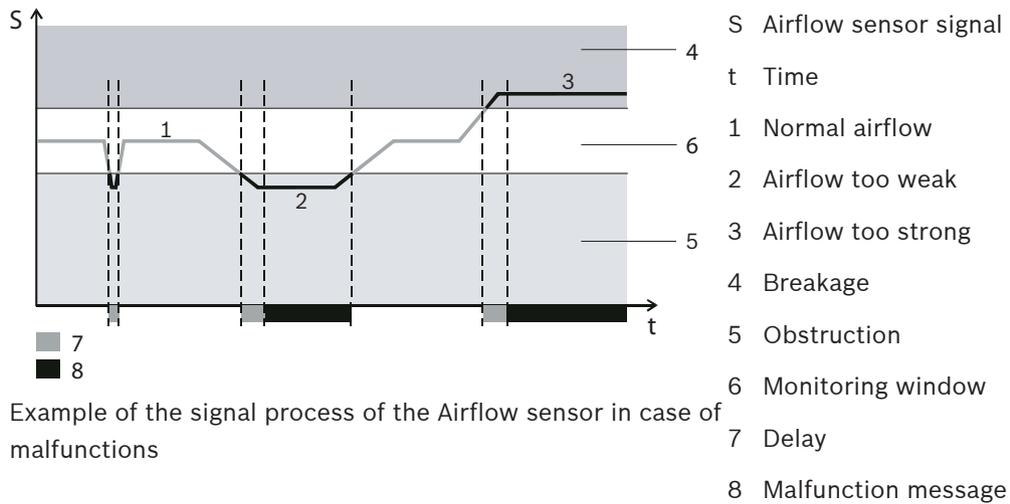

Resetting via fire panel

A malfunction message is reset via the connected fire panel. Alarm and malfunction messages are displayed simultaneously on the unit via the Local SecurityNetwork LSN using the reset function on the detector line.

Calibrating the airflow sensor


The airflow sensor calibration of the FAS-420-TM Aspirating Smoke Detector is performed automatically when the detection module is inserted into the housing base, provided that the X4 jumper has been plugged into another socket first. This plug-and-play feature makes the FAS-420-TM considerably easier to commission. In addition, the calibration can also be performed using the FAS-ASD-DIAG Diagnostic Software. The initialization phase is therefore carried out according to or independently of the air pressure as desired.

Pipe system

A pipe system with an overall length of up to 50 m can be connected to FAS-420-TM series Aspirating Smoke Detectors over a maximum of 12 aspiration points. A maximum of 5 aspiration points can be connected with ROOM-IDENT.

3.5 FAS-420-TM Aspiration smoke detector series and accessories

3.5.1 Overview

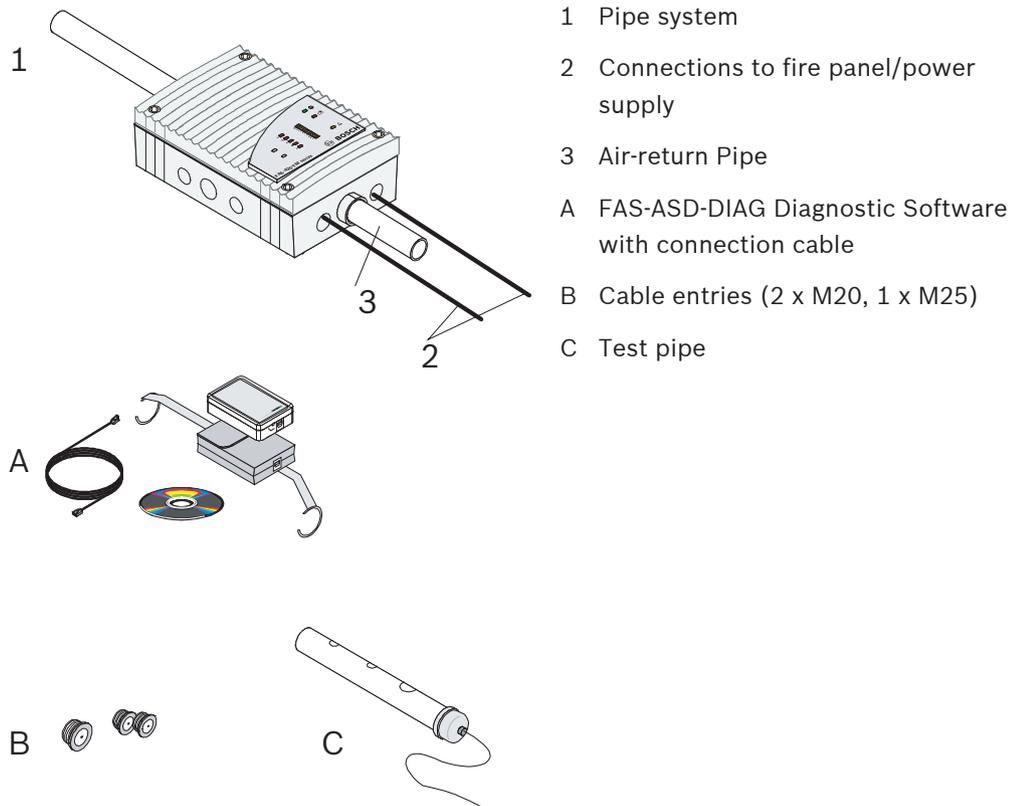

Overview of FAS-420-TM series aspirating smoke detectors and accessories

FAS-420-TM Aspiration smoke detector series comprise the following components:

Housing base

- Connections for pipe with 25 mm external diameter (input and return)
- Pack with cable entries, 1 x M 25 (for cable diameter of 1-18 mm) and 2 x M 20 (for cable diameter of 1-13 mm)
- Screw terminals for securing cables with a thickness of up to 2.5 mm²

Detector module

- Sensitive detection with the latest technology according to the principle of an optical scattered-light smoke detector with integrated airflow monitoring
- Aspiration unit with optimized air routing
- PC board with LSN connections, connection for shield wire and DIP switch for address setting
- Infrared diagnostics port
- FAS-420-TM: optical displays for main alarm, malfunction and operation
- FAS-420-TM-R: optical displays for fire source identification, main alarm, malfunction and operation
- FAS-420-TM-RVB: optical displays for fire source identification, internal alarm and main alarm, malfunction and operation, smoke level display

Information on other accessories for special applications can be found in

- *FAS-ASD-DIAG Diagnostic Software, page 19*
- *Ceiling lead-through, page 22*

– Water Separator for Humid Areas, page 24

3.5.2 Connections

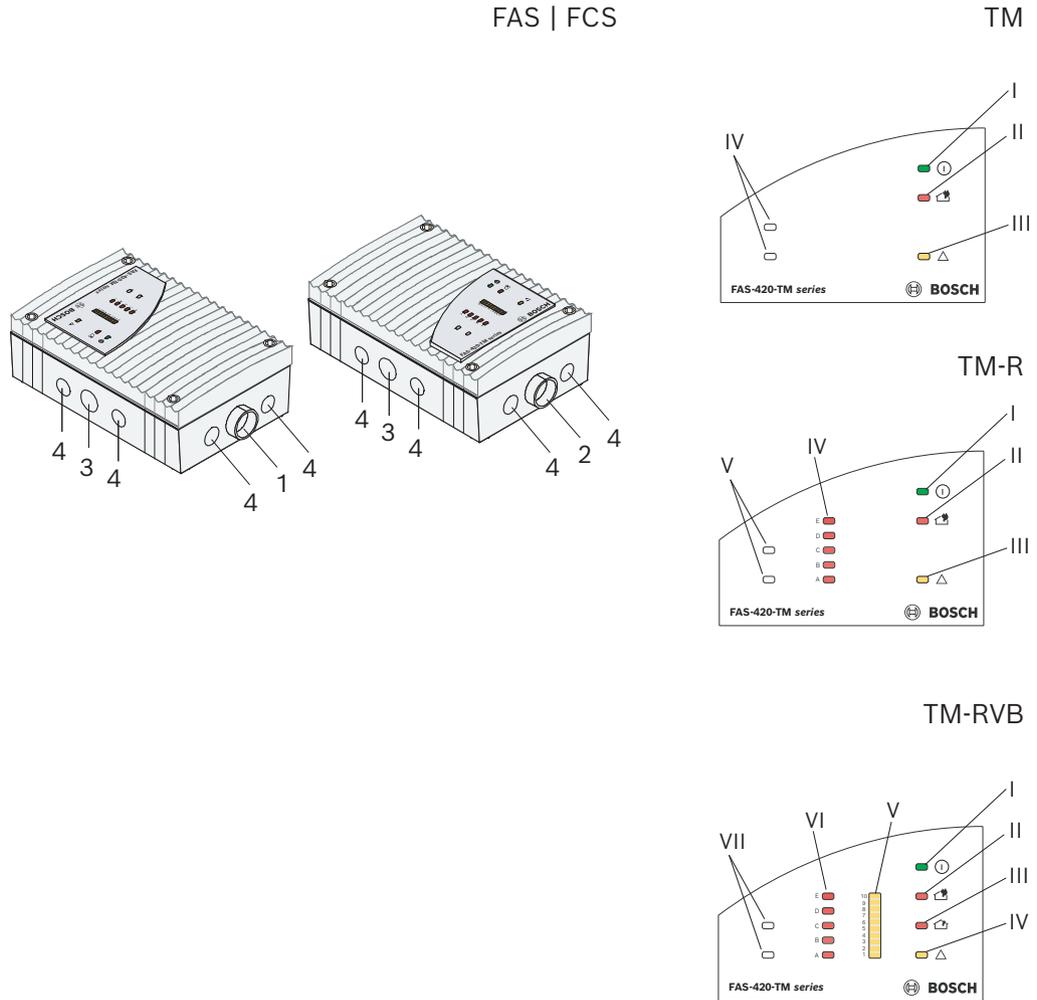


Figure 3.5: FAS-420-TM connections

Refer to the tables below for explanations on the connections and for explanations on the LEDs.

FAS-420-TM series	Position	Function	Explanation
	1	Connection for aspiration pipe	For Ø 25 mm pipe system
	2	Connection for air-return pipe	For Ø 25 mm pipe system
	3	Cable bushing for connection of fire panel and additional power supply (input/output)	2 x M 25
	4	Cable bushing for connection of fire panel and additional power supply (input/output)	8 x M 20

**Notice!**

When using fire source identification, it is not permitted to connect an air-return pipe.

3.5.3 FAS-420-TM LEDs

FAS-420-TM	Position	LED	Color	Explanation
	I	Operation	Green	Operation
	II	Main alarm	Red	Main alarm
	III	Malfunction	Yellow	Malfunction <ul style="list-style-type: none"> – in the pipe system – in the detection module – caused by fan failure
	IV	Infrared port		Fault diagnosis

3.5.4 FAS-420-TM-R LEDs

FAS-420-TM-R	Position	LED	Color	Explanation
	I	Operation	Green	Operation
	II	Main alarm	Red	Main alarm
	III	Malfunction	Yellow	Malfunction <ul style="list-style-type: none"> – in the pipe system – in the detection module – caused by fan failure
	IV	Fire source identification for zones A-E	5 red LEDs	Fire source identification
	V	Infrared port		Fault diagnosis

3.5.5 FAS-420-TM-RVB LEDs

FAS-420-TM-RVB	Position	LED	Color	Explanation
	I	Operation	Green	Operation
	II	Main alarm	Red	100% smoke level
	III	Internal alarm	Red	60% smoke level
	IV	Malfunction	Yellow	Malfunction <ul style="list-style-type: none"> – in the pipe system – in the detection module – caused by fan failure
	V	Smoke level display 1 to 10	10 yellow LEDs	Current smoke level

VI	Fire source identification for zones A-E	5 red LEDs	Fire source identification
VII	Infrared port		Fault diagnosis

3.5.6 FAS-ASD-DIAG Diagnostic Software

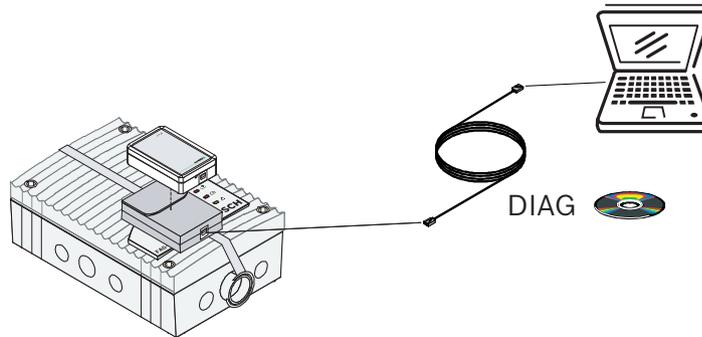


Figure 3.6: Diagnostic software for importing and reading out the device data

The FAS-ASD-DIAG Diagnostic Software enables the saved and current statuses of the FAS-420-TM and error messages to be saved on a PC or laptop.

Data is transmitted to the diagnostic appliance via the infrared port of the aspirating smoke detector. The USB cable provided is used to transmit the data from the diagnostic appliance to the PC/laptop (see figure above).

Diagnostic messages remain saved in the FAS-420-TM for at least 3 days in order to be able to evaluate even short, sporadically occurring errors (e.g. in case of changed operating conditions). Resetting the FAS-420-TM via the diagnostic software deletes all saved diagnostic messages. The software also allows the deletion of error messages.



Notice!

The diagnostic software can be used to save in file format all stored and current diagnostics data and any settings made via the fire panel programming software. To be able to compare the data read out, save each file under a different file name.

3.5.7 Remote Indicators

A remote indicator must be connected if the aspirating smoke detector is not directly visible or has been mounted in false ceilings or floors.


The external detector alarm display is installed in an obvious place in halls or entrances of the building section or areas concerned.

FNS-420-R LSN Strobes can be used as remote indicators. These must be ordered separately. The FNS-420-R LSN strobes can be addressed and are connected to the LSN bus.

If the FAS-420-TM-R and FAS-420-TM-RVB device variants with fire source identification are used, the FNS-420-R LSN Strobes can be assigned to the various monitoring ranges and, in the event of a fire, the location of the fire can be identified.

3.6 Pipe system components

3.6.1 Overview

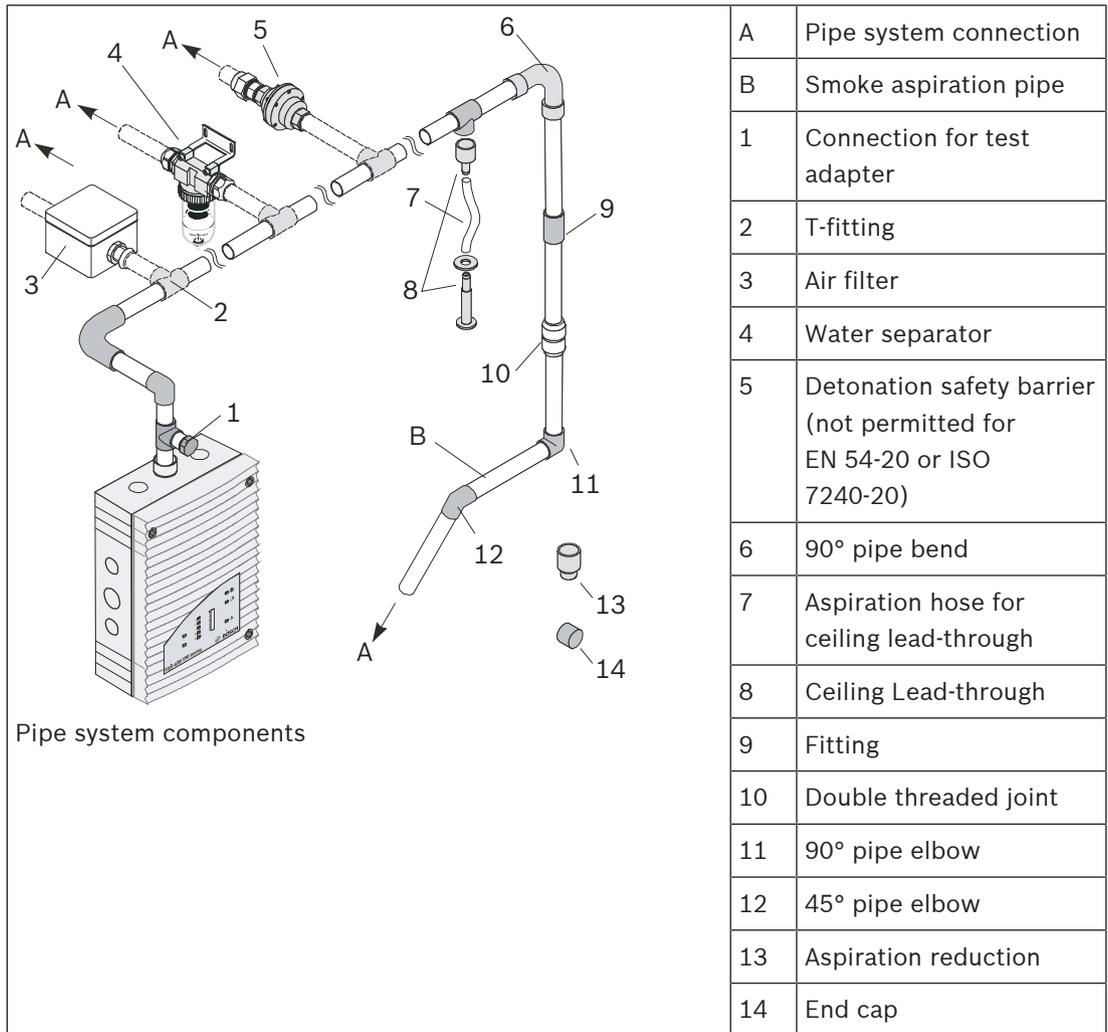

Pipe system components


During planning/design, a distinction is drawn between area monitoring and equipment monitoring. For both applications, PVC pipes and halogen-free pipes can be used but the restrictions of EN 54.20 must be observed. The pipes used for equipment monitoring should be halogen-free.

The figure shows essential accessory components that can be selected for the application concerned.

The pipe system must be constructed using pipes with an external diameter of 25 mm and the associated fittings.

Blowing-out system

In areas that are susceptible to dust particles or icing, it may be necessary to blow out the aspiration pipe system and its air sampling openings. The figure below shows a manual blowing-out system with a three-way tap.

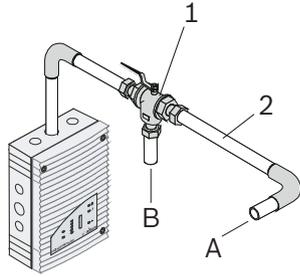

- A Blast air supply connection
- B Pipe system connection
- 1 Three-way tap
- 2 25 mm aspiration pipe
Aspiration reducing clips


Components of manual blowing-out systems

3.6.2 Air Sampling Openings

Aspiration reducing film sheets

An air sampling opening is a 10 mm bore in the aspiration pipe that is covered with a patented aspiration reducing film sheet with the required opening diameter. The size of the opening depends on the structure of the pipe system (see *Planning, page 30*).

The aspiration reducing film sheet is secured with marking tape to prevent it from becoming displaced. The marking tape is a transparent sticky film with red edges and a 10 mm hole. It is placed over the aspiration reducing film sheet so that the air sampling opening is not concealed and can be seen from long distances.

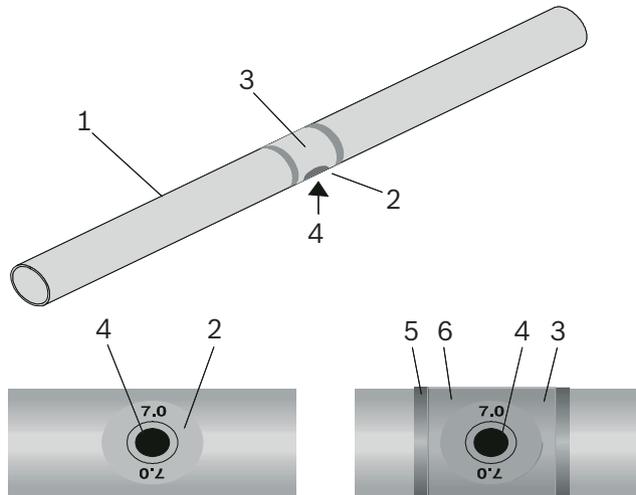


- 1 Smoke aspiration pipe
- 2 Air sampling opening with aspiration reducing film sheet
- 3 Marking tape for aspiration reducing film sheet
- 4 Air sampling opening
- 5 Fire red (RAL 3000)
- 6 Transparent

Air sampling opening with aspiration reducing film sheet and marking tape

Aspiration reducing clips

In areas susceptible to obstructions or icing, special, patented ASD aspiration clips with flexible aspiration reductions are used (see figure below).

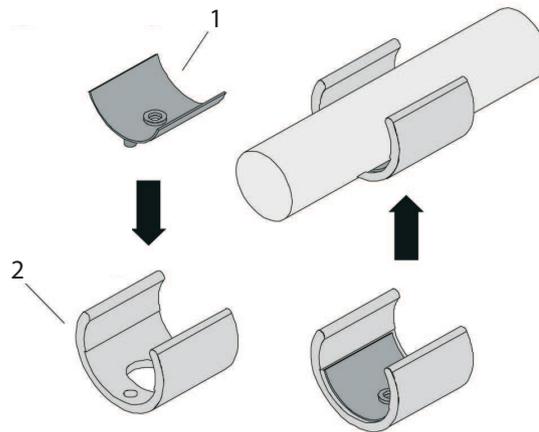

- 1 Aspiration reduction for deep-freeze facilities
- 2 ASD aspiration clip made of plastic

Aspiration reduction for soiled areas and deep-freeze areas

During use in deep-freeze areas, the flexible aspiration reduction expands in the air sampling openings and pushes the ice away during blowing out. The special plastic clip ensures that the aspiration reduction remains at the defined location.

As the clips are more stable under pressure and the elastic rubber insert significantly improves the cleaning effect, they are used for all plans and designs which require a blow-off system due to environmental influences (e.g. increased exposure to dust).




Notice!

The standard AF-x aspiration reducing film sheets and the marking tapes are not suitable for use in low-temperature areas.

The aspiration reductions with plastic clips are available separately.

3.6.3

Ceiling lead-through

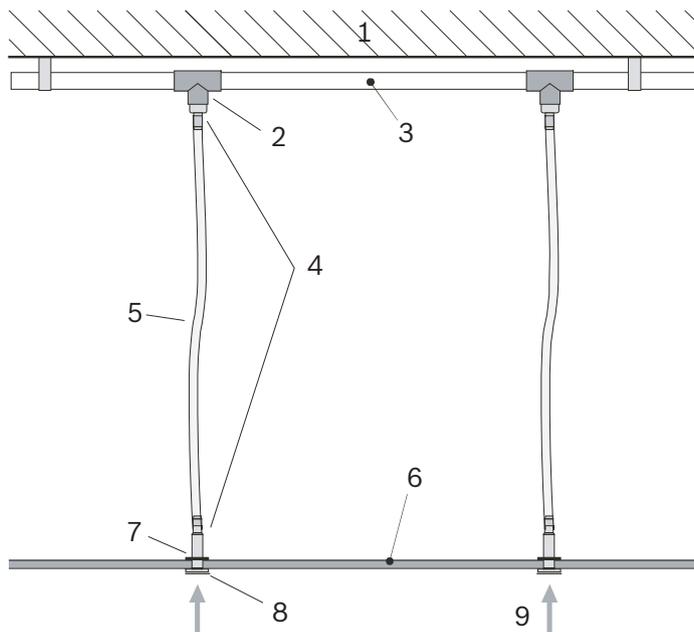

- 1 Ceiling
- 2 T-fitting
- 3 Pipe system
- 4 Complete ceiling lead-through
- 5 Aspiration hose for ceiling lead-through
- 6 False ceiling
- 7 Knurled nut
- 8 Aspiration reducing film sheet
- 9 Aspiration


Ceiling lead-throughs

A concealed pipe system for area monitoring can be realized by installing in a false ceiling. This requires the use of ceiling lead-throughs in the false ceiling. The ceiling lead-through can be used with a false ceiling thickness of up to approx. 35 mm. According to the planning and design guidelines, the ceiling lead-throughs are fitted with aspiration reducing film sheets with defined air sampling openings and connected to the pipe system by means of aspiration hoses.

If these hoses do not exceed a maximum of 3 m in length, the plan according to *Planning, page 30* applies. If structural circumstances dictate that lengths in excess of 3 m are used, the pipe system has to be calculated accordingly.


3.6.4

Air-return pipe for pressure areas and atmospheric loads

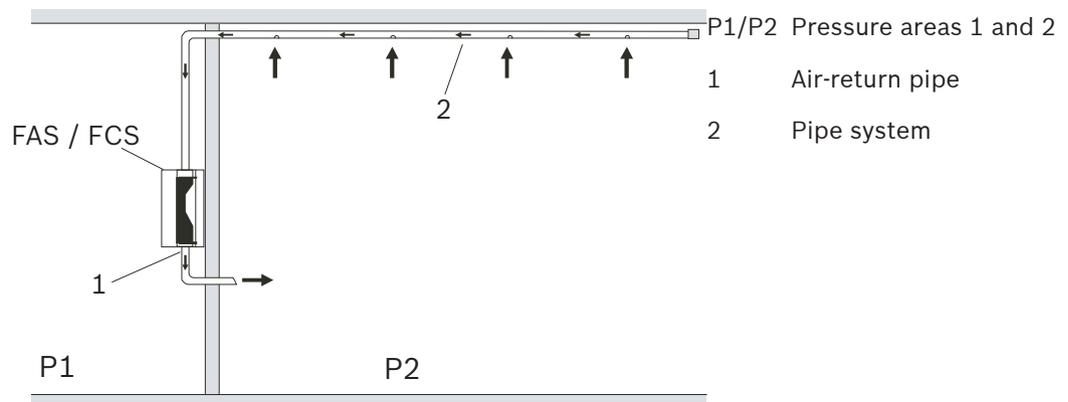

Principle of air return

If the aspirating smoke detectors and the pipe system are installed in areas with varying air pressure, the aspirated air must be returned to the pressure area of the pipe system. The air-return pipe can serve to equalize pressure or to prevent atmospheric loads (e.g. odors) in neighboring spaces.

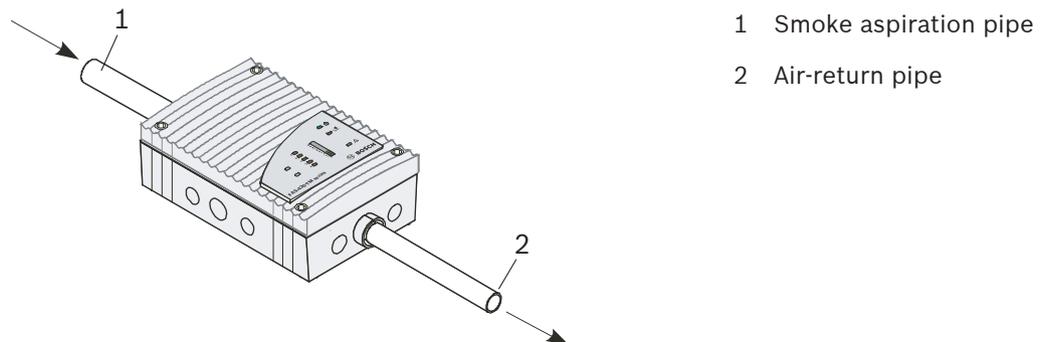

FAS-420-TM with air-return pipe


The air-return pipe is installed in the conical pipe connection for the air return of the FAS-420-TM. It fits perfectly in the connection and guarantees a firm hold. When using fire source identification, it is not permitted to connect an air-return pipe.

3.6.5

Air filters for dusty areas

In areas with interference to the environment such as, e.g. dust, an air filter is to be used to protect the smoke detection system. The standard air filter used is the type FAS-ASD-FL, consisting of a plastic housing with two pipe connections. If the air filters are dirty, then the filter inserts must be changed by opening the filter housing.

In order to extend the maintenance intervals, one air filter can be installed in every output pipe instead of one air filter inside the main sampling pipe. The same design specifications shall apply as stated in the projection tables in the appendix.

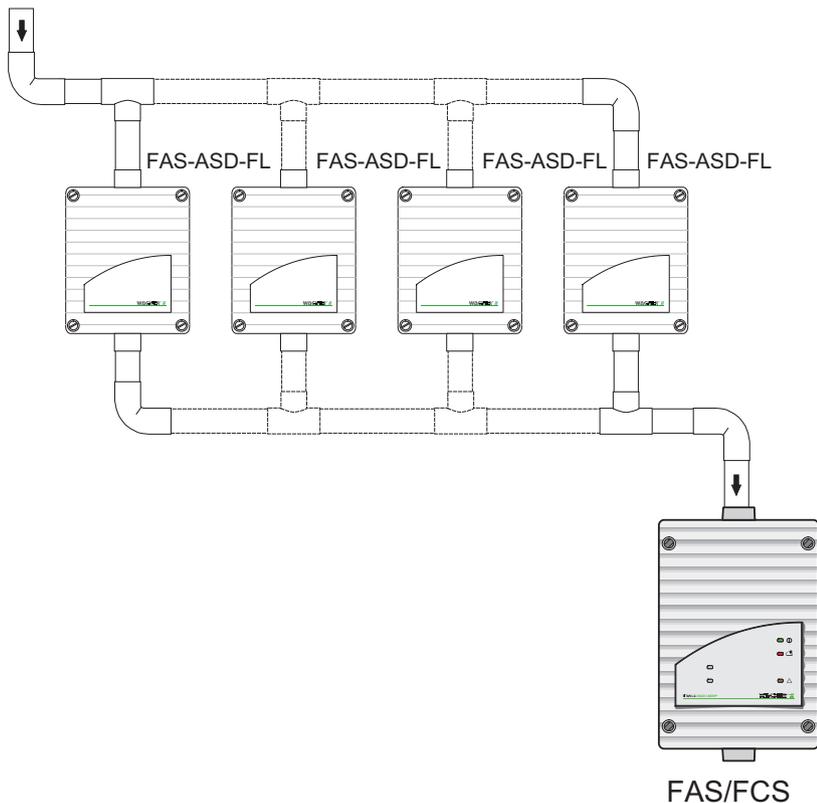


Furthermore, in order to extend the maintenance intervals, several air filters can be installed in parallel in the main sampling pipe. This requires the main sampling pipe to be split into one or several pipes and to be equipped with the same air filter or the combination of air filters. The individual pipes can then alternatively be either combined again to one main sampling pipe or be separately continued into the monitoring area(s). The same design specifications for the individual air filters shall apply as stated in the projection tables in the appendix.

3.6.6

Water Separator for Humid Areas

If the smoke aspiration system is operated in environments where condensate can form in the aspiration system, a water separator is used. Condensate can form with sharp temperature fluctuations and in areas where fresh air is monitored. For areas with extremely high humidity, the FAS-ASD-WS Water Separator can be used, for example.

The FAS-ASD-WS Water Separator is integrated at the lowest point in the pipe system downstream of the air filter and the aspirating smoke detector. The 45° pipe elbow permits optimum distance from the wall.

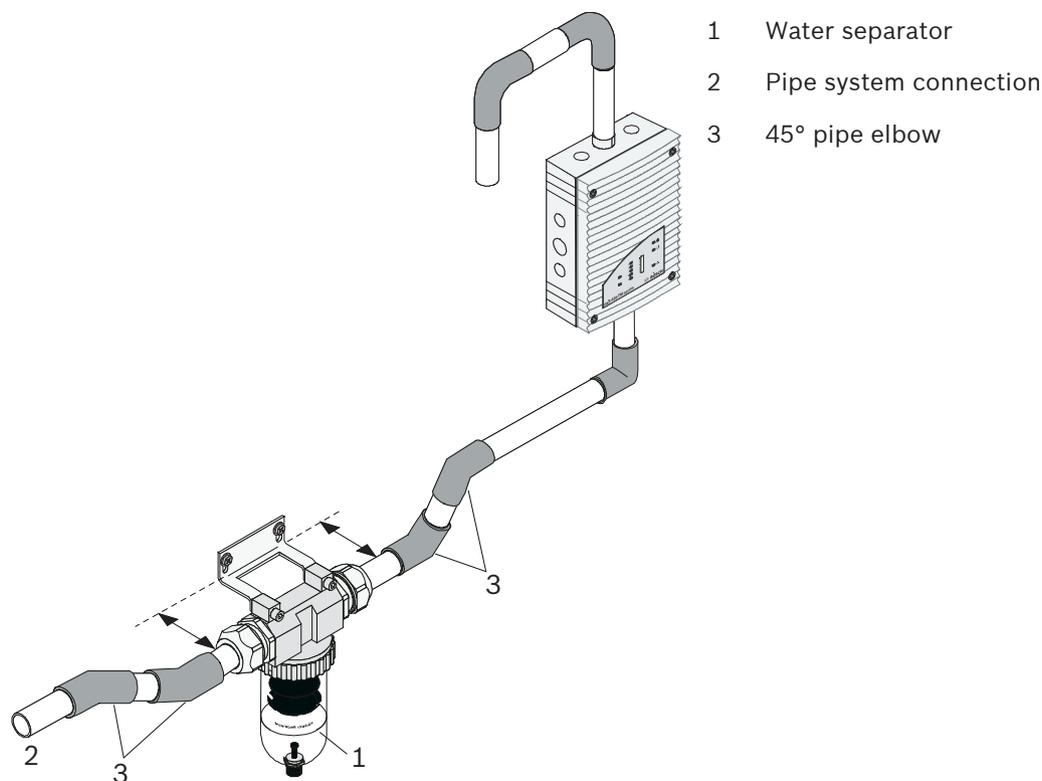

FAS-ASD-WS Water Separator for condensing water vapor and collecting condensate from the pipe system

The FAS-ASD-WS Water Separator can be operated in a temperature range from 0 °C to +50 °C. The sintered metal filter in the water separator has a pore width of 50 µm and causes an additional rough absorption of soil particles. The FAS-ASD-WS is supplied with an angle support and PG cable glands. The 45° pipe elbows (4 units) must be ordered separately.

3.7 Scope of Delivery: Smoke Aspiration System

Basic Devices and Accessories

	Designation	Order number
FAS-420-TM	Standard unit	F.01U.078.495
FAS-420-TM-R	Standard unit	F.01U.078.496
FAS-420-TM-RVB	Standard unit	F.01U.078.497
FAS-420-TM-HB	Housing Base	F.01U.078.494
FAS-ASD-DIAG	Diagnostic Software including connection cable, for USB port	F.01U.033.505
RAS Test Pipe	Test Pipe	4.998.148.848
RAS Test Adapter	Test Adapter	4.998.148.849

Pipe system components

	Designation	Order number
FAS-ASD-PHF16	Polywell aspiration hose, flexible, black, halogen-free	F.01U.029.719

	Designation	Order number
FAS-ASD-TRPG16	Ring nut with PG16 internal thread, 5 per set	F.01U.029.721
FAS-ASD-CSL	Quick-lock coupling, straight, PG16 internal thread	F.01U.029.720
FAS-ASD-3WT	Three-way tap, incl. fittings, for 25 mm pipe system	F.01U.029.718
FAS-ASD-F	Flange for ventilation duct	F.01U.029.722
FAS-ASD-AR	Aspiration reduction, with 10 mm bore for attaching an aspiration reducing film sheet, 10 per set	F.01U.029.724
FAS-ASD-CLT	Ceiling lead-through, white, ABS, 10 per set	F.01U.029.725
FAS-ASD-AHC	Aspiration hose (PE) for ceiling lead-through	F.01U.029.727
FAS-ASD-WS	Water Separator with sintered metal filter and manual drain valve, including mounting bracket and PG cable glands for 25 mm pipe system	F.01U.029.717
FAS-ASD-FL	Large air filter box, for 25 mm pipe system, inc. 1 filter set and two PG29 screw connections	F.01U.029.714
FAS-ASD-RFL	Replacement filter set for large air filter box	F.01U.029.715

**Notice!**

Four 45° pipe elbows are required to install the FAS-ASD-WS Water Separator.

Air sampling opening components

Designation	Order number
Marking tape for aspiration reducing film sheet AF-BR, 10 units.	4.998.143.413
Aspiration reducing film sheet 2.0 mm AF-2.0, 10 units.	4.998.143.416
Aspiration reducing film sheet 2.5 mm AF-2.5, 10 units.	4.998.143.417
Aspiration reducing film sheet 3.0 mm AF-3.0, 10 units.	4.998.143.418
Aspiration reducing film sheet 3.2 mm AF-3.2, 10 units.	4.998.143.419
Aspiration reducing film sheet 3.4 mm AF-3.4, 10 units.	4.998.143.420
Aspiration reducing film sheet 3.6 mm AF-3.6, 10 units.	4.998.143.422
Aspiration reducing film sheet 3.8 mm AF-3.8, 10 units.	4.998.143.423
Aspiration reducing film sheet 4.0 mm AF-4.0, 10 units.	4.998.143.424
Aspiration reducing film sheet 4.2 mm AF-4.2, 10 units.	4.998.143.425
Aspiration reducing film sheet 4.4 mm AF-4.4, 10 units.	4.998.143.426
Aspiration reducing film sheet 4.6 mm AF-4.6, 10 units.	4.998.143.427
Aspiration reducing film sheet 5.0 mm AF-5.0, 10 units.	4.998.143.428
Aspiration reducing film sheet 5.2 mm AF-5.2, 10 units.	4.998.143.429
Aspiration reducing film sheet 5.6 mm AF-5.6, 10 units.	4.998.143.430

Designation	Order number
Aspiration reducing film sheet 6.0 mm AF-6.0, 10 units.	4.998.143.431
Aspiration reducing film sheet 6.8 mm AF-6.8, 10 units.	4.998.143.432
Aspiration reducing film sheet 7.0 mm AF-7.0, 10 units.	4.998.143.433

**Notice!**

Plastic clips with marking tape for deep-freeze facilities and blowing-out systems are sold separately.

3.8 Technical specifications

3.8.1 FAS-420-TM series Aspiration smoke detectors

Electrical

LSN power supply	15 V DC-33 V DC			
Auxiliary power supply	14 V DC-30 V DC			
LSN current consumption	6.25 mA			
Current consumption from auxiliary power supply (24 V)	Fan voltage			
	9 V	10.5 V	12 V	13.5 V
– Starting current	120 mA	130 mA	145 mA	160 mA
– In standby	90 mA	110 mA	130 mA	150 mA
– With alarm, device variants FAS-420-TM and FAS-420-TM-R	125 mA	135 mA	150 mA	175 mA
– With alarm, device variant FAS-420-TM-RVB	180 mA	180 mA	180 mA	180 mA

Mechanical components

LEDs on FAS-420-TM	
– Operation	Green LED
– Malfunction	Yellow LED
– Alarm	1 red LED for main alarm
– Infrared port	IR transmitter/receiver
LEDs on FAS-420-TM-R	
– Operation	Green LED
– Malfunction	Yellow LED
– Alarm	1 red LED for main alarm
– Fire location display	5 red LEDs (for zones A-E)
– Infrared port	IR transmitter/receiver

LEDs on FAS-420-TM-RVB	
– Operation	Green LED
– Malfunction	Yellow LED
– Alarm	2 red LEDs for internal alarm and main alarm
– Fire location display	5 red LEDs (for zones A-E)
– Smoke level display	Yellow smoke level display with 10 segments (1-10)
– Infrared port	IR transmitter/receiver
Conical duct connections for Ø 25 mm	
– Aspiration pipe	1 pipe
– Air-return pipe	1 pipe
Cable bushings	
– Housing base sides	8 x M 20 and 2 x M 25
– Housing base rear wall	4 x M 25
Dimensions (H x W x D)	222 x 140 x 70 mm
Weight	Approx. 0.8 kg
Housing material	Plastic (ABS)
Housing color	Papyrus white (RAL 9018)

Environmental conditions

Protection category according to EN 60529	
– Without air return	IP 20
– With pipe section 100 mm/pipe bend	IP 42
– With air return	IP 54
Permissible temperature:range;	
Aspiration smoke detector	-20 °C to +60 °C
PVC pipe system	-10 °C to +60 °C
ABS pipe system	-40 °C to +80 °C
Permissible relative humidity (non-condensing)	Max. 95%

Special features

Sound power level (at 9 V fan voltage)	40 dB(A)
Response sensitivity (light obscuration)	0.5 to 2.0%/m
Life cycle of fan (at 12 V and 24 °C)	60,000 hrs

3.8.2 Pipe system

Maximum pipe length Ø 25 mm	50 m
Additional maximum pipe length Ø 12 mm	8 x 3 m
Maximum number of air sampling openings	8
Maximum length of aspiration hose per ceiling lead-through	3 m
Maximum size of monitoring area	400 m ²

3.8.3 Smoke Aspiration System Components

Water separator (FAS-ASD-WS)

Features	For use in areas with very high humidity
	Plastic housing with manual drain valve
	Sintered metal filter
	PG cable glands for 25 mm pipe system
	Incl. assembly bracket
Dimensions (H x W x D)	210 x 170 x 90 mm
Weight	Approx. 1.4 kg

Filterbox, large (FAS-ASD-FL)

Features	For use in areas with increased exposure to dust
	Incl. filter set and two PG29 cable glands
Housing material	ABS plastic
Housing color	Light gray RAL 7035
Dimensions (H x W x D)	194 x 122 x 96 mm
Application temperature range	-30 °C to +70 °C

Replacement filter set, large (FAS-ASD-RFL)

Features	Set comprising one fine, one medium and one coarse filter insert (60 ppi, 45 ppi and 25 ppi)
Application temperature range	-30 °C to +70 °C

Three way tap (FAS-ASD-3WT)

Features	With 3 transition threads for connection to a 25 mm pipe system
Operating pressure	Max. 10 bar
Housing material	PVC plastic
Seal	Teflon (PTFE)

Length	131 mm
Application temperature range	0 °C to +50 °C

Ceiling lead-through (FAS-ASD-CLT) with aspiration hose (FAS-ASD-AHC)

Maximum false ceiling thickness	35 mm
Max. length of aspiration hose per ceiling lead-through	1 m
Ceiling lead-through fitting material	ABS
Aspiration hose material	PE
Color of aspiration hose and ceiling lead-through	White
Application temperature range	-40 °C to +80 °C

4 Planning

4.1 Regulations

The planning regulation below is based on the system limits of the FAS-420-TM series. Here, the corresponding national regulations of the countries in their respectively applicable version must be adhered to and planning must be adjusted to these.

The planning for the aspirating smoke detector in accordance with EN 54-20 or ISO 7240-20 is described below. The basic conditions are specified in Regulations. Planning must be carried out in accordance with *Standard pipe planning, page 36*. In addition to Standard Pipe Planning, special applications are also bound by the restrictions of the planning notes in accordance with *Planning with single-hole monitoring, page 40* and the following sections. These must be taken into account from the start in the case of any special planning processes.

Planning options in accordance with EN 54-20 or ISO 7240-20:

Various technical solutions are available to suit different planning criteria. The following table lists the chapters in which the solutions are described.

Planning criteria	Technical solution	Principles	Restriction
Area monitoring in general	Basic planning	<i>Standard pipe planning, page 36</i>	
Detection of failure of a single opening	Single-hole monitoring planning	<i>Standard pipe planning, page 36</i>	<i>Planning with single-hole monitoring, page 40</i>
Equipment protection/cabinet monitoring	Simplified pipe planning	<i>Standard pipe planning, page 36</i>	<i>Simplified pipe planning, page 45</i>

Planning criteria	Technical solution	Principles	Restriction
Ventilation ducts	Planning for forced airflow	Standard pipe planning, page 36	Planning for forced airflow, page 50

With regard to the planning regulation below, the applicable national regulations of the countries concerned must be observed and the plans modified accordingly.

EN 54-20 or ISO 7240-20

For VdS systems, compliance is also required with the following guidelines:

- "Guideline for automatic fire detection systems, planning and installation", VdS Schadenverhütung GmbH, Cologne (VdS 2095)
- The guideline "Installation protection for electrical and electronic systems" VdS Schadenverhütung GmbH, Cologne (VdS 2304)
- The "Planning Aspirating Fire Detectors" data sheet from VdS Schadenverhütung GmbH, Cologne (VdS 3435)

The applicable national regulations must also be observed, for example in Germany:

- DIN VDE 0833 parts 1 and 2 "Alarm systems for fire, intrusion and hold-up"
- Additional provisions for the installation of fire detection systems, which are published by fire directors of fire departments, by the construction supervision authorities or by the construction law authorities that have only local validity.

Notice!

For planning, the system limits in accordance with *Planning Limits, page 35* are to be observed.

Select airflow monitoring and the associated planning limits (see *Airflow Monitoring, page 33*) and check these for any restrictions imposed by country-specific regulations.

If the on-site planning deviates from the standard plans described below, this must always be checked with activation attempts for correct detection of a malfunction and a fire. A special plan may be required.

Plans not contained in the operation guide must be requested.



4.2

Principles of pipe planning

The aspiration pipe network must be designed such that all possible fires in the monitoring area can be dealt with at an early stage.

The number of air sampling openings and the structure of the pipe system depend on the size and geometry of the monitoring range. The pipe system must be laid out according to the planning guidelines in this chapter, taking into account the following issues:

Symmetrical structure

The pipe system should preferably have a symmetrical structure, i.e.

- Same number of air sampling openings per pipe branch
- Same pipe branch lengths (should not exceed $\pm 20\%$ deviation)
- Same distance between neighboring air sampling openings on the smoke aspiration pipe (should not exceed $\pm 20\%$ deviation).


Asymmetrical structure

If structural circumstances dictate that the pipe system is to be designed asymmetrically, the following conditions apply:

- The number of air sampling openings and the length of the shortest and longest pipe branch within the pipe system must not exceed a quantity ratio of 1:2.
- The distance between neighboring air sampling openings on the smoke aspiration pipe must be equal (should not exceed $\pm 20\%$ deviation).

- The diameters of the air sampling openings are determined separately for each pipe branch. The diameters depend on the total number of air sampling openings in the pipe branch in question.

The figure shows a typical U-pipe system with three or six air sampling openings and the air sampling opening diameters calculated according to *Standard pipe planning, page 36*.

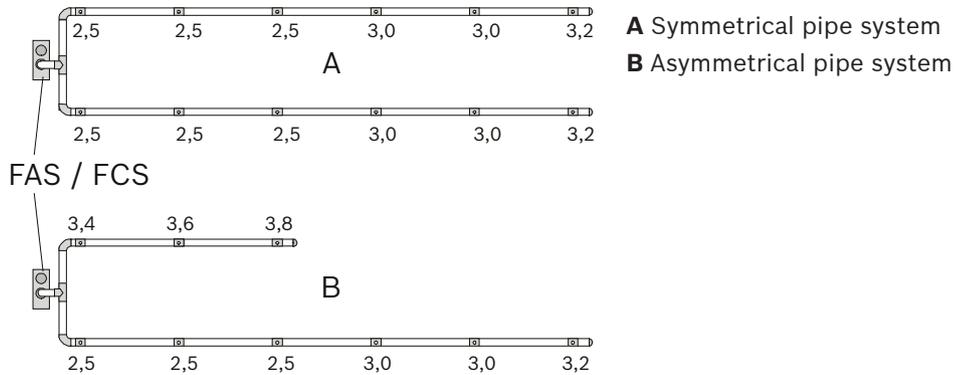

Tab. 4.1: Example of a symmetrical and an asymmetrical U-pipe system

Pipe diameter

As a rule, the pipe system is created using pipes with an external diameter of 25 mm. PVC or halogen-free pipes can be used. Halogen-free pipes are to be used in preference for equipment monitoring.


Branch length

To achieve short transport times for the smoke aerosols in the aspiration pipe and thus quick detection, it is better to plan several short branches than fewer long ones (preferably U and double U-pipe system).

Pipe configurations

Depending on the area geometry, five pipe configurations can be selected:

- **I-pipe:** pipe system without branches.
- **U-pipe:** pipe system that branches into two pipe branches.
- **M-pipe:** pipe system that branches into three pipe branches.
- **Double U-pipe:** pipe system that branches symmetrically into four pipe branches.

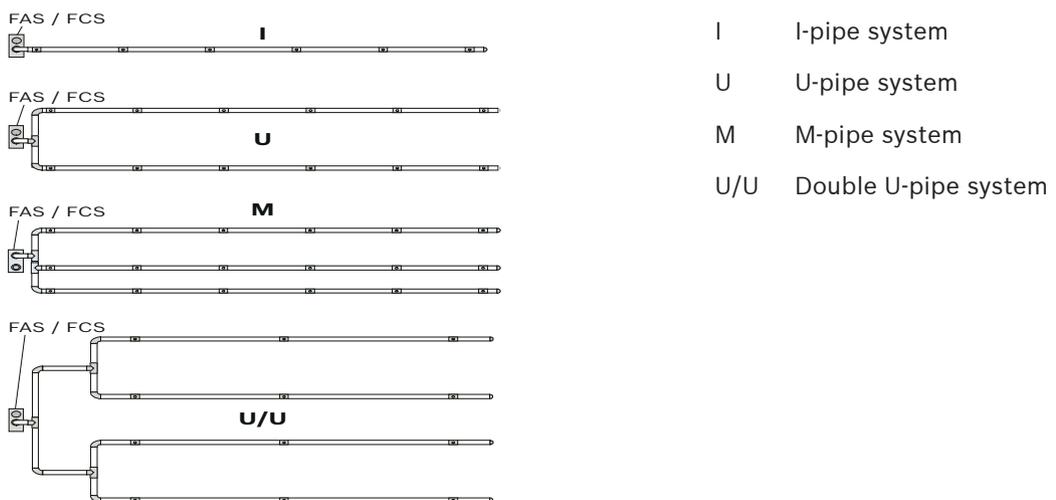

Pipe configurations

Change of direction

Elbows and bends in the pipe system increase flow resistance. Therefore, they should only be used where they cannot be avoided for structural engineering reasons. Light change of direction (e.g. with 90 ° pipe bends or air sampling hose) are already approved as part of the project according to EN 54-20 or ISO 7240-20 and need not be considered further.

**Notice!**

Pipe bends must be given preference over pipe elbows. Too many bends and pipe elbows reduce the air speed in the aspiration pipe, thereby increasing the detection time. A 90° pipe elbow corresponds to a straight pipe length of 1.5 m. Because of this, the maximum total length of the pipe system is reduced by 1.5 m.

Testing

For critical applications, test the secure detection with activation attempts. Check also whether there is airflow at the individual air sampling openings.

**Notice!**

In order to increase transport speed in critical application areas, the fan voltage can be increased from 6.9 V to 9 V.

4.3**Airflow Monitoring**

EN 54-20 or ISO 7240-20 requires the detection of a 20-percent change in the airflow volume by the detection module's airflow sensor. In order to achieve this, the activation threshold of the airflow sensor must be set to less than or equal to 20%. It is recommended that airflow calibration is carried out dependent on air pressure for both of these settings. In systems that do not need to comply with EN 54-20 or ISO 7240-20, any threshold can be set. The airflow monitoring of the smoke aspiration pipes is planned taking into account the applicable national regulations for the country concerned.

Adapting the airflow sensitivity

The sensitivity of the airflow sensor must be adapted to the application. Breakages and obstructions must be accurately detected in the event of a malfunction.

The trigger threshold, and thus the sensitivity of the airflow sensor, can be set from 10 to 50%.

	Complies with EN 54-20 or ISO 7240-20			
Activation threshold	10%	20%	40%	50%
Sensitivity	Very high	High	Average	Low

**Notice!**

Selection of the largest possible, precisely still-approved level is recommended.

Dynamic airflow sensors

The airflow monitoring of the unit makes it possible to detect breaks at the end of pipes and identify sudden obstruction of individual air sampling openings (e.g. following tampering with the pipe system). If the dynamic airflow sensors were activated via the diagnostic software, note the following restrictions.

Restrictions

Airflow monitoring may only be set to level I if

- planning was carried out in accordance with "single-hole monitoring" (see *Planning with single-hole monitoring, page 40*),
- the airflow sensor was calibrated dependent on air pressure (*Air-Pressure-Dependent Calibration, page 75*)
- and no larger airflow fluctuations can occur.

Air pressure differences

There must be equal air pressure along the length of the aspiration pipe.



Notice!

If the aspirating smoke detectors and the pipe system are positioned in areas with different air pressures, the air aspirated by the FAS-420-TM must be returned to the pressure area of the pipe system (see *Air-return pipe for pressure areas and atmospheric loads, page 23*).



Notice!

FAS-420-TM series detectors with active fire source identification must be installed outside the areas to be monitored and without an air-return pipe.



Notice!

As an air-return pipe needs to be provided when the FAS-420-TM series is used in areas with varying air pressures, and given that no air-return pipe is possible with ROOM-IDENT, it is not possible to use the FAS-420-TM series with ROOM-IDENT in areas with varying or fluctuating air pressures.

4.4

Defining the Response Sensitivity

The sensitivity of smoke aspiration systems can be divided into certain fire sensitivity classes in accordance with EN 54-20 or ISO 7240-20. These fire sensitivity classes describe specific examples of ways in which the systems can be applied. The permissible system plans given in *Standard pipe planning, page 36* can be determined for each classification. Smoke aspiration systems with a higher fire sensitivity class according to EN 54-20 or ISO 7240-20 also satisfy the requirements of the lower classes.

Class	Description	Application example
A	Aspirating smoke detector with extremely high sensitivity	Very early detection: significant smoke dilution through air conditioning in IT areas
B	Aspirating smoke detector with increased sensitivity	Early detection: significant time gains thanks to very early fire detection (without air condition)
C	Smoke aspiration system with normal sensitivity	Normal detection: fire detection with the advantages of smoke aspiration systems



Notice!

Depending on the number of air sampling openings, fire sensitivity classes A, B and C can all be achieved with the detection modules available.

The table shows the sensitivities you can choose from

	Sensitivity	Standard sensitivity	FAS-ASD-DIAG settings intervals
Detection module	0.5 - 2%/m	0.5%/m	0.1 %/m

The planning of the monitoring area always occurs according to the national guidelines for point-type smoke detectors.

4.5 Planning Limits

The following limit values must always be observed for the FAS-420-TM series:

Limiting values		
	Maximum monitoring area per air sampling opening	Corresponds to the maximum monitoring range for point detectors, in line with applicable national norms.
	Maximum number of air sampling openings per pipe system ¹	8
	Maximum number of air sampling openings per pipe system with fire source identification	5
	Maximum pipe length per pipe system ²	
	– Pipe Ø 25 mm	50 m
	– Additional pipe Ø 12 mm	8 x 3 m
	Maximum total monitoring area per pipe system	400 m ²
	Minimum pipe length between 2 air sampling openings	0.1 m
	Minimum pipe length between 2 air sampling openings with fire source identification	3 m
	Maximum pipe length between 2 air sampling openings	10 m
	¹ Plans not contained in the operation guide must be requested	
	² Depending on the selected plan, some restricted values may apply	

The maximum total monitoring area of the FAS-420-TM and the maximum total pipe length depend on the plan selected (see *Standard pipe planning, page 36*).



Notice!

The planning limits specified in this operation guide may be restricted in line with country-specific regulations.

4.6 Standard pipe planning

In order to plan in accordance with the EN 54-20 or ISO 7240-20 standard, certain factors must be known, such as the system sensitivity requirements, the number of air sampling openings and the accessories needed for the application concerned. These factors can be used to determine the appropriate standard-compliant construction of the pipe system using the following chapter and the planning table in the appendix.

4.6.1 Determining the Necessary Accessories

As accessory components, e.g. filters, have a particular effect on the dimensions of pipe planning, the appropriate accessory must be selected for the application concerned in advance. Retrofitting an accessory, e.g. a fine filter, is largely only possible if a certain reserve is planned in advance.

The following components must be taken into account in this regard:

- Air filter
- Water separator
- Three-way-tap

See *Smoke Aspiration System Components, page 29*

4.6.2 Pipe Planning with Pipe Accessories

For the purpose of pipe system planning, the following planning table is available for all selected pipe accessories.

- Planning without air filter
- Planning with FAS-ASD-FL air filter



Notice!

In order to improve the detection quality of a smoke aspiration system, an area can be monitored with more detection points than required by national guidelines. However, to calculate the necessary sensitivity of an aspirating smoke detector, the number of aspiration points required by the standard must be used.

Procedure

In the following **example**, a plan with air filter with 4 openings, not fitted with any other accessories, should satisfy class B. The red shaded areas show the potential plans with different pipe shapes and fan voltage.

	General	Example
1.	<p>Selection: Select the planning table with or without air filter, as applicable.</p> <p>Result: Planning table and specified air filter</p>	<p>Select the planning table with air filter, <i>Planning with air filter, page 37</i></p>
2.	<p>Selection: Select the number of air sampling openings from the planning table. Note the possible sensitivity classes.</p> <p>Result: Specified detection module with specified setting and alarm threshold</p>	<p>In the <i>Planning with air filter, page 37</i> table, select the column with four air sampling openings (Number of air sampling openings, 4)</p>

	General	Example
3.	<p>Selection: Select the sensitivity (sensitivity class) of the system according to the gradation described in <i>Defining the Response Sensitivity, page 34</i>.</p> <p>Result: Specified sensitivity class in accordance with EN 54-20 or ISO 7240-20</p>	In the <i>Planning with air filter, page 37</i> table, select the response sensitivity you require (class A, B or C) from the column highlighted in red. You must select the class that corresponds to the configured sensitivity.
4.	<p>Selection: Select other pipe components, such as a water separator.</p> <p>Result: Specified planning table</p>	Select the Without any other pipe accessories table.
5.	<p>Selection: Select the possible pipe length for the relevant pipe shape and fan voltage.</p> <p>Result: Specified planning in accordance with EN 54-20 or ISO 7240-20 for the previously specified parameters</p>	In the Without any other pipe accessories table, select the pipe shape and fan voltage you require, and note the permissible total pipe length.

You will find the planning tables in question in *Planning without air filter, page 90* and *Planning with Air Filter, page 91*.

Abbreviation	Meaning
S	Sensitivity (% LT/m)
MA	Main alarm
PA	Internal alarm
l [m]	Permissible total pipe length in meters

4.6.3 Planning with air filter

Sensitivity (% LT/m)	Number of openings											
	1	2	3	4	5	6	7	8	9	10	11	12
0.5	A	B	B	B	C	C	C	C	C	C	C	C
0.6	A	B	B	B	C	C	C	C	C	C	C	C
0.7	A	B	B	C	C	C	C	C	C	C	C	
0.8	A	B	B	C	C	C	C	C	C			
0.9	A	B	C	C	C	C	C	C				
1.0	B	B	C	C	C	C	C					
1.1	B	B	C	C	C	C	C					
1.2	B	B	C	C	C	C						
1.3	B	C	C	C	C	C						

Sensitivity (% LT/m)	Number of openings											
	1	2	3	4	5	6	7	8	9	10	11	12
1.4	B	C	C	C	C							
1.5	B	C	C	C	C							
1.6	B	C	C	C								
1.7	B	C	C	C								
1.8	B	C	C	C								
1.9	B	C	C	C								
2.0	B	C	C									

Without any other pipe accessories

Pipe shape	U _{Fan} [V]	Number of openings												Max. allowed pipe length (m)
		1	2	3	4	5	6	7	8	9	10	11	12	
I	≥9	40	40	40	40	40								Max. allowed pipe length (m)
U	≥9		50	50	50	50	50	50	50	50	50	50	50	
M	≥9			50	50	50	50	50	50	50	50	50	50	
Double U	≥9				50	50	50	50	50	50	50	50	50	

Results for class B

Detection module with a sensitivity of 0.5% LT/m or 0.6% LT/m.

 
System parameters possible:

- I-pipe system
≥ 9 V fan voltage, max. 40 m total pipe length
- U-pipe system
≥ 9 V fan voltage, max. 50 m total pipe length
- M-pipe system
≥ 9 V fan voltage, max. 50 m total pipe length
- Double U-pipe system
≥ 9 V fan voltage, max. 50 m total pipe length

4.6.4

Opening Diameter

I-pipe system

<p>1 pipe system</p> <p>FAS-420-TM FAS-420-TM-R FAS-420-TM-RVB</p>	<p>FAS / FCS</p>  <p>I-pipe system for space protection</p>
---	---

I-pipe system	Air sampling opening	Number of air sampling openings				
		1	2	3	4	5

Ø of air sampling openings in mm ^a	A	6.8	5.0	4.2	3.4	3.0
	B	-	5.0	4.2	3.6	3.2
	C	-	-	4.4	3.8	3.4
	D	-	-	-	4.0	3.6
	E	-	-	-	-	4.4

^a Punch diameter of the aspiration reducing film sheet

U-pipe system

<p>1 pipe system</p> <p>FAS-420-TM FAS-420-TM-R FAS-420-TM-RVB</p>	<p>U-pipe system for space protection</p>
---	---

U-pipe system	Air sampling opening	Number of air sampling openings			
		2	4	6	8
Ø of air sampling openings in mm ^a	A	6.0	4.2	3.4	3.0
	B	-	4.6	3.6	3.0
	C	-	-	4.4	3.6
	D	-	-	-	4.0

^a Punch diameter of the aspiration reducing film sheet


M-pipe system

<p>1 pipe system</p> <p>FAS-420-TM FAS-420-TM-R FAS-420-TM-RVB</p>	<p>M-pipe system</p>
---	----------------------

M-pipe system	Air sampling opening	Number of air sampling openings	
		3	6
Ø of air sampling openings in mm ^a	A	5.0	3.6
	B	-	4.0

^a Punch diameter of the aspiration reducing film sheet

Double U-pipe system

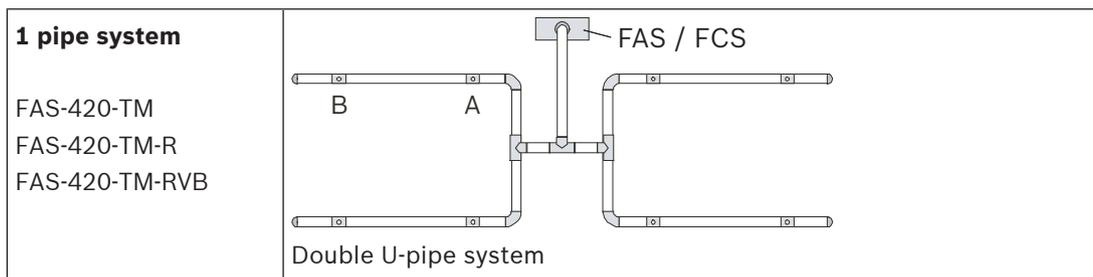


Double U-pipe system	Air sampling opening	Number of air sampling openings	
		4	8
Ø of air sampling openings in mm ^a	A	4.4	3.0
	B	-	3.8
^a Punch diameter of the aspiration reducing film sheet			

4.7 Planning with single-hole monitoring

Depending on the pipe configuration, the following system parameters are used to detect a single air sampling opening or a particular number of obstructed air sampling openings. Planning is to be carried out according to regulations specified in *Standard pipe planning, page 36*. Additionally, the following limiting values and opening diameters must be observed. An additional accessory (air filter, condensate separator etc.) can have an effect on the maximum pipe length.

4.7.1 I-pipe system

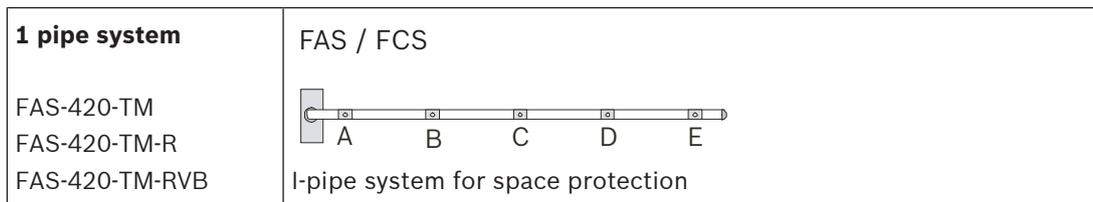

Min. distance FAS-420-TM - 1st air sampling opening	2 m
Max. distance FAS-420-TM - 1st air sampling opening	20 m
Max. total pipe length per pipe system	
– Pipe Ø 25 mm	40 m
– Additional pipe Ø 12 mm	5 x 3 m
Max. total pipe length per pipe system for a fan voltage < 10.5 V	
– Pipe Ø 25 mm	30 m
– Additional pipe Ø 12 mm	5 x 3 m
Min. distance between 2 air sampling openings (d)	4 m
Max. distance between 2 air sampling openings (d)	10 m
Max. number of air sampling openings (n) per pipe system	5 units

I-pipe system	Air sampling opening	Number of air sampling openings				
		1	2	3	4	5
Ø of air sampling openings in mm ^a	A	6.8	4.6	4.0	3.4	3.0
	B	-	5.0	4.2	3.6	3.2
	C	-	-	4.4	3.8	3.4
	D	-	-	-	4.0	3.6
	E	-	-	-	-	3.8

^aPunch diameter of the aspiration reducing film sheet

I pipe system activation thresholds

I-pipe system	Number of obstructed air sampling openings	Number of air sampling openings			
		2	3	4	5
Activation threshold	1 obstructed opening	± 30%	± 20%	± 15%	± 10%
	2 obstructed openings	0	0	± 30%	± 20%
	3 obstructed openings	0	0	0	0
	4 obstructed openings	0	0	0	0
	5 obstructed openings	0	0	0	0

0 not practical

Example:

If 2 of a total of 5 air sampling openings are found to be obstructed, airflow monitoring must be set to ± 20% using the FAS-ASD-DIAG Diagnostic Software.




Notice!

When planning in accordance with EN 54-20 or ISO 7240-20, airflow monitoring must always be set to 20%.

4.7.2

U-pipe system

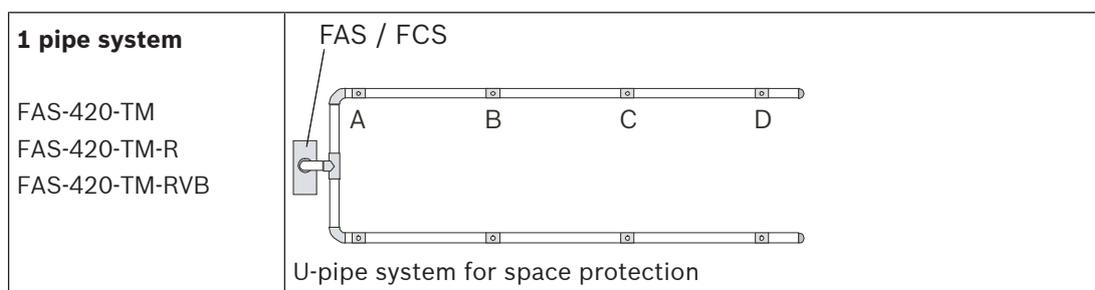

Min. distance FAS-420-TM - 1st air sampling opening	2 m
Max. distance FAS-420-TM - 1st air sampling opening	20 m
Max. branch length	25 m
Max. total pipe length per pipe system	

– Pipe Ø 25 mm	50 m
– Additional pipe Ø 12 mm	8 x 3 m
Max. total pipe length per pipe system for a fan voltage < 10.5 V	
– Pipe Ø 25 mm	40 m
– Additional pipe Ø 12 mm	8 x 3 m
Min. distance between 2 air sampling openings (d)	4 m
Max. distance between 2 air sampling openings (d)	10 m
Max. number of air sampling openings (n) per pipe system	8 units

U-pipe system	Air sampling opening	Number of air sampling openings			
		2	4	6	8
Ø of air sampling openings in mm ^a	A	6.0	4.2	3.4	3.0
	B	-	4.4	3.6	3.0
	C	-	-	3.6	3.2
	D	-	-	-	3.2

^a Punch diameter of the aspiration reducing film sheet

U-pipe system activation thresholds

U-pipe system	Number of obstructed air sampling openings	Number of air sampling openings			
		2	4	6	8
Activation threshold per pipe system	1 obstructed opening	± 25%	± 15%	-	-
	2 obstructed openings	0	± 25%	± 20%	± 15%
	3 obstructed openings	0	0	± 30%	± 25%
	4 obstructed openings	0	0	0	± 35%
	5 obstructed openings	0	0	0	0
	6 obstructed openings	0	0	0	0
	7 obstructed openings	0	0	0	0

0 not practical
- not possible

Example:

If 3 of a total of 8 air sampling openings are found to be obstructed, airflow monitoring must be set to ± 25% using the FAS-ASD-DIAG Diagnostic Software.




Notice!

When planning in accordance with EN 54-20 or ISO 7240-20, airflow monitoring must always be set to 20%.

4.7.3

M-pipe system

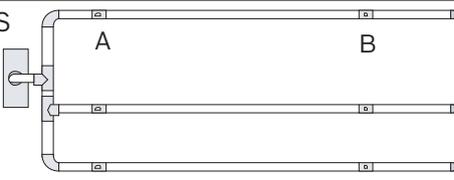1 pipe system FAS-420-TM FAS-420-TM-R FAS-420-TM-RVB	FAS / FCS  M-pipe system for space protection
--	---

Min. distance FAS-420-TM - 1st air sampling opening	2 m
Max. distance FAS-420-TM - 1st air sampling opening	20 m
Max. branch length	16.5 m
Max. total pipe length per pipe system	
– Pipe Ø 25 mm	50 m
– Additional pipe Ø 12 mm	8 x 3 m
Max. total pipe length per pipe system for a fan voltage < 10.5 V	
– Pipe Ø 25 mm	40 m
– Additional pipe Ø 12 mm	8 x 3 m
Min. distance between 2 air sampling openings (d)	4 m
Max. distance between 2 air sampling openings (d)	10 m
Max. number of air sampling openings (n) per pipe system	6 units

M-pipe system	Air sampling opening	Number of air sampling openings	
		3	6
Ø of air sampling openings in mm ^a	A	5.0	3.6
	B	-	3.8

^aPunch diameter of the aspiration reducing film sheet

M-pipe system activation thresholds

M-pipe system	Number of obstructed air sampling openings	Number of air sampling openings	
		3	6
Activation threshold per pipe system	1 obstructed opening	± 30%	± 15%
	2 obstructed openings	0	± 30%
	3 obstructed openings	0	0
	4 obstructed openings	0	0
	5 obstructed openings	0	0
	6 obstructed openings	0	0
0 not practical - not possible			

Example:

If 1 of a total of 6 air sampling openings is found to be obstructed, airflow monitoring must be set to ± 15% using the FAS-ASD-DIAG Diagnostic Software.




Notice!

When planning in accordance with EN 54-20 or ISO 7240-20, airflow monitoring must always be set to 20%.

4.7.4

Double U-pipe system

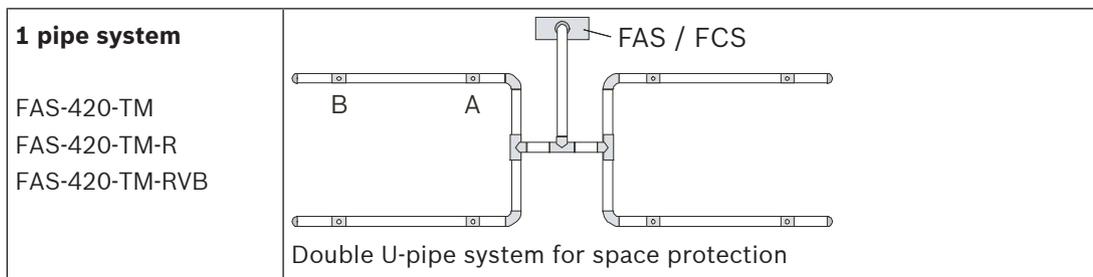

Min. distance FAS-420-TM – 1st air sampling opening	2 m
Max. distance FAS-420-TM – 1st air sampling opening	20 m
Max. branch length	12.5 m
Max. total pipe length per pipe system	
– Pipe Ø 25 mm	50 m
– Additional pipe Ø 12 mm	8 x 3 m
Max. total pipe length per pipe system for a fan voltage < 10.5 V	
– Pipe Ø 25 mm	40 m
– Additional pipe Ø 12 mm	8 x 3 m
Min. distance between 2 air sampling openings (d)	4 m
Max. distance between 2 air sampling openings (d)	10 m
Max. number of air sampling openings (n) per pipe system	8 units

Double U-Pipe System	Air sampling opening	Number of air sampling openings	
		4	8
Ø of air sampling openings in mm ^a	A	4.4	3.0
	B	-	3.2

^a Punch diameter of the aspiration reducing film sheet

Double U-pipe system activation thresholds

Double U-pipe system	Number of obstructed air sampling openings	Number of air sampling openings	
		4	8
Activation threshold per pipe system	1 obstructed opening	± 15%	-

2 obstructed openings	± 30%	± 15%
3 obstructed openings	0	± 25%
4 obstructed openings	0	± 35%
5 obstructed openings	0	0
6 obstructed openings	0	0
0 not practical - not possible		

Example:

If 3 of a total of 8 air sampling openings are found to be obstructed, airflow monitoring must be set to ± 25% using the FAS-ASD-DIAG Diagnostic Software.



Notice!

When planning in accordance with EN 54-20 or ISO 7240-20, airflow monitoring must always be set to 20%.

4.8 Simplified pipe planning

Simplified planning is used for equipment protection and in premises with smaller dimensions. The benefit of this type of planning is the standard diameters of the suction openings.


Planning is to be carried out according to regulations specified in Standard Pipe Planning. Additionally, the following limiting values and opening diameters must be observed. An additional accessory (air filter, condensate separator etc.) can have an effect on the maximum pipe length.

4.8.1 I-Pipe System - Simplified Planning

<p>1 Pipe System</p> <p>FAS-420-TM FAS-420-TM-R FAS-420-TM-RVB</p>	<p>I-pipe System, e.g. for equipment protection</p>	
Limiting values	Min. distance FAS-420-TM – 1st air sampling opening	2 m
	Max. distance FAS-420-TM – 1st air sampling opening	20 m
	Max. total pipe length per pipe system	
	– Pipe Ø 25 mm	40 m
	– Additional pipe Ø 12 mm	5 x 3 m
	Max. total pipe length per pipe system for a fan voltage < 10.5 V	
	– Pipe Ø 25 mm	30 m
	– Additional pipe Ø 12 mm	5 x 3 m
	Max. number of air sampling openings (n) per pipe system	5 units
	Min. distance between 2 air sampling openings	0.1 m

	Max. distance between 2 air sampling openings	4 m
	Min. distance between 2 air sampling openings for fire source identification	3 m
I-pipe system	Number of air sampling openings	
	1	2
	3	4
	5	
Ø of all air sampling openings in mm ^a	6.8	4.6
	4.0	3.6
	3.4	
^a Punch diameter of the aspiration reducing film sheet		

4.8.2 U-Pipe System - Simplified Planning

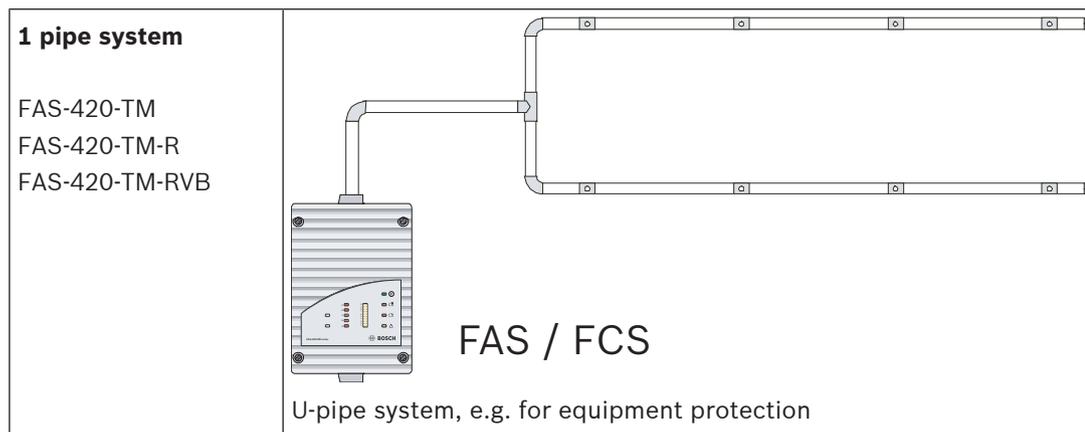


Limiting values	Min. distance FAS-420-TM – T-fitting	2 m
	Max. distance FAS-420-TM – T-fitting	20 m
	Max. branch length	25 m
	Max. total pipe length per pipe system	
	– Pipe Ø 25 mm	50 m
	– Additional pipe Ø 12 mm	8 x 3 m
	Max. total pipe length per pipe system for a fan voltage < 10.5 V	
	– Pipe Ø 25 mm	40 m
	– Additional pipe Ø 12 mm	8 x 3 m
Max. number of air sampling openings (n) per pipe system	8 units	
Min. distance between 2 air sampling openings	0.1 m	
Max. distance between 2 air sampling openings	4 m	

U-pipe system	Number of air sampling openings			
	2	4	6	8
Ø of all air sampling openings in mm ^a	6.0	4.2	3.4	3.0

^aPunch diameter of the aspiration reducing film sheet

4.8.3 M-pipe System - Simplified Planning

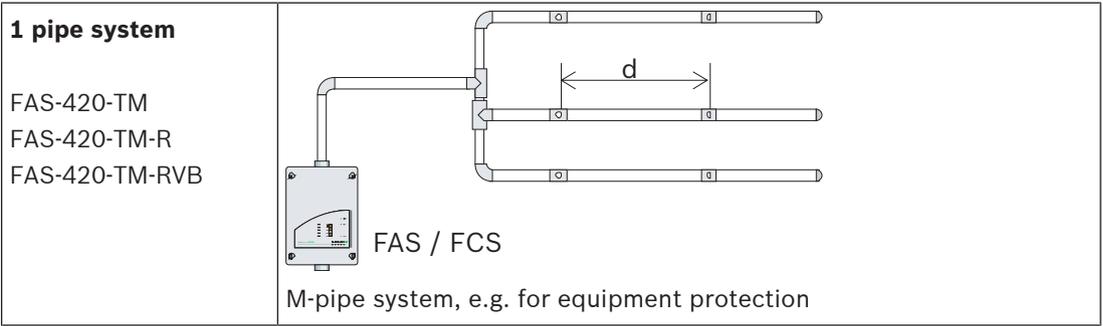


Limiting values	Min. distance FAS-420-TM – T-fitting	2 m
	Max. distance FAS-420-TM – T-fitting	20 m
	Max. branch length	16.5 m
	Max. total pipe length per pipe system	
	– Pipe Ø 25 mm	50 m
	– Additional pipe Ø 12 mm	8 x 3 m
	Max. total pipe length per pipe system for a fan voltage < 10.5 V	
	– Pipe Ø 25 mm	40 m
	– Additional pipe Ø 12 mm	8 x 3 m
Max. number of air sampling openings (n) per pipe system	6 units	
Min. distance between 2 air sampling openings	0.1 m	
Max. distance between 2 air sampling openings	4 m	

M-pipe system	Number of air sampling openings	
	3	6
Ø of all air sampling openings in mm^a	5.0	3.6

^aPunch diameter of the aspiration reducing film sheet

4.8.4 Double U-Pipe System - Simplified Planning

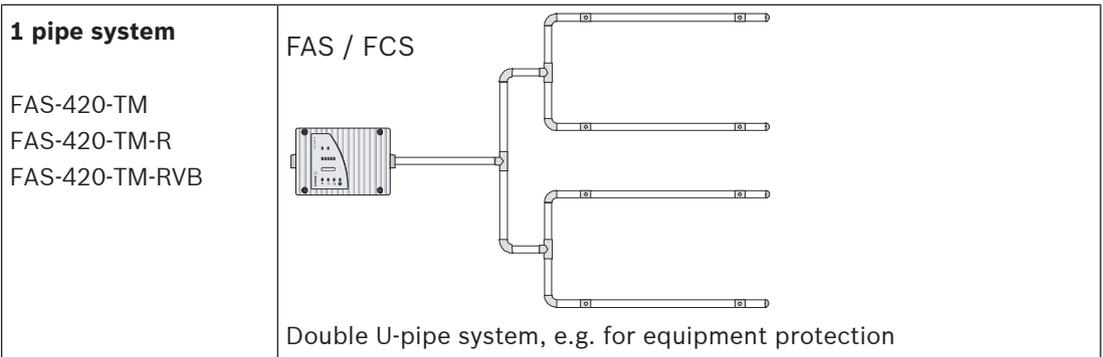





Limiting values	Min. distance FAS-420-TM – last T-fitting	2 m
	Max. distance FAS-420-TM – last T-fitting	20 m
	Max. branch length	12.5 m
	Max. total pipe length per pipe system	
	– Pipe Ø 25 mm	50 m
	– Additional pipe Ø 12 mm	8 x 3 m
	Max. total pipe length per pipe system for a fan voltage < 10.5 V	
	– Pipe Ø 25 mm	40 m
	– Additional pipe Ø 12 mm	8 x 3 m
Max. number of air sampling openings (n) per pipe system	8 units	
Min. distance between 2 air sampling openings	0.1 m	
Max. distance between 2 air sampling openings	4 m	

Double U-pipe system	Number of air sampling openings	
	4	8
Ø of air sampling openings in mm ^a	4.4	3.0
^a Punch diameter of the aspiration reducing film sheet		

4.8.5

Project planning with branch pipes

Project planning with branch pipe are suitable for sampling points which are located distantly from the main run of the pipe system.

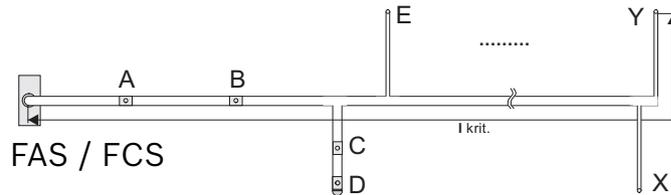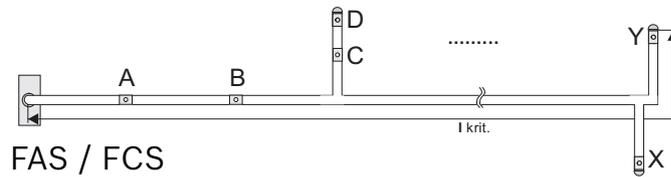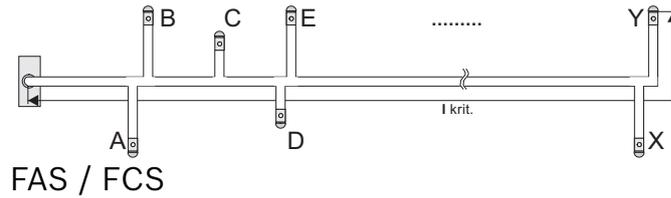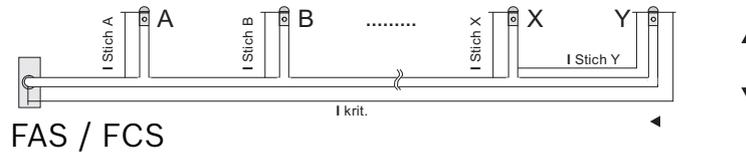


The branch pipes must be projected in accordance to the figure (project planning with branch pipes). The project planning of I-pipe described in the figure must be copied to every single sampling branch of other pipe forms (U, M, double-U pipe system).

Referring to the project planning with burs please notice that the “critical length” (Ikrit.) of a project planning does not exceed the maximum total length of pipe respectively of branch (referring to U, M, double-U pipe system). The critical length described the sampling point which is located most distantly from FAS-420-TM.

Two aspiration apertures in total can be projected on each branch pipes at which the minimal and maximum distance between the aspiration apertures must be respected.

Opening diameter


The opening diameters are valid for the projected aspiration apertures in accordance with the chapter „Opening diameter for standard project planning“.

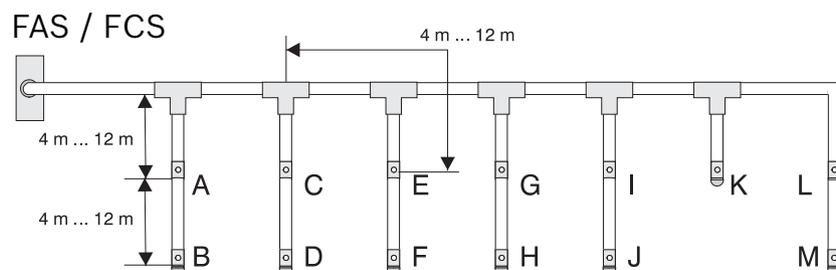

Distances of apertures

The distance between the T-piece and the following branch pipe as well as the pipe length between aspiration apertures on the branch pipes must not exceed 12 m in total.

FAS / FCS

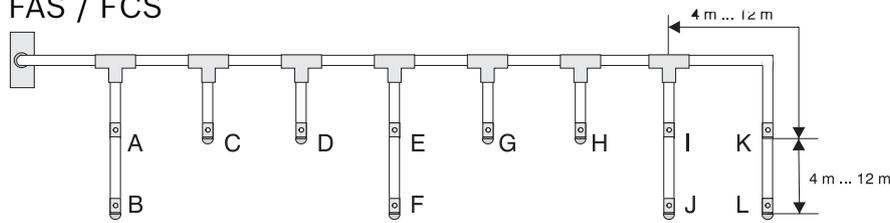

Maximum length of branch pipe

The length of pipe between the last T-piece and the last aspiration apertures is the length of branch pipe. All other branch pipes need to be shorter. Two aspiration apertures in total can be projected on each branch pipe.

If the maximum distance is exceeded a correction by an additional aspiration aperture on a branch pipe can be done. In this connection please notice that two aspiration apertures in total can be projected on each branch pipe.



Notice!

When the fire location (ROOM IDENT) localization must only be one aspiration aperture per branch pipe can be projected. At least 3 m distance must be maintained between the suction port of the first branch pipe and each configured subsequent aspiration aperture.

4.9


Planning for forced airflow

Monitoring the air-conditioning ducts

Air-conditioning units are broken down into low and high-speed units (see table below). The details provided in this chapter apply only to low-speed units. There are no adequate empirical values available for high-speed units. Hence, smoke trials must be executed for air-conditioning ducts with flow speeds above 10 m/s, in order to determine optimal response behavior.

Air-conditioning ducts		Low-speed units	High-speed units
	Flow speed	Maximum 6 to 10 m/s	> 10 m/s
	Duct cross-section	Large	Small
	Difference pressures along the flow direction	Low	High

The speed distribution in an air-conditioning duct appears as follows:

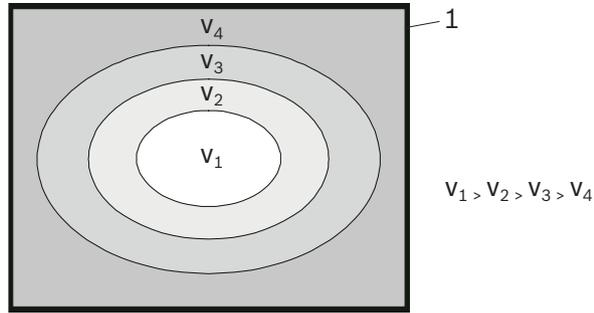

- 1 Air-conditioning duct
- $V_1 - V_4$ Flow speed

Speed distribution in an air-conditioning duct


Aspiration

To achieve optimal detection results, the pipe system should be organized into the areas v_1 to v_3

Installation location of the pipe system


The exhaust duct should be selected as the installation location of the pipe system, as far as possible away from the sound dampers, air baffles and bends. The distance from obstacles of this kind should be at least three times the smallest duct diameter.

If it is absolutely essential to install the pipe system directly behind air baffles, sound dampers or bends; the main speed ranges must be monitored (see Installation location of the pipe system /Installation location of the pipe system).

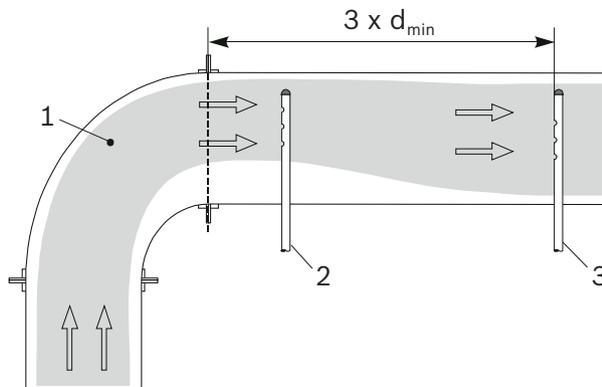

- 1 Main speed range
- 2 Exceptional arrangement of the pipe system (if distance of $3 \times d_{min}$ cannot be observed)
- 3 Typical pipe system arrangement
- d_{min} Smallest duct diameter

Direction change of the duct without air baffles

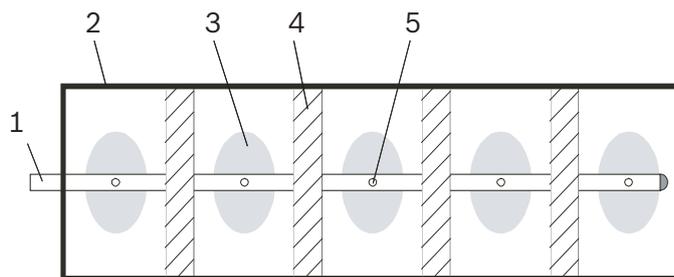


- 1 Smoke aspiration pipe
- 2 Air-conditioning duct
- 3 Main speed range
- 4 Sound dampers
- 5 Bore

Sound dampers in a duct

When installing a pipe system in air-conditioning ducts, the following must be observed:

- Since the FAS-420-TM and the pipe system are located in different pressure ranges, an air return pipe (see Installation location of the pipe system) must be provided.
- The pipe entries into the duct must be airtight.
- The portion of the pipe system that is outside the duct must be sealed airtight.

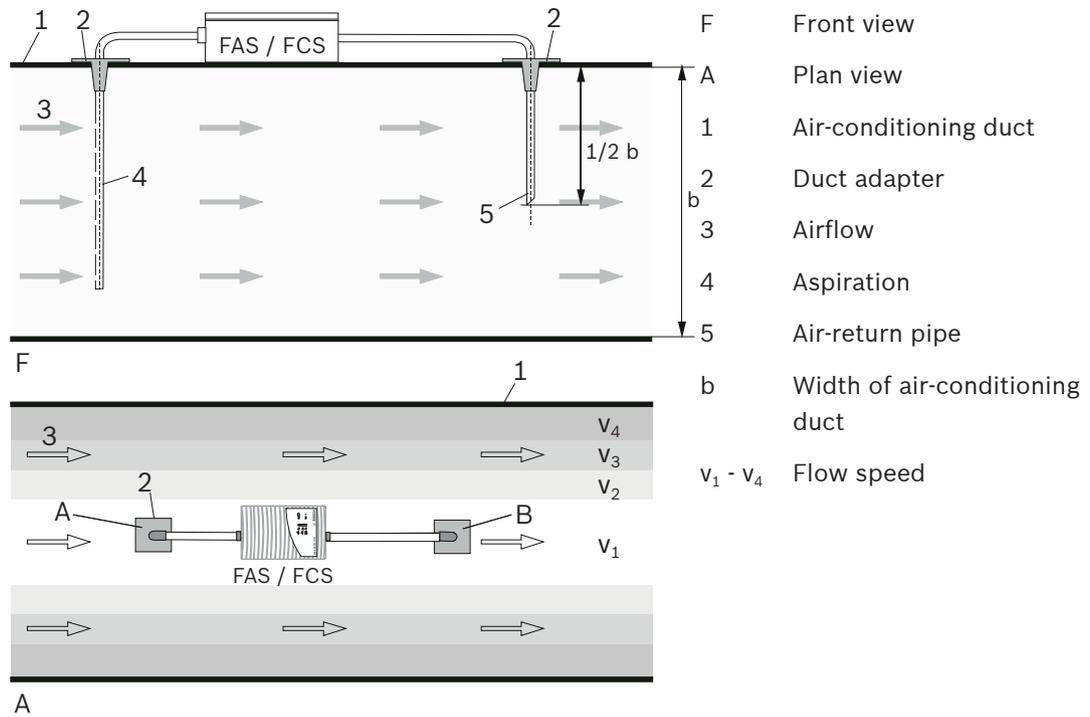

A
Air-return pipe

The open end of the air-return pipe is sloped at an angle of 45°.

The distance of the air sampling openings to one another and to the duct wall is represented in the following table.

Bore distances	Duct cross-section	
	≤ 0.5 m ²	> 0.5 m ²
Distance of the air sampling openings to the wall	100 to 200 mm	200 to 300 mm
Distance of the air sampling openings to one another	100 mm	150 mm

Diameter of the air sampling openings

The diameter of the air sampling openings is derived from the number of air sampling openings. The precise value can be obtained from Simplified pipe planning.

The pipe is closed with an end cap without bore hole.


Arrangement

The air sampling openings must face the airflow.

Note when planning that the air-conditioning ducts are often only accessible from two sides for installation of the pipe system.

Example

The figure below shows two planning examples of pipe systems in air-conditioning ducts.

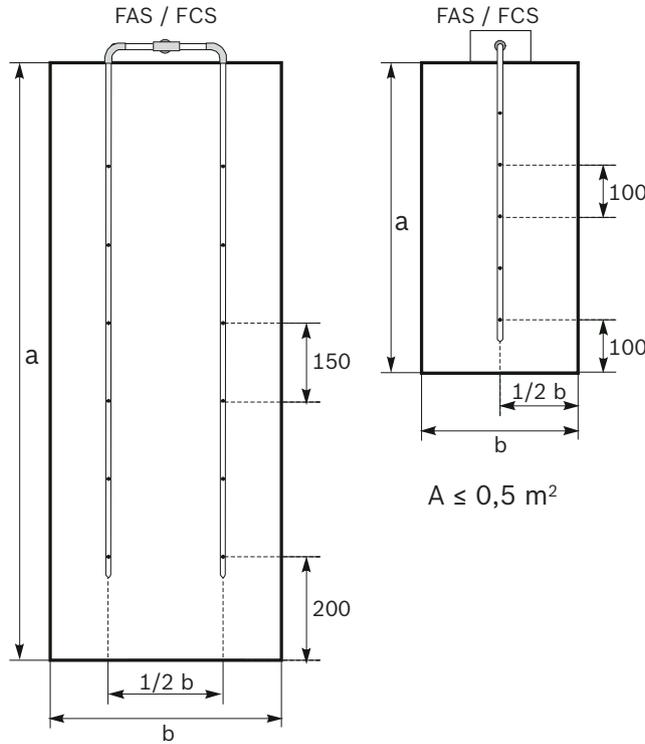

- A Cross-sectional area of duct (with $A = a \times b$)
- a Height of air-conditioning duct
- b Width of air-conditioning duct

$A > 0,5 \text{ m}^2$

Ducts with small and large duct cross-sections

4.10 Planning with air sampling hose

The application of air sampling hose FAS-ASD-PHF16, PG16 can be useful if several direction changes on a short distance of a pipe system is required, e. g. for avoiding any obstacles. As the transport time can be manipulated negatively by application of an air sampling hose, the influence of the used air sampling hose is to be determined on the allowed total length of pipe as follows.

Consideration during application of air sampling hose:

For calculation the maximum length of air sampling pipe with air sampling hose, the length of the air sampling hose must be multiplied by 1.1 and deducted from the allowed total length of pipe.

$$\text{Air sampling pipe length} = \text{Total pipe length} - (\text{Length of the air sampling hose} * 1.1)$$



Notice!

If you use type SCH-P25 for any special project design, you have to use factor 0.5.

Example 1: Altogether, the air sampling hose of type FAS-ASD-PHF16 with a length of 12 m shall be connected to a FAS/FCS aspirating smoke detector. The allowed total length of pipe is 50 m. The result for the maximum air sampling pipe inclusive air sampling hose is:

$$\text{Air sampling pipe length} = 50 \text{ m} - (12 \text{ m} * 1.1) = 36.8 \text{ m}.$$

Example 2: In case of a pipe project planning, 45 m of air sampling pipe and air sampling hose shall be connected to a FAS/FCS aspirating smoke detector. In accordance to the project planning scale, the allowed total length of pipe can be 50 m for the complete pipe project planning. The result for the maximum length of the complete air sampling hose of type FAS-ASD-PHF16, which can be integrated within the pipe project planning, after formula adjustment is:

$$\begin{aligned} \text{Length of the air sampling hose} &= (\text{Total pipe length} - \text{Air sampling pipe length}) / 1.1 \\ \text{Length of the air sampling hose} &= (50 - 45 \text{ m}) / 1.1 = 4.55 \text{ m} \end{aligned}$$



Notice!

The complete air sampling pipe must not consist of a single air sampling hose. Aspiration reduction must not put about the air sampling hose.

4.11

Planning with air return

In some cases, in which differences of air pressure between the area of air sampling device and the area of air sampling point exist, a channel of air pressure of the aspirated test air in the pressure area of air sampling points can be necessary. Therefore, an air sampling hose with a right length should be connected on the air outlet of the air sampling device. As the transport time of an air sampling smoke detection device can be manipulated negatively by an air return, the influence of the air return to the allowed total length of pipe is to be respected.

An air return with a pipe with \varnothing 40 mm has no influence and can be projected and/or retrofitted without reducing the total pipe length and / or retrofitted.

Consideration of air returns:

For calculation the maximum length of air sampling pipe, the length of the air return must be multiplied by the certain factor a) and deducted from the allowed total length of pipe.

$$\text{Air sampling pipe length} = \text{Total pipe length} - (\text{Length of the air return} * \text{Factor a})$$

Factors to calculate the lengths of air return (\varnothing 25 mm):

Length of the air return	Factor a
0 – 5 m	0.0
> 5 – 10 m	1.6
> 10 – 25 m	3.2

Factors to calculate the lengths of air return (\varnothing 32 mm):

Length of the air return	Factor a
0 – 5 m	0.0
> 5 – 10 m	0.0
> 10 – 25 m	1.0

Example: An air return (\varnothing 25 mm) from 10 m to be connected to a FAS/FCS. The allowed total length of pipe is 50 m. The result for the maximum air sampling pipe is:

$$\text{Air sampling pipe length} = 50 \text{ m} - (10 \text{ m} * 1.6) = 48.4 \text{ m}$$

4.12 Power Supply

To measure the power supply, the detector-ready state of the security system and the alarm case are regarded. When the system is ready to detect, the power supply must provide the standby current for the aspirating smoke detectors and ensure the emergency power rechargeable battery is charged in accordance with DIN VDE 0833, part 1 (80% charged in 24 hrs).

The current in the event of an alarm is calculated according to the following formula:

Calculation of current for space protection

$$I_g = I_A \cdot n_{\max} + I_Q \cdot (n - n_{\max}) \leq I_{PS\max}$$

Equipment protection

$$I_g = I_A \cdot \sqrt{n} + I_Q \cdot (n - \sqrt{n}) \leq I_{PS\max}$$

Charging current

The power for charging the rechargeable battery is calculated with the following formula:

$$I_L = \frac{0,8 \cdot K_n}{24}$$

$$I_g = I_Q \cdot n + I_L \leq I_{PS\max}$$

where

I_g	=	Total current of all connected aspirating smoke detectors in [A]
I_A	=	Alarm current of an aspirating smoke detector in [A]
I_Q	=	Standby current of an aspirating smoke detector in [A]
$I_{PS\max}$	=	Max. power supply of the network power supply in [A]
I_L	=	Charging current of the rechargeable batteries (80% of the nominal capacity within 24 hours) in [A]
K_n	=	Rated capacity of the rechargeable battery in [Ah]
n	=	Total number of connected aspirating smoke detectors
n_{\max}	=	The highest number of aspirating smoke detectors in one detection zone



Notice!

The power supply units are laid out using the calculated total current I_g with the highest value.

Please refer to *Technical specifications, page 7* for the current consumption of the FAS-420-TM.

Line calculation

The maximum line length is derived from the permissible voltage drop on the supply line. The permissible voltage drop is the difference between the end-point voltage of the backup battery (21.5 V) and the lower operating voltage limits of the aspirating smoke detectors.

$$L_{\max} = \frac{\gamma \cdot \Delta U \cdot A}{I_g \cdot 2}$$

where

L_{max}	=	Maximum line length in [m]
A	=	Strand cross-section in [mm ²]
I_g	=	Total current of all connected aspirating smoke detectors in [A]
γ	=	Conductivity: Cu=57 m/Ω mm ²
ΔU	=	Charging current of the rechargeable batteries (80% of the nominal capacity within 24 hours) in [A]

To guarantee the impermeability of the housing, the corresponding cable bushing must be selected for the existing cable:

- M 25 cable bushing: Ø 9-14 mm
- M 20 cable bushing: Ø 8-12 mm

Emergency power calculation

The rated capacity is calculated according to the following formula:

$$K_n = (I_Q \cdot n \cdot t + I_g \cdot 0,5h) \cdot 1,25$$

K_n	=	Rated capacity of the backup batteries in [Ah]
I_Q	=	Standby current of an aspirating smoke detector in [A]
n	=	Total number of connected aspirating smoke detectors
t	=	Required bridging time in [hrs]
I_g	=	Total current of all connected aspirating smoke detectors in [A]

The factor 1.25 used in the formula is only applicable with bridging times ≤ 24 hours.

5 Installing the Aspiration smoke detector

5.1 General

The regulations, guidelines and provisions described in *Regulations, page 30* apply.

The following must be observed when installing the FAS-420-TM Aspirating Smoke Detector:

- Do not interfere with, modify or convert the equipment. If adjustments cannot be avoided, consult with the operator, the unit manufacturer and/or the supply company.
- All changes to the house mains (230 V/400 V supply) and to third-party systems must be executed by the builder. This includes e.g.
- Primary connection of the mains charger
- Carrying out any potentially essential lightning and surge protection measures in compliance with relevant standards



Warning!

The equipment may only be installed by authorized and qualified personnel!
Switch off the unit before carrying out any connection work!

5.2 Setting the detector address

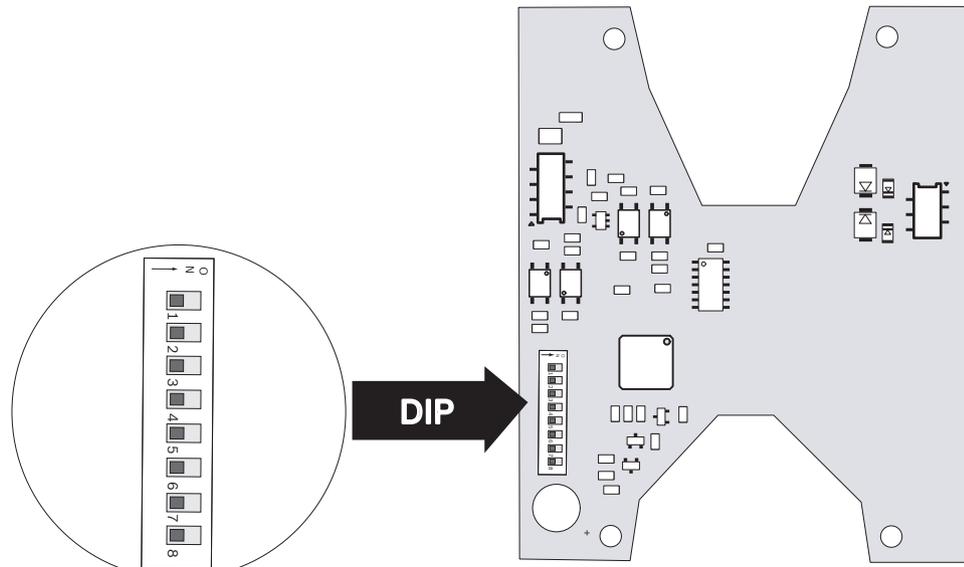


Figure 5.1: Setting the detector address

The Aspiration smoke detector address is set using the 8-pin DIP switches on the PC board and a suitable sharp object. The default address is 0 (all DIP switches to off).

The DIP switch settings for all approved addresses are listed in the table in the Appendix on *Appendix, page 88* (0= off, 1= on).

Address (A)	Operating mode	Network structure		
		Loop	Stub	T-tap
0	Automatic address assignment in "improved version" LSN mode	X	X	-
1 to 254	Manual address assignment in improved version LSN mode	X	X	X
255 = CL	Automatic address assignment in classic LSN mode (address range: max. 127)	X	X	-
x = possible, - = not possible				



Notice!

It is not permitted to use different operating modes in one loop/stub/T-tap next to each other.


5.3 Installing the unit



Notice!

When selecting the installation location, ensure that the LEDs are easily visible. Remember when planning that the unit fans generate a noise level of approx. 40 dB(A). In order to prevent damage to the device, ensure that the installation location is not in a door opening area.

The aspirating smoke detector can be installed with the aspiration device pointing upwards or downwards. Turn the detector module in the cover by 180° as applicable.

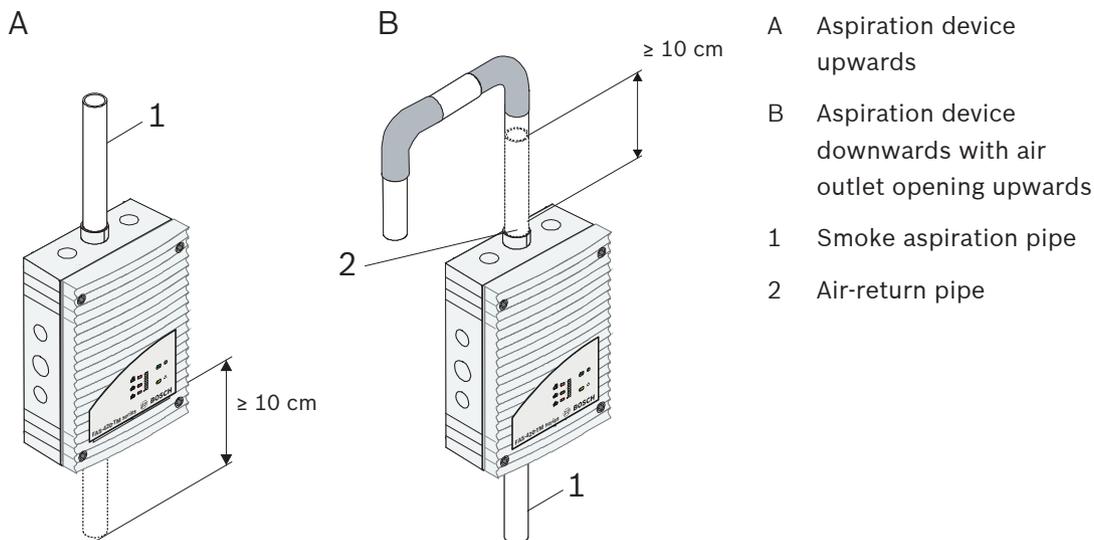


FAS-420-TM installation

- Aspiration from above
Ensure that the air outlet of the aspiration smoke detector is not obstructed. Maintain a distance of at least 10 cm between the air outlet of the FAS-420-TM and the surrounding objects (e.g. wall).
- Aspiration from below
If the air-return pipe is directed upwards, it must be guaranteed that no foreign bodies or dripping water can penetrate the air return. You should therefore use a short, downward angled pipe.

Turning the detection module in the cover

In order to turn the detection module in the cover of the FAS-420-TM detection unit by 180°, proceed as follows:

- Remove the four screws (see figure below for positions).
- Now turn the cover and fasten the detection module again with the four screws.

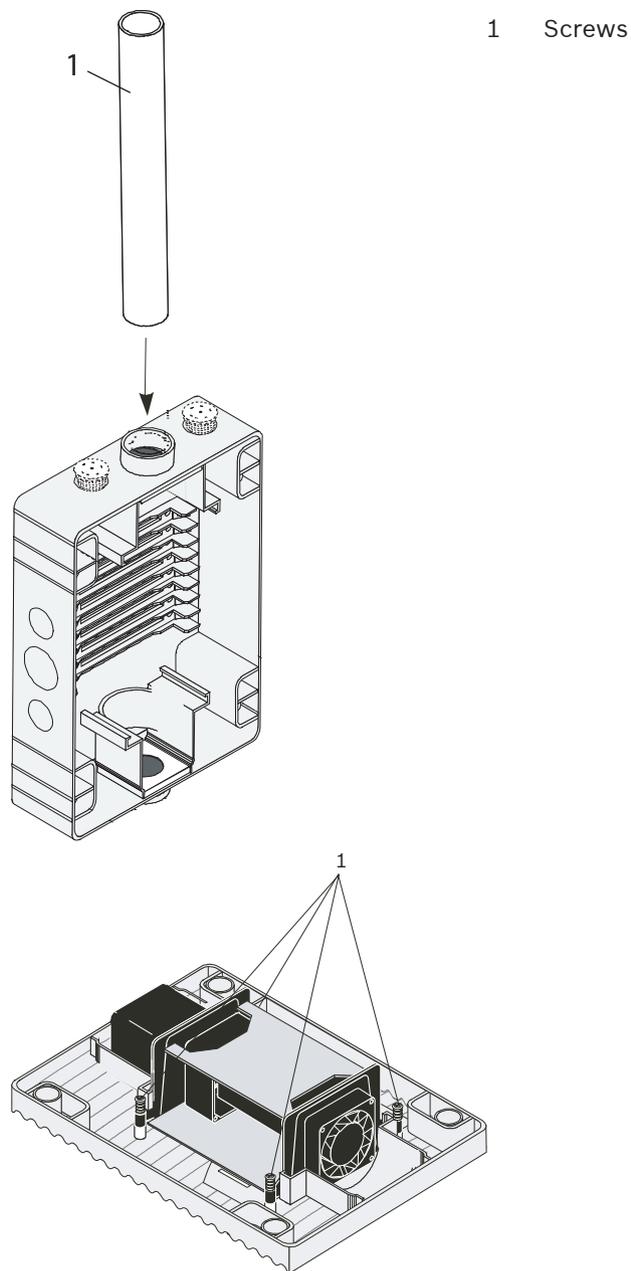

Turning the detection module in the cover of the FAS-420-TM detection unit

Installation material

Cylinder or flat head screws
- Maximum thread diameter: 4 mm
- Head diameter: max. 8 mm

Bore distances

The distances of the borings for securing the FAS-420-TM are shown in the figure below.


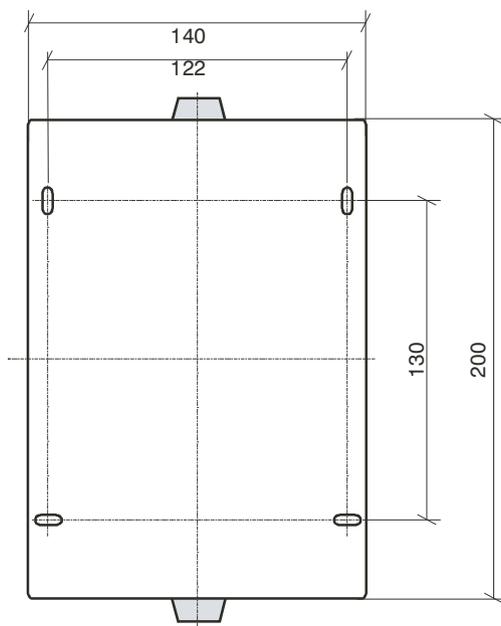


Figure 5.2: Bore distances of FAS-420-TM housing base

1. First, clearly mark the fixing points on the installation position provided on the equipment. To guarantee a safe and low-vibration hold, the housing base must be secured with four screws.
2. Fix the housing base to the surface by means of four screws in accordance with the mounting type. Make sure that the housing base is not fixed under mechanical tension and that the screws are not tightened too much. Otherwise, the device might be damaged or undesirable secondary noise may arise.

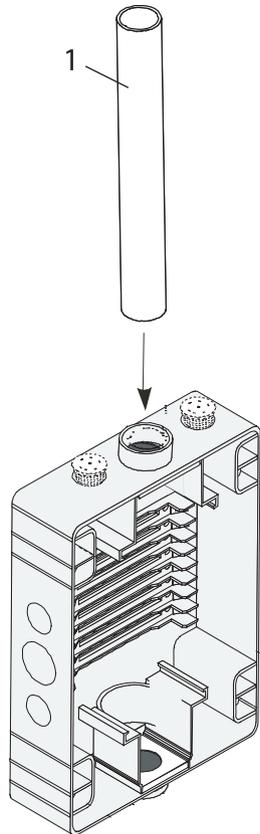

1 Smoke aspiration pipe

Connecting the aspiration pipe to the FAS-420-TM Aspirating Smoke Detector

- To connect the aspiration pipe to the FAS-420-TM , insert it into the pipe connection provided (see Installation).



Notice!

Do not use glue to connect the aspiration pipe and pipe connection.


In the event of sharp temperature fluctuations, the pipe must be fixed immediately in front of the unit so that the pipe does not pull out of the pipe connection when the length changes (see *Length Change of the Pipe System, page 67*).

- Insert the detector module into the pre-mounted housing base. When doing this, be aware of the mechanical coding, which protects the device against twisting. Tighten the four screws of the detector module using a screwdriver (see Installation).



Caution!

The components on the PC boards must be protected against damage from electrostatic charging.

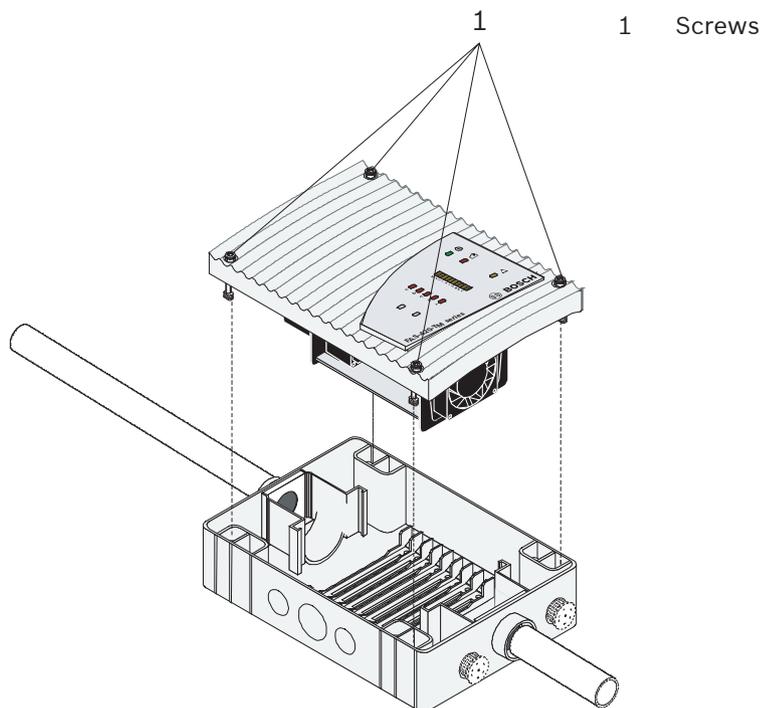

Replacing the detector module of the FAS-420-TM

Refer to

– *Length Change of the Pipe System, page 67*

5.4 Connection to the fire panel

5.4.1 Electrical Connection



Caution!

Switch off the unit before carrying out any connection work!



Proceed as follows to prepare the electrical connections:

1. Using a screwdriver, carefully punch out the required cable entries from the housing base.
2. Fit the cable entry point(s) as required with M20 or M25 cable entries by pushing them into the corresponding cable bushings. 2 x M20 and 1 x M25 cable entries are supplied in the pack.
3. Punch out the cable entries using a sharp object.
Caution: Do not cut the cable entries with a knife!
4. Feed the connection cable(s) (max. 2.5 mm²) through the prepared M20 or M25 cable entries into the device and cut to the required length inside the device.
5. Wire the unit according to the connection information described below.



Notice!

The units are usually connected to an additional power supply. When connecting to a Bosch fire panel LSN improved version, the voltage is supplied via the AUX outputs of the Battery controller module. Alternatively, an external mains unit (e.g. FPP-5000 or UEV 1000) can be used.

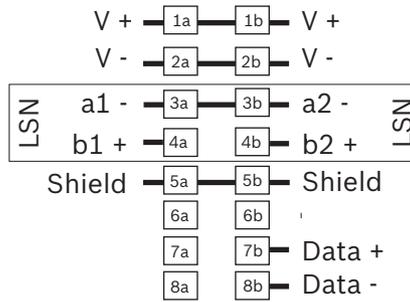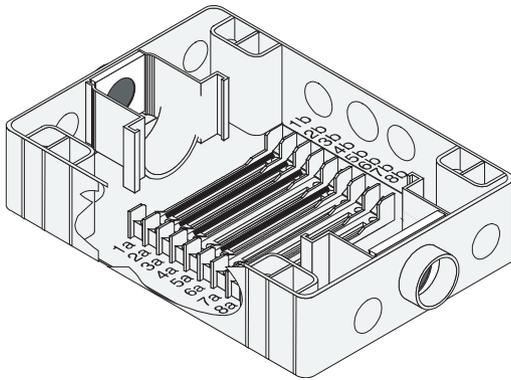

Designation	Cable	Function
V+	Red	Additional power supply, incoming
V-	Black	
V+	Red	Additional power supply, outgoing
V-	Black	
a1-	White	LSN a, incoming
b1+	Yellow	LSN b, incoming
a2-	White	LSN a, outgoing
b2+	Yellow	LSN b, outgoing
Shield	-	Shield wire
Data+	-	Data line connection for digital external detector alarm display*
Data-	-	
*Digital external detector alarm displays for the FAS-420-TM series must be ordered separately.		

5.4.2 LSN Configuration

Once the aspiration smoke detector has been connected to the LSN, the detector and detector unit are configured using the fire panel programming software via a laptop connected to the fire panel. Information on the LSN configuration can also be found in the Online Help feature of the programming software.

Notes on diagnostics data for the fire panel are contained in the operation guide for the fire panel.

5.4.3 Parameter Settings via Programming Software

The parameters for each detection unit are specified in the relevant "Sensor" dialog window via drop-down fields. The default settings are marked in bold below (see tables).

You can set the following parameters:

Detector module



Notice!

The DM-TM-50 Detector Module is installed as standard in all FAS-420-TM series devices and appears as a default setting. Please do not change this!

Sensitivity	Further sensitivity
0.5%/m	A second sensitivity can be set, e.g. for day/night mode. For adjustable sensitivity levels, see left.
1%/m	
2%/m	
Programmable*	

Activation threshold for airflow malfunction	Alarm delay
20%	10 sec
30%	30 sec
50%	60 sec
Programmable*	Programmable*

Airflow Fault Delay	Fan voltage	LOGIC×SENS Filter
30 sec	9 V	on
100 sec	10.5 V	
15 min	12 V	off
Programmable*	Programmable*	

* **Programmable**= select this option in order to perform further settings via the FAS-ASD-DIAG Diagnostic Software.



Notice!

When the fire panel is in revision operation, the LOGIC×SENS is temporarily deactivated. This allows the detector module to be checked quickly and directly.

The activation threshold for the airflow malfunction is set to 20% volume flow change by default. Higher values are not permitted within EN 54-20 or ISO 7240-20.

Fire source identification

With the device variants FAS-420-TM-R and FAS-420-TM-RVB, it is possible to assign each of the five monitored rooms a designation. To do this, click on the corresponding room and enter the designation for this room in the "Label" field. The designation can be a maximum of 31 characters. In the event of a fire, this designation is displayed on the fire panel's operating and display unit, making it possible for the fire source to be clearly pinpointed.

5.4.4

Settings via the FAS-ASD-DIAG Diagnostic Software

The settings described below only refer to the device variants FAS-420-TM-R and FAS-420-TM-RVB.

Fire source identification




Notice!

The term "ROOM×IDENT" is used in the FAS-ASD-DIAG Diagnostic Software for identifying the fire source.

Fire source identification is activated/deactivated using the FAS-ASD-DIAG Diagnostic Software via the "Settings" screen. The "ROOM×IDENT" function is deactivated as standard.

5.5 Data logging

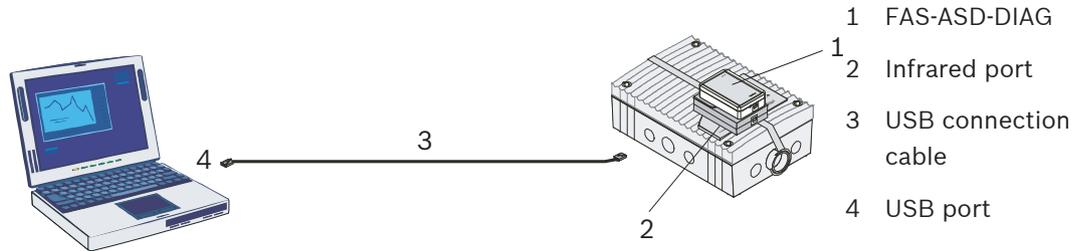

Connecting a PC to the FAS-420-TM

The FAS-ASD-DIAG Diagnostic Software is used to conduct the device tests. The current airflow sensor data, smoke level values, various status values and the parameters configured via the programming software can be read out locally using a laptop. This makes it much easier to detect altered operation conditions in the event of service being carried out. The data is read out via the infrared port of the FAS-420-TM to the diagnostic appliance. The diagnostic appliance can be secured to the aspirating smoke detector with a unit mounting or be kept in a straight line ($\pm 10^\circ$) with the infrared port at a distance of up to 3 m. The supplied USB cable connects the diagnostic appliance to the USB port of the PC/laptop (see figure above).

The data that is read out is stored in the appliance for 72 hours for diagnostic purposes.



Notice!

For correct color display, the monitor used and the graphics card must be able to display more than 256 colors.

6 Installation of the pipe system

At the very least, the pipes and fittings used for the pipe system must comply with class 1131 according to EN 61386-1, 2004. Class 1131 requires the following of the pipe system in use:

Features	Severity
Compression resistance	125 N
Shock resistance	0.5 kg, drop height of 100 mm
Temperature range	-15 °C to +60 °C

The pipe system must be constructed using the following pipes and the associated fittings:

	Exterior diameter	Internal diameter	
		ABS	PVC*
Smoke aspiration pipe	25 mm	21.4 mm	21.2 mm

* PVC pipes do not correspond to the temperature range given above.



Notice!

When constructing the pipe system, observe the temperature range specified in *Pipe system, page 29*.

Installation instructions

The pipe system must be constructed according to planning specifications and taking into account the planning guidelines (see *Planning, page 30*).

1. Shorten the pipes with a pipe-cutter (38 mm) or a metal saw. Deburr the joints and clean up the chips.
2. Before gluing, clean the adhesion points with the prescribed cleaning agent (Tangit) to remove dirt and grease. Use the Tangit adhesive to glue the pipe transitions with the appropriate fittings so that they are airtight.



Notice!

If halogen-free plastics must be used, the installation procedures may vary depending on the selected material:

ABS is glued

Polypropylene (PP) is welded

Polyamide (PA) is pushed together and bolted.

3. Minimize pipe lengths and changes of direction. Pipe elbows have an extremely high flow resistance. Therefore, they should only be used where they cannot be avoided for structural engineering reasons. If necessary, reduce pipe lengths in proportion to the pipe elbows used.



Notice!

Pipe bends must be given preference over pipe elbows. Too many bends and pipe elbows reduce the air speed in the aspiration pipe, thereby increasing the detection time.

A 90° pipe elbow corresponds to a straight pipe length of 1.5 m. Because of this, the maximum total length of the pipe system is reduced by 1.5 m.

4. Fix the pipe system. It must not sag or be possible to move it. Fasten the pipes with pipe clips without rubber inserts. The distance between the pipe clips should not exceed 80 cm. At high temperatures, reduce the distance between the pipe clips to a maximum of 30 cm.



Notice!

Do not use pipe clips with rubber inserts since these do not allow length extensions and the pipe system could thus bend or even tear.

5. Close open pipe ends with an end cap.



Notice!

On completion, test the pipe system:

For tightness

For fault-free connections

For correct planning of the air sampling openings.

Refer to

– *Pipe system, page 29*

6.1 Length Change of the Pipe System

Length changes (extensions and reductions) of the pipes are caused by temperature changes. Temperature increases cause lengthening of the pipes, temperature drops cause shortening of the pipes. The length change must be given particular consideration if the temperature of the pipe system at the time of installation deviates from the normal operating temperature.

The length change can be calculated using the following formula:

$$\Delta L = L \cdot \Delta T \cdot \delta$$

where

- ΔL = Length change in [mm]
- L = Length of the pipe to be calculated in [m]
- ΔT = Maximum temperature difference in [°C]
- δ = Length change coefficient in [mm/m x °C]
- δ_{PVC} = 0.08 mm/m x °C
- δ_{ABS} = 0.101 mm/m x °C

For example, a temperature change of 10 °C on a 10 m-long PVC pipe causes a length change of 8 mm.

Mounting clamps

PVC pipe clips are used as standard for installing the pipe system. These clips do not allow any length extensions.



Overview of mounting clamps

- 1 Standard mounting clamps for 25 mm pipe
- 2 Plastic mounting clamps for 25 mm pipe, for length changes and temperatures of up to -40 °C
- 3 Spring steel clamp for 25 mm pipe, for high-rise warehouses and temperatures of up to -40 °C

6.2 Air sampling openings



Example of an aspiration boring with aspiration reducing film sheet


- 1 Smoke aspiration pipe
- 2 Aspiration reducing film sheet with air sampling opening
- 3 Marking tape for aspiration reducing film sheet
- 4 Air sampling opening
- 5 Fire red (RAL 3000)
- 6 Transparent

Air sampling openings

Select the structure of the air sampling opening (aspiration boring) and the position in the pipe system according to the project specification and taking into account the planning guidelines.

Aspiration borings

- Bore an aspiration boring with a 10 mm drill at a right angle to the pipe.
Deburr the boring carefully and remove chips.
Clean the boring area (across the entire span of the pipe) of grease and dust, e.g. with Tangit cleaning agent.
- Select the size of the aspiration reducing film sheet according to the specifications.
Glue the aspiration reducing film sheet to the opening.
- Glue the marking tape over the aspiration reducing film sheet, in order to prevent the film sheet from becoming detached.

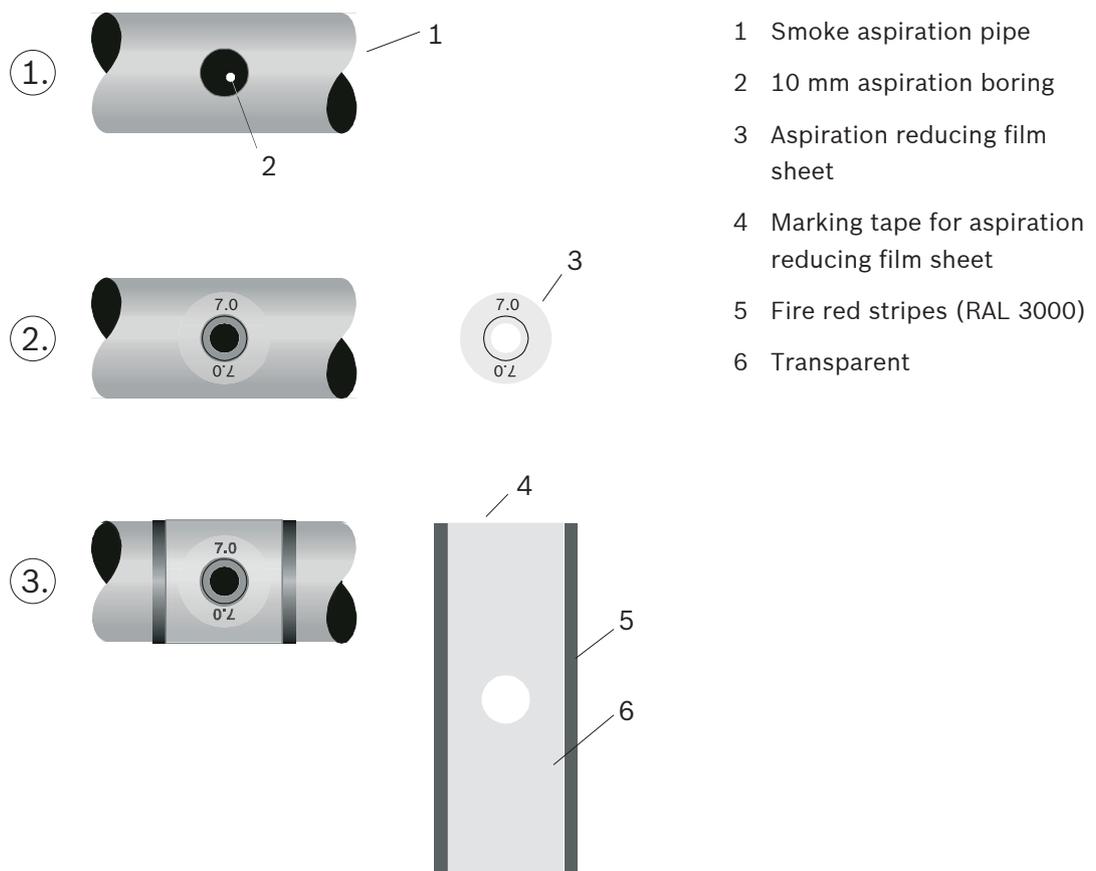

Applying the aspiration reducing film sheet




Notice!

The holes of the aspiration reducing film sheet and the marking tape must be exactly over the aspiration boring so that the opening diameter of the aspiration reducing film sheet is not changed.

To keep the adhesive surfaces of the film sheets free of dust and grease, avoid touching them.

6.3 Ceiling Lead-through

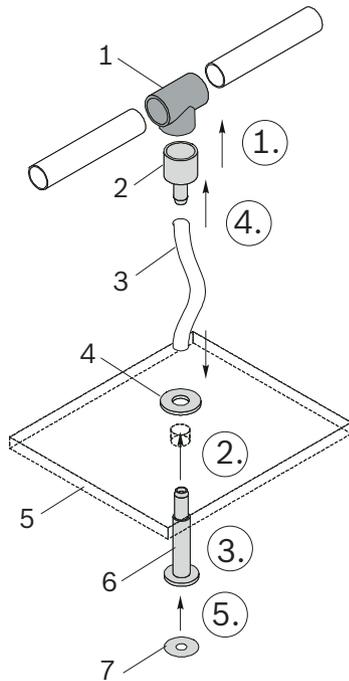

- 1 T-fitting
- 2 Hose connection for ceiling lead-through
- 3 Aspiration hose for ceiling lead-through
- 4 Ceiling lead-through nut
- 5 False ceiling
- 6 Ceiling lead-through (part)
- 7 Aspiration reducing film sheet

The following steps are essential for installing a ceiling lead-through:

- Before gluing, clean the adhesion points with the prescribed cleaning agent to remove dirt and grease. Glue the hose connection to the relevant T-fitting on the aspiration pipe using Tangit adhesive.
- Drill a \varnothing 13 mm hole in the false ceiling for each ceiling lead-through.
- Install the ceiling lead-through by removing the nut, pushing the part with the hose nozzle through the bore from below, then refitting and tightening the nut above the false ceiling.
- Determine the required aspiration hose and cut to length. Place the cut end of the hose onto the hose nozzle in the ceiling lead-through and onto the hose connection on the aspiration pipe T-fitting. If necessary, heat up the hose using a hot air blower.
- Glue the required aspiration reducing film sheet (as per the planning guidelines) onto the ceiling lead-through.



Notice!

The hole in the aspiration reducing film sheet must be positioned exactly over the opening in the ceiling lead-through. The opening diameter in the aspiration reducing film sheet must not be altered.

To keep the adhesive surfaces of the film sheets free of dust and grease, avoid touching them.


6.4 Monitoring with Forced Airflow

6.4.1 Detection at Intake and Exhaust Openings



Caution!

If the smoke aspiration occurs in a forced airflow (fan, air-conditioning units), direct the air sampling openings depending on the exhaust speed in the airflow.

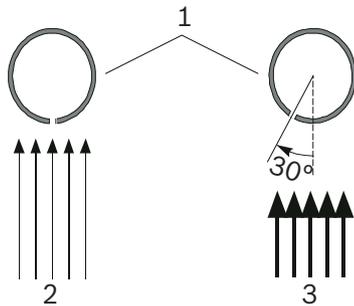


- 1 Aspiration pipe with air sampling openings
- 2 Exhaust speed $< 0.5 \text{ m/s}$
- 3 Exhaust speed $> 0.5 \text{ m/s}$

Positioning the air sampling opening depending on air speed

6.4.2

Detection in the Bypass

For details on connecting the air return, please see *Air-return pipe*, page 71.

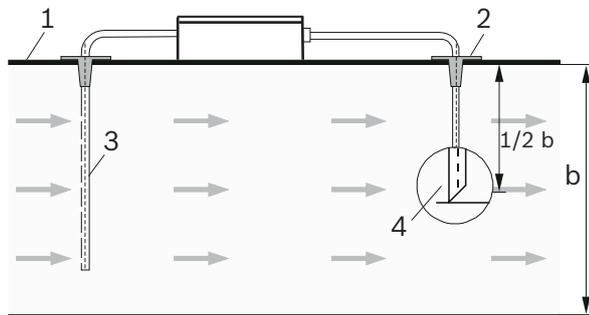

- 1 Air-conditioning duct
- 2 Duct adapter
- 3 Aspiration
- 4 Air-return Pipe
- b Width of air-conditioning duct

Positioning the air-return pipe – example with an air-conditioning duct (bypass)

For FAS-420-TM planning in these applications, see *Planning for forced airflow*, page 50.

6.5

Air filter

6.5.1

Installing the Air Filter Box

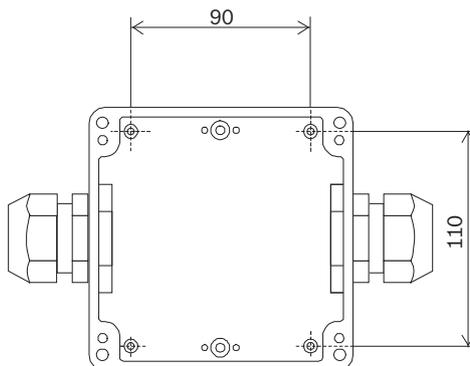


Figure 6.1: Boring distances of holes in base of FAS-ASD-WS air filter box

Filter box

- To use the filter box in the pipe system, use the two PG29 filter screw connections supplied.
- Install these cable glands in precisely the same way as for the pipe adapter, for example.


- When installing the filter, note the throughflow direction, which is specified on the type plate on the side of the lower part of the housing.
- Screw the air filter housing directly onto the wall with the lower part of the housing.

Installation material

Cylinder or flathead screws are suitable for wall mounting:

- Maximum thread diameter: 4 mm
- Head diameter: 5 to 7 mm.

6.6 Air-return pipe

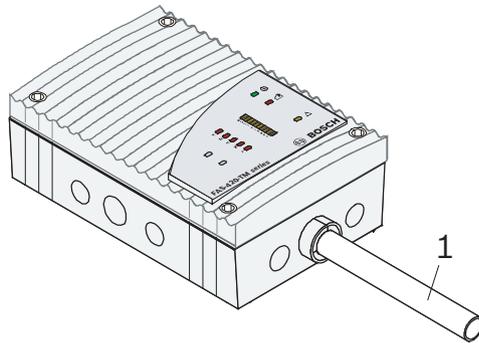

- 1 Air-return pipe (aspiration pipe)

Installing the air-return pipe


Feed the air-return pipe into the designated pipe connection of the FAS-420-TM . The air-return pipe fits perfectly in the connection and guarantees a firm hold.



Notice!

The pipe must be fixed immediately in front of the unit so that the pipe does not pull out of the pipe connection due to any change in length that occurs (see *Length Change of the Pipe System*, page 67).

6.7 Three-way tap

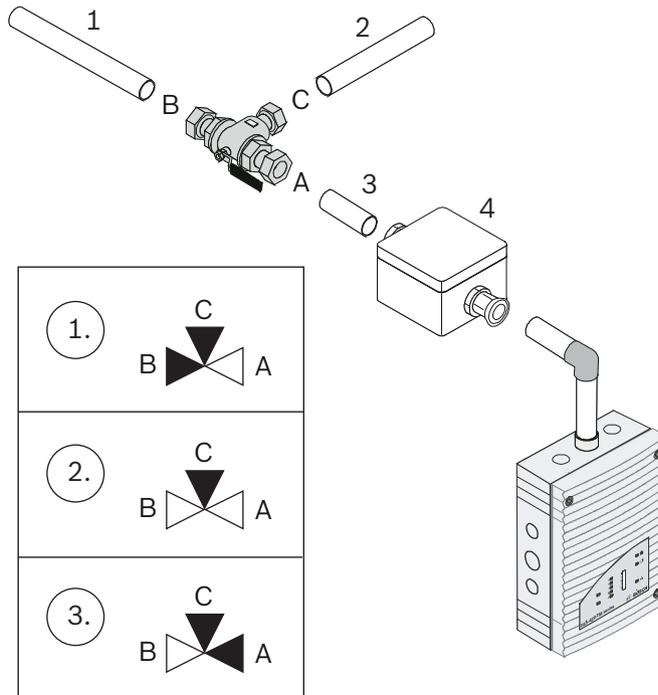

- 1 Blast air/compressed air connection
- 2 Pipe system connection
- 3 Aspirating smoke detector connection
- 4 Air filter (optional)

Installing the three-way tap

The three-way tap is required to blow out the pipe system with blast air (as a preference) or compressed air. (Compressed air is compressed, non-purified and humid ambient air. Blast air, on the other hand, is purified and dehumidified air. If the FAS-420-TM and pipe system are located in areas with temperatures below freezing, blast air is to be used for blowing out.)

The aspirating smoke detector and the downstream pipe system accessory components (e.g. air filter) must not and cannot be blown-out.

A check valve for relieving pressure from the pipe system must be fitted to the end of each pipe branch. The check valve prevents damage to the air sampling openings and prevents dirt deposits from being blown through the pipe system.

To prevent aspiration reducing film sheets in deep-freeze areas from tearing, it is advisable to use special deep-freeze aspiration reductions. Check valve and deep-freeze aspiration reductions are available on separate order.

Connections

Fasten the three-way tap using the transition screw connections in the pipe system.

When installing, note the assignment of the connections:

- Install the aspiration pipe system on connection C.
- Install the FAS-420-TM on connection A.
- Attach the blast air supply (blast or mobile blowing-out system) to connection B of the three-way tap.

Refer to *Blowing-out Process for the Pipe System, page 85* for information on how to carry out the manual blowing-out process.


6.8 Water separator

Standard

The standard water separator is installed using a PG29 cable gland and a T-fitting between the FAS-420-TM and the pipe system.

FAS-ASD-WS Water Separator

The FAS-ASD-WS Water Separator must be fitted at the lowest point in the pipe system downstream of the air filter and the aspirating smoke detector (see figure below).

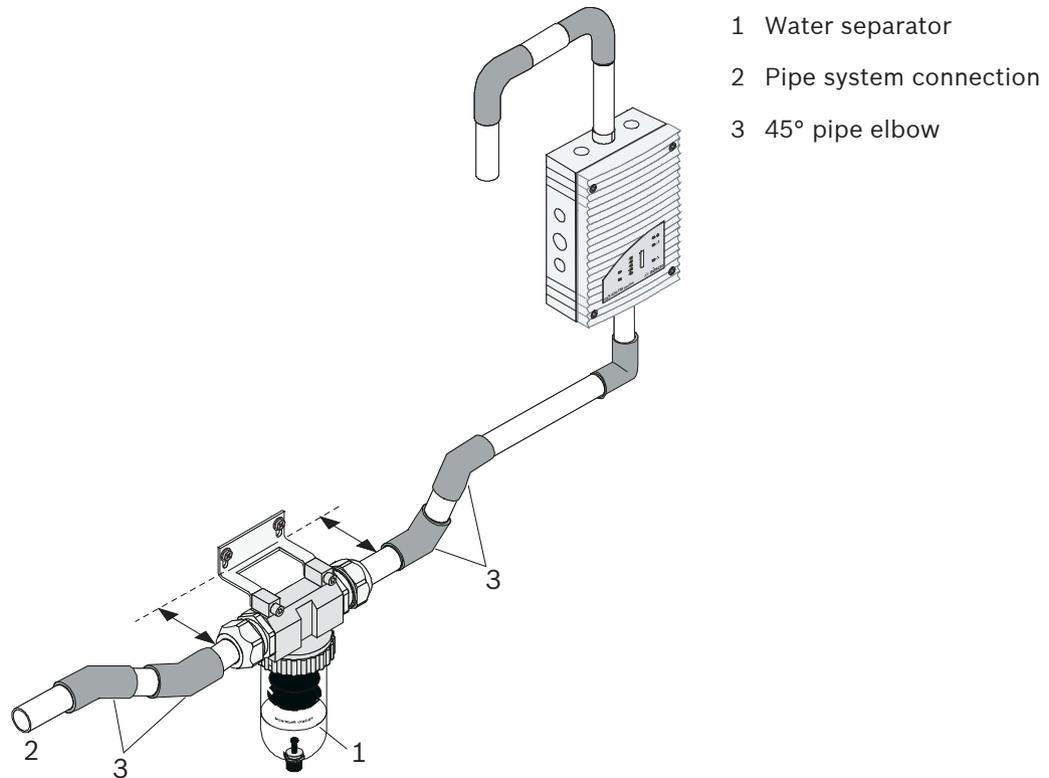

Installing the FAS-ASD-WS Water Separator in the pipe system

Connection

Attach two 45° pipe elbows on both sides (**not** supplied as standard) in order to achieve the optimum distance from the wall for mounting the brackets. When installing, note the correct direction of flow (see arrow on plastic container).

Also fasten the water separator with two screws and the clamp.


To empty, open the drain valve.

Refer to

– *Maintenance Intervals, page 87*

6.9

Test Adapter

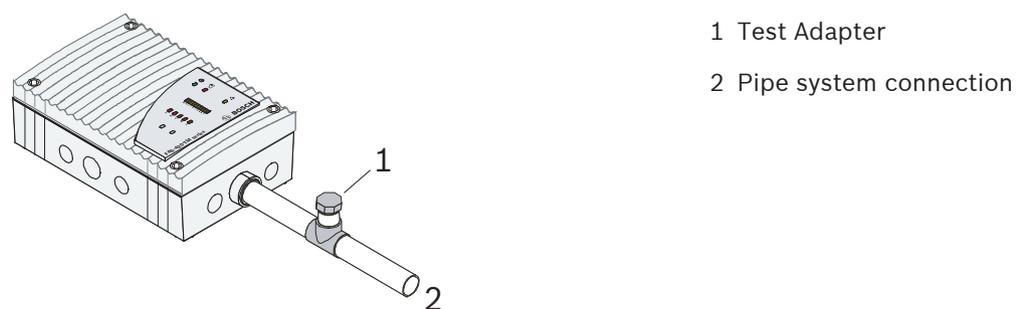

Installing the test adapter in the pipe system

For test purposes, the pipe system connection is simply pulled out and the test pipe connected directly to the aspirating smoke detector. However, this is not possible if the aspiration pipe system has to be permanently mounted. A test adapter should be used for this application.

The test adapter is glued into the pipe system in the direct vicinity of the aspirating smoke detector. During normal operation, the test adapter must always be closed. It is only opened for maintenance and service purposes in order to admit test gas or smoke.



Caution!

Once the detection system of the aspirating smoke detector and the alarm transfer have been tested, the test adapter must be closed again; otherwise there will be an airflow malfunction!

7 Commissioning

7.1 Preparation

Checking the settings

Check the detector address setting prior to commissioning (*Setting the detector address, page 57*).

Install the pipe system fully before inserting the detection module and connect it to the housing base of the FAS-420-TM.

Connection test

Check whether...

- The correct aspiration reducing film sheets are glued to the air sampling openings.
- The pipe system is securely connected to the FAS-420-TM pipe connection.
- All pipe fittings are glued together and the pipe system is sealed.
To do this, first close all air sampling openings (e.g. with duct tape). Then measure the negative pressure at the opening for the return airflow using a digital precision pressure gauge (see *Conducting the Functional Test, page 79*).

After a short run-up time, the negative pressure must be 80 Pa.

FAS-ASD-DIAG Diagnostic Software

Then check the system using the FAS-ASD-DIAG Diagnostic Software.

Follow the procedure below:

- Install the diagnostic software on a laptop or PC.
- The data transmission of the FAS-420-TM takes place bidirectionally via the infrared port on the front of the device. The diagnostic appliance is connected to the PC using the USB cable provided.
- The diagnostic software is started.

The current FAS-420-TM data is displayed on the PC screen.



Notice!

For a later evaluation of the airflow value, record the calibration type (see *Calibrating the Airflow Sensor, page 75*), start-up temperature, air pressure and height above sea level in the test log (see *Test Log for Aspirating Smoke Detectors in the FAS-420-TM Series, page 92*).

7.2 Detection Module Commissioning


1. Insert the FAS-420-TM detection module into the pre-mounted housing base that has been checked for correct wiring.



Notice!

When inserting the detection module, be aware of the mechanical coding, which protects the device against twisting.

2. Replug the X4 jumper when inserting the detection module (PIN 1-2 or PIN 2-3, or vice versa). Replugging will cause airflow calibration to be carried out automatically.
3. The green operation display flashes when the FAS-420-TM is initializing. If initialization is complete, the operation display lights up permanently.
4. The airflow of the FAS-420-TM must not be influenced during the initialization phase.

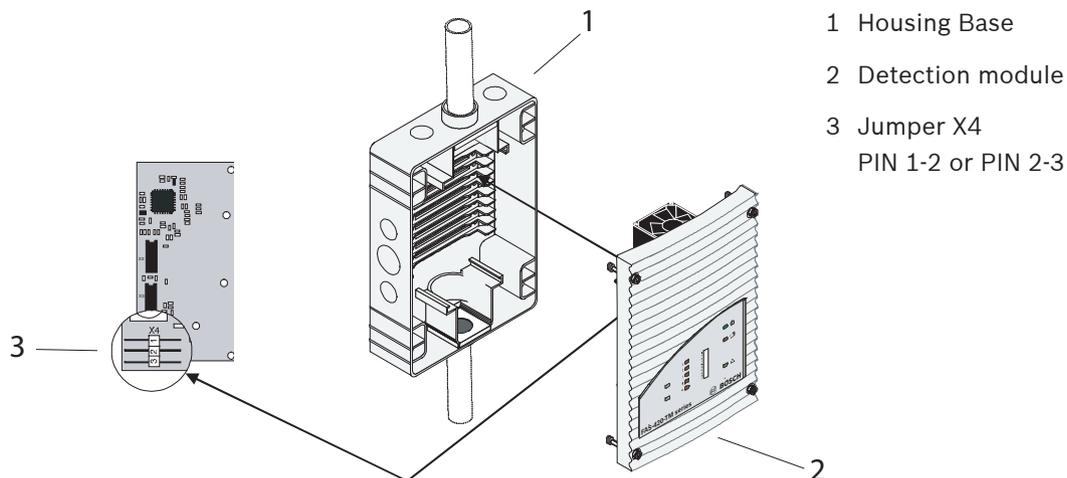

Inserting the detection module into the housing base

7.3 Calibrating the Airflow Sensor

The airflow initialization of the FAS-420-TM is successfully completed if the status of the temperature and the airflow stabilizes for a period of 2 minutes, i.e.:

- The temperature fluctuates by less than 0.1 °C
- The airflow is not fluctuating too heavily (temperature control)
- The fan voltage can be set normally; fan and fan power pack working normally

The maximum operating period is 2 hours.

The airflow initialization is aborted immediately if one of the following errors occurs:

- Temperature measurement faulty
- Airflow measurement faulty
- Fan control faulty

The calibration of the airflow sensor can be carried out independently of the air pressure or depending on it.

To be able to judge the airflow sensor value correctly during start-up work, always adhere to the type of calibration in the test log.

7.3.1 Air-Pressure-Independent Calibration

Calibration of the FAS-420-TM independently of the air pressure takes place automatically each time the detection module is inserted into the housing base and the X4 jumper is reconnected, or via the FAS-ASD-DIAG Diagnostic Software.

During the teach-in phase, the alarm detection is fully functional. The operating display flashes during this time and the airflow must not be influenced in any way. On completion of initialization, the operating display is permanently lit and the airflow sensor has determined a target value for the connected pipe system.

7.3.2 Air-Pressure-Dependent Calibration

A barometer (measuring range from 0 up to 1300 mBar, resolution 1 mBar, accuracy 1mBar +/-1 digit) and a multimeter are required to calibrate the airflow sensor dependent on air pressure.

The following steps are required:

1. In the "Settings" screen, press the bottom button [Set], so that you can change the values in the diagnostic software.
2. Determine the height above sea level of the installation location of the aspirating smoke detector and enter this value into the relevant input field.
3. Measure the air pressure using the handheld barometer and enter this value in the relevant input field.



Notice!

If this measured air pressure does not correspond to the respective average height for the year, the airflow sensor is not calibrated to 0%.

4. Press the [Initialising] button to confirm.

7.4

Checking the Detection Module and Alarm Transfer



Notice!

In order to accelerate the alarm evaluation during gas testing, the fire panel must be set to revision operation. The LOGIC·SENS is temporarily deactivated at this point.

1. Detach the FAS-420-TM using test aerosol. Spray the test aerosol either into the first air sampling opening or into the test adapter on the pipe system.
2. Use the table below to check the transmission line to the fire panel.

Check...	If this is not the case, ...
– Whether the alarm is displayed on the aspirating smoke detector	– Check whether the display board is connected – There is a fault with the aspirating smoke detector Replace the detection module
– Whether the alarm is transmitted to the fire panel and reported on the appropriate line	– Check the transmission lines



Notice!

Note all checked data in the test log.

7.5

Checking Malfunction Transmission



Notice!

The steps below may only be carried out following an airflow calibration in accordance with *Calibrating the Airflow Sensor, page 75*.

Malfunction transmission occurs as part of checking the airflow monitoring system (as per section below).

Check whether, when a pipe breakage and an obstruction are detected, the malfunction is displayed at the aspirating smoke detector and at the fire panel.

7.6 Checking Airflow Monitoring



Notice!

The steps below may only be carried out following an airflow calibration in accordance with *Calibrating the Airflow Sensor, page 75*.

Pipe breakage

Check the breakage detection:

1. Detach the pipe from the connection to the FAS-420-TM or open the test adapter.
2. Check whether the fault indication on the smoke aspiration system is flashing and whether the malfunction is displayed on the fire panel.
3. Alternatively, check the data of the airflow sensor using the diagnostic appliance and a PC or laptop.
4. Check whether the malfunction is displayed on the fire panel.
5. Enter the result in the test log.

Obstruction

Check the obstruction detection:

1. Close – depending on the planned airflow monitoring – the corresponding number of air sampling openings with some duct tape.
2. Check whether the fault indication on the smoke aspiration system is flashing and whether the malfunction is displayed on the fire panel.
3. Alternatively, check the data of the airflow sensor using the diagnostic appliance and a PC or laptop.
4. Check whether the malfunction is displayed on the fire panel.
5. Enter the result in the test log.

Troubleshooting

If the airflow malfunctions are not correctly detected by the unit, proceed as follows:

Check whether...

1. All borings are free
2. The pipe system has breaks or fractures
3. All pipe connections are tight
4. The fan can blow out freely
5. The correct aspiration reducing film sheets were used
6. Any test adapters and air filters are closed
7. Any filter inserts are clean
8. Any ball valves and blowing-out valves are in the operating position.

If the airflow malfunctions are not displayed on the fire panel, proceed as follows:

Check whether...

- the FAS-420-TM was programmed in the central fire panel program and the program was transferred
- the transmission path between the FAS-420-TM and the fire panel is working correctly.

If no faults are detected, the functionality of the FAS-420-TM and/or the airflow sensor is checked using the test pipe or diagnostic software.

7.7 Functional Test of Airflow Sensors

Check the functionality using a test pipe and a digital precision pressure gauge and with the aid of a PC and the FAS-ASD-DIAG Diagnostic Software.

A full functional test using the digital precision pressure gauge is described below. A limited functional test can also be carried out without a digital precision pressure gauge.

7.7.1

Preparations for the Functional Test


- ▶ Select the following settings using the programming software (see *Parameter Settings via Programming Software, page 63*):

Sensitivity		
0.5%/m		
Activation threshold for airflow malfunction	Alarm delay	
30%	10 sec	
Airflow Fault Delay	Fan voltage	LOGIC×SENS filter
30 sec	9 V	on

- ▶ Disconnect the pipe system from the FAS-420-TM.

**Notice!**

Once the pipe system has been disconnected from the FAS-420-TM, the device reports a malfunction when the set airflow malfunction delay has lapsed. If no airflow malfunction is detected, the device is faulty.

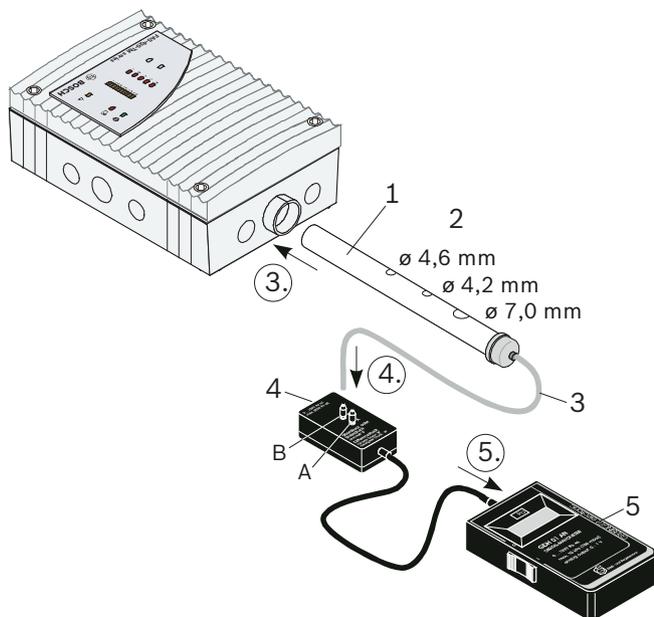

- 1 Test Pipe
 - 2 Aspiration borings
 - 3 Pressure measuring hose
 - 4 Adapter
 - 5 Digital precision pressure gauge
- A/B Adapter connection

Checking the pipe system connection

1. Connect the test pipe.
2. Connect the pressure measuring hose to the adapter connection B. When carrying out a limited functional test without a digital precision pressure gauge, the connection for the pressure measuring hose on the test pipe must be closed.
3. Connect the 4-pin plug of the adapter to the digital pressure gauge.
 - ▶ Connect the PC to the FAS-420-TM through the diagnostic appliance and start the diagnosis program. You can use the diagnosis program to track the airflow values and the fault messages during the functional test.

Information for installing the diagnostic software can be found in *Preparation, page 74*.

**Notice!**

The airflow range and fault delay settings must be configured via the FSP-5000-RPS configuration tool on the fire panel. To configure the settings with the diagnostic tool, the setting in the FSP-5000-RPS configuration tool must be set to "Programmable".

7.7.2 Conducting the Functional Test


**Notice!**

On completion of the functional test, the original settings must be restored. You should therefore record this data (e.g. using the log for the device as a saved text file).

- ▶ Close all the test pipe's aspiration borings with some duct tape.
After a short run-up time, the negative pressure produced by the FAS-420-TM must be 80 Pa. This step can be omitted if a limited functional test is carried out without a digital precision pressure gauge.

**Notice!**

Once the aspiration borings have been closed, the device reports the malfunctions "Air flow too low (static evaluation)" and "Detection module fault" within 30 seconds.

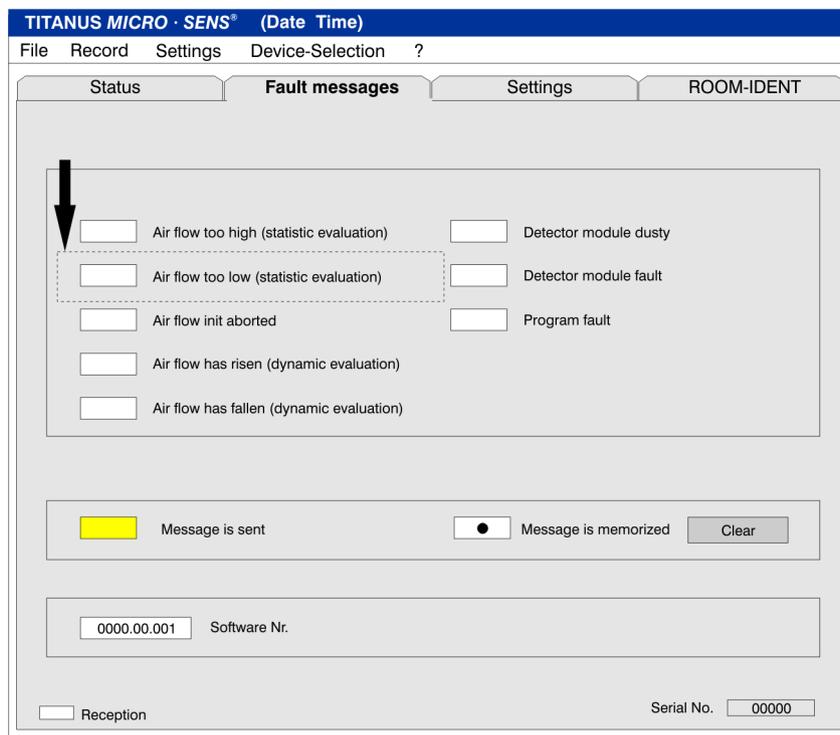

1. Free up the 4.6 mm and 4.2 mm aspiration borings on the test pipe again.
2. In the "Settings" screen, click on the [Set] button at the bottom and start the airflow initialization by pressing the [Initialising] button.
The fault messages and indications must go out. The "Active Initialisation" field in the "Settings" screen of the diagnostic software flashes while initialization is in progress.

TITANUS MICRO · SENS® (Date Time)

File Record Settings Device-Selection ?

Status Fault messages **Settings** ROOM-IDENT

Sensitivity (Fire alarm) %/m Fault latched

Alarm delay s Dynamic air flow

Air flow range % ROOM-IDENT

Fault delay min s LOGIC SENS

Action alarm threshold % Fire alarm after ROOM-IDENT

Height above sea level m Active Initialisation

Air pressure hPa

Fan voltage V

Reception Serial No.

3. After initialization, close the 4.2 mm aspiration boring of the test pipe with some duct tape. After approximately 5 secs, the fault indication on the device must start to flash. After approximately 35 secs, the fault indication on the device must be permanently illuminated. The device reports the malfunction "Air flow too low (static evaluation)". The airflow value is approximately -35%.
4. Open the 4.2 mm aspiration boring again. After a few seconds, the fault indication on the FAS-420-TM must stop flashing.
5. Open the 7.0 mm aspiration boring on the test pipe. After approximately 5 secs, the fault indication on the device must start to flash. After approximately 35 secs, the fault indication on the device must be permanently illuminated. The device reports the malfunction "Air flow too high (static evaluation)". The airflow value is approximately +85%.
6. Close the 7.0 mm aspiration boring again. After a few seconds, the fault indication on the FAS-420-TM must stop flashing.
7. Remove the test pipe and reconnect the pipe system.

Notice!

On completion of the functional tests, the original settings must be restored.

The commissioning of the device with the pipe system must be repeated from *Calibrating the Airflow Sensor, page 75*.

Once commissioning has been concluded, the set values must be collected and saved using the FAS-ASD-DIAG Diagnostic Software. A printout of the set values should be placed in the project folder.



7.8

Fire Source Identification Commissioning

Fire source identification is set using the FAS-ASD-DIAG Diagnostic Software via the ROOM-IDENT screen.

1. Click the [Train] button. This opens the view with adjustable values used to determine the transport times for fire source identification in areas A-E.
2. First enter the number of air sampling openings.

3. Then enter the blowing out time and voltage of the blowing out and aspiration fan. You can access the Help function by clicking the question mark to the right of the relevant setting.
4. Click the appropriate aspiration point (A-E) for which the transport time is to be determined.
5. Enter the preselection time necessary to reach the aspiration point and supply the smoke. Once the selected preselection time has expired, the appropriate smoke aspiration point must be charged with smoke. Once the preselection time has expired, the smoke must be available at the aspiration point for another 10 to 15 seconds.
6. Using the smoke level, check that there is no smoke in the aspiration pipe.
7. Click the [Start] button. The FAS-420-TM-R FAS-420-TM-RVB switches to the aspiration pipe blowing out. The display of the aspiration point concerned is yellow.
8. Once the preselection time has expired, switch the FAS-420-TM-R FAS-420-TM-RVB to aspiration. The smoke must now be available at the selected aspiration point. The smoke level will display if smoke is detected by the FAS-420-TM-R FAS-420-TM-RVB. The display of the selected aspiration point turns green and the determined time is entered. Teaching mode for the selected aspiration point is exited.

8 Maintenance

8.1 Visual check

Check whether...

- The pipe system is securely installed and undamaged (where freely accessible)
- The air sampling openings of the pipe system are free
- The aspiration pipe and connection cable are securely connected
- The FAS-420-TM is undamaged.

8.2 Detection Module and Alarm Transfer

Proceed in accordance with *Checking the Detection Module and Alarm Transfer, page 76*. Also check the detection module visually for exterior contamination or damage and replace it if necessary.



Notice!

A hardware defect in the detection module is displayed in the "Fault messages" screen of the diagnostic software.

8.3 Pipe System


Check the pipe system and the air sampling openings for obstruction in areas susceptible to dust particles or icing. If necessary, blow out the pipe system and air sampling openings with blast air. Use a mobile cylinder of compressed air (blowing-out system) or activate the manual blowing-out system located on site. The components (compressors, compressed air containers, dryers) required to supply the compressed air can be obtained directly from the relevant compressed air system suppliers.



Caution!

Before blowing out the pipe system, disconnect the FAS-420-TM from the pipe system; otherwise, the airflow sensor will be damaged.


8.4 Replacing the Detection Module

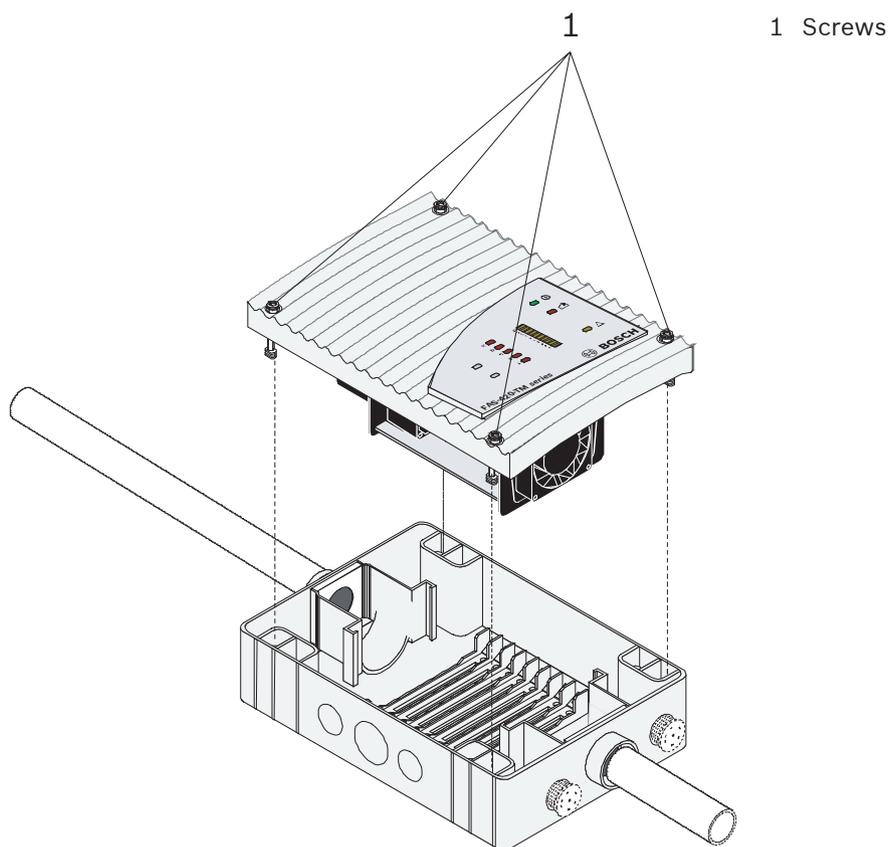

Replacing the air filter of the FAS-420-TM

- Remove the four screws from the detection module using a screwdriver and pull the detection module out of the housing base.
- Insert the new detection module into the housing base. When doing this, be aware of the mechanical coding, which protects the device against twisting.
Replug the X4 jumper.
- Retighten the four screws on the detection module using a screwdriver.
- The unit is initialized automatically when the X4 jumper is replugged.


8.5 Replacing the Air Filter in the Housing Base

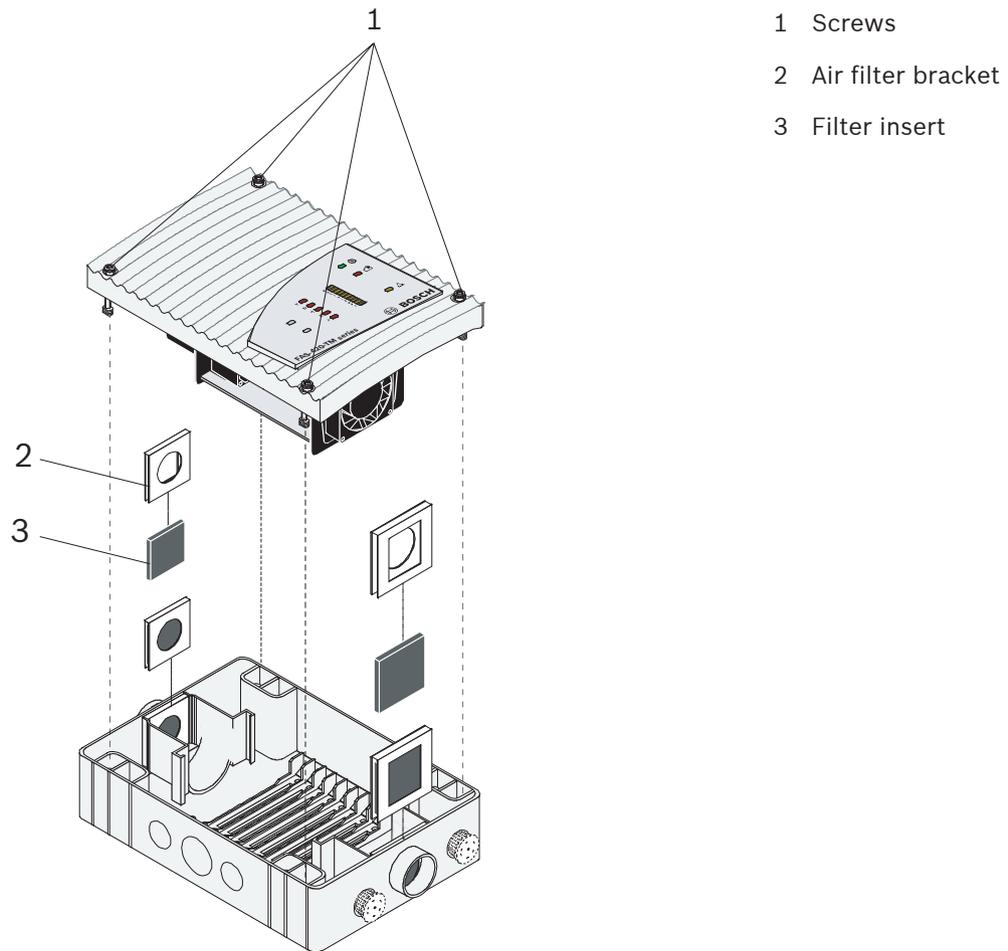

Replacing the air filter of the FAS-420-TM

- Remove the four screws from the detection module using a screwdriver and pull the detection module out of the housing base.
- Pull both filter brackets out of the housing base and remove the filter inserts. Carry out a visual check for contamination and replace the filter if necessary. Then put the filter bracket back into position.
- Retighten the four screws on the detection module using a screwdriver.

8.6 Filter Change on the Filterbox

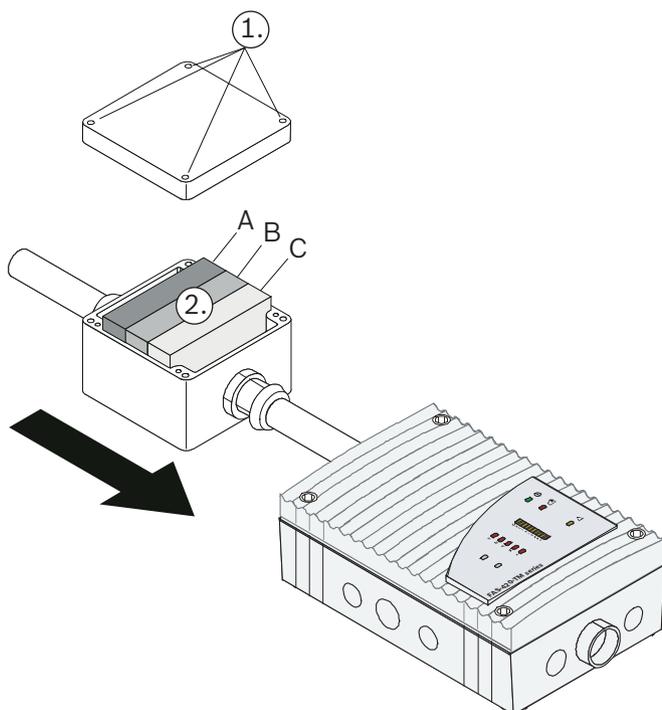

- A Primary filter
- B Coarse dust filter
- C Fine dust filter

Changing the filter inserts (in fig.: FAS-ASD-FL Filterbox Large)

To replace the filter inserts, proceed as follows:

1. Remove the four screws and remove the housing cover.
2. Remove the old filter inserts and clean the inside of the housing carefully to remove dust. Now fit the cleaned or new filter inserts. When using the spare filter set for the large filterbox, ensure you follow the correct sequence (see label on base of housing). Replace the housing cover and screw it back on.



Notice!


In applications with largely fine dust build-up, three fine dust filters can also be used (subject to separate order).



Notice!

Opening the housing cover of the filterbox causes an airflow malfunction in the FAS-420-TM.

8.7 Blowing-out Process for the Pipe System

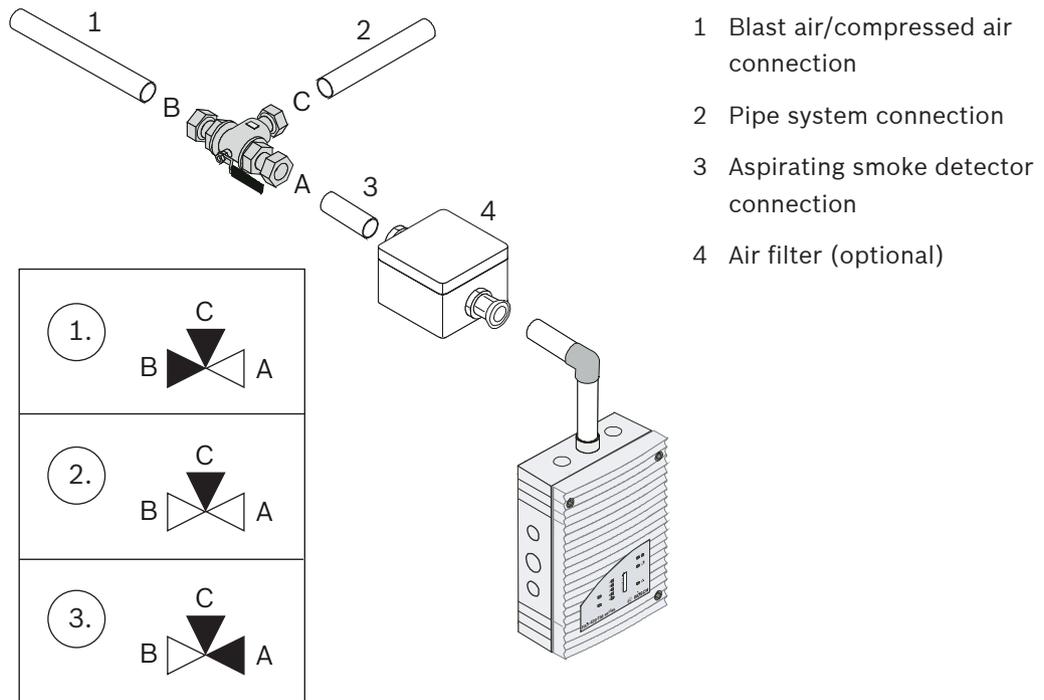

Installing the Three-way tap

The blast air supply (compressor or mobile blowing-out system) required for the blowing-out process for the pipe system must be connected via the quick lock coupling fitting to the three-way tap on the pipe system.

A check valve for relieving pressure from the pipe system must be fitted to the end of each pipe branch. The check valve prevents damage to the air sampling openings and prevents dirt deposits from being blown through the pipe system. To prevent aspiration reducing film sheets in deep-freeze areas from tearing, it is advisable to use special deep-freeze aspiration reductions.

The manual blowing-out process on the pipe system is carried out as follows:

- Position the tap lever so that the blast air and pipe system are connected (B-C connection).

The connection to the FAS-420-TM must be blocked for blowing-out!

Manually blow out the pipe system for approximately 10 seconds.

- Set the lever of the tap such that the device is not connected with the pipe system or with the connection for the blast or compressed air supply. Wait approximately 20 seconds so that dust and dirt raised in the pipe system can settle and thus will not be sucked through the aspirating smoke detector.
- Reconnect the blown-out pipe system to the FAS-420-TM within a further 10 seconds by switching over the tap accordingly (A-C connection).

8.8 Checking the Airflow Sensor Calibration

Check the airflow sensor value with the diagnostic software.

Functional principle

During initialization of the connected pipe system, the device saves the measured actual value of the airflow as a target value via the integrated airflow monitoring. This nominal value then serves as a reference value for the additional evaluation of a possible airflow malfunction.

Depending on the airflow threshold selected, the current airflow value during operation can

fluctuate around this target value without triggering an airflow malfunction. Only if the selected airflow threshold is exceeded will the airflow malfunction be reported by the device and thus transmitted.

Checking the actual value

The tolerance range of the selected airflow threshold and the actual and target values are represented in the diagnostic software. The limits correspond to the airflow range set. Check the deviation of the actual value from the target value. If there is a deviation of $> \pm 3/4$ of the set threshold, you should check the pipe system carefully (see below: Troubleshooting airflow malfunction).



Notice!

The current airflow value may deviate from the target value not only due to a malfunction of the pipe system (break or obstruction), but also due to fluctuations in the air pressure in the environment.

Dependent on air pressure

To ensure long-term fault-free operation of the device, the airflow sensor must be calibrated depending on the air pressure. Only with this type of calibration do low air pressure fluctuations remain within the monitoring window and thus in the permissible tolerance range.



Caution!

If the airflow change is set at less than 30%, an air-pressure-dependent calibration must be carried out.

Independent of air pressure

If the sensor calibration is carried out independently of air pressure, fluctuations in the air pressure can cause undesired airflow malfunctions. If the change in airflow is greater than 30%, the calibration of the airflow sensor can be carried out independently of the air pressure; it must then be ensured that no fluctuations in air pressure can occur in the immediate environment.



Caution!

If air pressure fluctuations are anticipated in the immediate environment, the airflow sensor has to be calibrated in dependence of air pressure (see also *Airflow Monitoring*, page 33).

Troubleshooting airflow malfunction

If the airflow calibration has been carried out depending on air pressure and the actual value still does not lie within the tolerance range of the selected airflow threshold (airflow malfunction displayed on the device), then a further disturbance value in addition to air pressure or temperature fluctuation exists.



Caution!

In case of a defect in the airflow monitoring, only authorized personnel may replace the detector module!

- In this case, check the pipe system for leaks and obstructions (see Checking Airflow Monitoring, "Troubleshooting").
- If this check reveals no malfunctions, check the airflow monitoring by connecting the test pipe and conducting the functional test in accordance with Conducting the Functional Test.

- If, during troubleshooting, the pipe network has been changed, the original configuration of the pipe network must be restored after the troubleshooting has been completed and the airflow must be recalibrated.

**Caution!**

It is essential that you adhere to the calibration type (air-pressure-dependent or air-pressure-independent) and, if necessary, the values for air pressure, height above sea level, and set voltage in the test log.

- Observe the current airflow value during ongoing maintenance or check it at the latest during the next inspection.
- If the target value is similar to the previous one, disruptive environmental influences are the cause of the deviation. If these negative influences on the airflow monitoring cannot be suppressed, increase the airflow range.

**Notice!**

The diagnostic software can be used to save in file format all the stored and current data for the device, as well as any settings made. To be able to compare the data read out, save each file under a different file name.

Refer to

- *Checking Airflow Monitoring, page 77*
- *Conducting the Functional Test, page 79*

8.9

Testing the Fire Source Identification

Fire source identification is tested using the FAS-ASD-DIAG Diagnostic Software via the "ROOM-IDENT" screen.

- In the "ROOM-IDENT" screen, click the [Testing] button.
- First select the preselection time and then click on the [Start] button to determine the source of the fire.
- The FAS-420-TM switches to the aspiration pipe blowing out. The appropriate smoke aspiration point must be charged with smoke until the selected preselection time has expired. Once the preselection time has expired, the smoke must be available at the aspiration point for another 10 to 15 seconds.
- Once the preselection time has expired, the FAS-420-TM switches to aspiration and the aspiration point is determined by the measurement of the time until smoke is detected. Check that it is the correct aspiration point.

8.10

Airflow monitoring

A pipe breakage or pipe obstruction is indicated in the "Fault messages" screen of the diagnostic software.

Check airflow monitoring in accordance with *Checking Airflow Monitoring, page 77*.

8.11

Malfunction Transmission

A malfunction is indicated on the FAS-420-TM and on the fire panel, where applicable. Proceed in accordance with *Checking Malfunction Transmission, page 76*.

8.12

Maintenance Intervals

Maintenance comprises regular inspections and maintenance routines. The smoke aspiration systems should be checked when commissioned and then quarterly. At each fourth check, more comprehensive checks should be made, as described below:

- Quarterly test/inspection
- Annual test/maintenance + 4th annual inspection

Inspection

Measure	Further information can be found in...
Visual check	<i>Visual check, page 81</i>
Detection Module and Alarm Transfer	<i>Detection Module and Alarm Transfer, page 81</i>
Check the pipe system	<i>Pipe System, page 81</i>
Checking the Airflow Sensor Calibration	<i>Checking the Airflow Sensor Calibration, page 85</i>
Checking Malfunction Transmission	<i>Malfunction Transmission, page 87</i>
Empty water separator (if necessary)	<i>Water separator, page 72</i>

Maintenance and 4th annual inspection

Measure	Further information can be found in...
Visual check	<i>Visual check, page 81</i>
Detection Module and Alarm Transfer	<i>Detection Module and Alarm Transfer, page 81</i>
Check of the pipe system	<i>Pipe System, page 81</i>
Checking the Airflow Sensor Calibration	<i>Checking the Airflow Sensor Calibration, page 85</i>
Checking Malfunction Transmission	<i>Malfunction Transmission, page 87</i>
Empty water separator (if necessary)	<i>Water separator, page 72</i>

9

Appendix

All the permitted detector addresses are indicated in *DIP Switch Settings for Detector Addresses, page 89*. See also *Setting the detector address, page 57*. The form in *Test Log for Aspirating Smoke Detectors in the FAS-420-TM Series, page 92* is required for commissioning (see *Commissioning, page 74 et seqq*).

9.1 DIP Switch Settings for Detector Addresses

A	DIP							
	8	7	6	5	4	3	2	1
0	0	0	0	0	0	0	0	0
255=CL	1	1	1	1	1	1	1	1
1	0	0	0	0	0	0	0	1
2	0	0	0	0	0	0	1	0
3	0	0	0	0	0	0	1	1
4	0	0	0	0	0	1	0	0
5	0	0	0	0	0	1	0	1
6	0	0	0	0	0	1	1	0
7	0	0	0	0	0	1	1	1
8	0	0	0	0	1	0	0	0
9	0	0	0	0	1	0	0	1
10	0	0	0	0	1	0	1	0
11	0	0	0	0	1	0	1	1
12	0	0	0	0	1	1	0	0
13	0	0	0	0	1	1	0	1
14	0	0	0	0	1	1	1	0
15	0	0	0	0	1	1	1	1
16	0	0	0	1	0	0	0	0
17	0	0	0	1	0	0	0	1
18	0	0	0	1	0	0	1	0
19	0	0	0	1	0	0	1	1
20	0	0	0	1	0	1	0	0
21	0	0	0	1	0	1	0	1
22	0	0	0	1	0	1	1	0
23	0	0	0	1	0	1	1	1
24	0	0	0	1	1	0	0	0
25	0	0	0	1	1	0	0	1
26	0	0	0	1	1	0	1	0
27	0	0	0	1	1	0	1	1
28	0	0	0	1	1	1	0	0
29	0	0	0	1	1	1	0	1
30	0	0	0	1	1	1	1	0
31	0	0	0	1	1	1	1	1
32	0	0	1	0	0	0	0	0
33	0	0	1	0	0	0	0	1
34	0	0	1	0	0	0	1	0
35	0	0	1	0	0	0	1	1
36	0	0	1	0	0	1	0	0
37	0	0	1	0	0	1	0	1
38	0	0	1	0	0	1	1	0
39	0	0	1	0	0	1	1	1
40	0	0	1	0	1	0	0	0
41	0	0	1	0	1	0	0	1

A	DIP							
	8	7	6	5	4	3	2	1
42	0	0	1	0	1	0	1	0
43	0	0	1	0	1	0	1	1
44	0	0	1	0	1	1	0	0
45	0	0	1	0	1	1	0	1
46	0	0	1	0	1	1	1	0
47	0	0	1	0	1	1	1	1
48	0	0	1	1	0	0	0	0
49	0	0	1	1	0	0	0	1
50	0	0	1	1	0	0	1	0
51	0	0	1	1	0	0	1	1
52	0	0	1	1	0	1	0	0
53	0	0	1	1	0	1	0	1
54	0	0	1	1	0	1	1	0
55	0	0	1	1	0	1	1	1
56	0	0	1	1	1	0	0	0
57	0	0	1	1	1	0	0	1
58	0	0	1	1	1	0	1	0
59	0	0	1	1	1	0	1	1
60	0	0	1	1	1	1	0	0
61	0	0	1	1	1	1	0	1
62	0	0	1	1	1	1	1	0
63	0	0	1	1	1	1	1	1
64	0	1	0	0	0	0	0	0
65	0	1	0	0	0	0	0	1
66	0	1	0	0	0	0	1	0
67	0	1	0	0	0	0	1	1
68	0	1	0	0	0	1	0	0
69	0	1	0	0	0	1	0	1
70	0	1	0	0	0	1	1	0
71	0	1	0	0	0	1	1	1
72	0	1	0	0	1	0	0	0
73	0	1	0	0	1	0	0	1
74	0	1	0	0	1	0	1	0
75	0	1	0	0	1	0	1	1
76	0	1	0	0	1	1	0	0
77	0	1	0	0	1	1	0	1
78	0	1	0	0	1	1	1	0
79	0	1	0	0	1	1	1	1
80	0	1	0	1	0	0	0	0
81	0	1	0	1	0	0	0	1
82	0	1	0	1	0	0	1	0
83	0	1	0	1	0	0	1	1
84	0	1	0	1	0	1	0	0

A	DIP							
	8	7	6	5	4	3	2	1
85	0	1	0	1	0	1	0	1
86	0	1	0	1	0	1	1	0
87	0	1	0	1	0	1	1	1
88	0	1	0	1	1	0	0	0
89	0	1	0	1	1	0	0	1
90	0	1	0	1	1	0	1	0
91	0	1	0	1	1	0	1	1
92	0	1	0	1	1	1	0	0
93	0	1	0	1	1	1	0	1
94	0	1	0	1	1	1	1	0
95	0	1	0	1	1	1	1	1
96	0	1	1	0	0	0	0	0
97	0	1	1	0	0	0	0	1
98	0	1	1	0	0	0	1	0
99	0	1	1	0	0	0	1	1
100	0	1	1	0	0	1	0	0
101	0	1	1	0	0	1	0	1
102	0	1	1	0	0	1	1	0
103	0	1	1	0	0	1	1	1
104	0	1	1	0	1	0	0	0
105	0	1	1	0	1	0	0	1
106	0	1	1	0	1	0	1	0
107	0	1	1	0	1	0	1	1
108	0	1	1	0	1	1	0	0
109	0	1	1	0	1	1	0	1
110	0	1	1	0	1	1	1	0
111	0	1	1	0	1	1	1	1
112	0	1	1	1	0	0	0	0
113	0	1	1	1	0	0	0	1
114	0	1	1	1	0	0	1	0
115	0	1	1	1	0	0	1	1
116	0	1	1	1	0	1	0	0
117	0	1	1	1	0	1	0	1
118	0	1	1	1	0	1	1	0
119	0	1	1	1	0	1	1	1
120	0	1	1	1	1	0	0	0
121	0	1	1	1	1	0	0	1
122	0	1	1	1	1	0	1	0
123	0	1	1	1	1	0	1	1
124	0	1	1	1	1	1	0	0
125	0	1	1	1	1	1	0	1
126	0	1	1	1	1	1	1	0
127	0	1	1	1	1	1	1	1

A	DIP							
	8	7	6	5	4	3	2	1
128	1	0	0	0	0	0	0	0
129	1	0	0	0	0	0	0	1
130	1	0	0	0	0	0	1	0
131	1	0	0	0	0	0	1	1
132	1	0	0	0	0	1	0	0
133	1	0	0	0	0	1	0	1
134	1	0	0	0	0	1	1	0
135	1	0	0	0	0	1	1	1
136	1	0	0	0	1	0	0	0
137	1	0	0	0	1	0	0	1
138	1	0	0	0	1	0	1	0
139	1	0	0	0	1	0	1	1
140	1	0	0	0	1	1	0	0
141	1	0	0	0	1	1	0	1
142	1	0	0	0	1	1	1	0
143	1	0	0	0	1	1	1	1
144	1	0	0	1	0	0	0	0
145	1	0	0	1	0	0	0	1
146	1	0	0	1	0	0	1	0
147	1	0	0	1	0	0	1	1
148	1	0	0	1	0	1	0	0
149	1	0	0	1	0	1	0	1
150	1	0	0	1	0	1	1	0
151	1	0	0	1	0	1	1	1
152	1	0	0	1	1	0	0	0
153	1	0	0	1	1	0	0	1
154	1	0	0	1	1	0	1	0
155	1	0	0	1	1	0	1	1
156	1	0	0	1	1	1	0	0
157	1	0	0	1	1	1	0	1
158	1	0	0	1	1	1	1	0
159	1	0	0	1	1	1	1	1
160	1	0	1	0	0	0	0	0
161	1	0	1	0	0	0	0	1
162	1	0	1	0	0	0	1	0
163	1	0	1	0	0	0	1	1
164	1	0	1	0	0	1	0	0
165	1	0	1	0	0	1	0	1
166	1	0	1	0	0	1	1	0
167	1	0	1	0	0	1	1	1
168	1	0	1	0	1	0	0	0
169	1	0	1	0	1	0	0	1
170	1	0	1	0	1	0	1	0

A	DIP							
	8	7	6	5	4	3	2	1
171	1	0	1	0	1	0	1	1
172	1	0	1	0	1	1	0	0
173	1	0	1	0	1	1	0	1
174	1	0	1	0	1	1	1	0
175	1	0	1	0	1	1	1	1
176	1	0	1	1	0	0	0	0
177	1	0	1	1	0	0	0	1
178	1	0	1	1	0	0	1	0
179	1	0	1	1	0	0	1	1
180	1	0	1	1	0	1	0	0
181	1	0	1	1	0	1	0	1
182	1	0	1	1	0	1	1	0
183	1	0	1	1	0	1	1	1
184	1	0	1	1	1	0	0	0
185	1	0	1	1	1	0	0	1
186	1	0	1	1	1	0	1	0
187	1	0	1	1	1	0	1	1
188	1	0	1	1	1	1	0	0
189	1	0	1	1	1	1	0	1
190	1	0	1	1	1	1	1	0
191	1	0	1	1	1	1	1	1
192	1	1	0	0	0	0	0	0
193	1	1	0	0	0	0	0	1
194	1	1	0	0	0	0	1	0
195	1	1	0	0	0	0	1	1
196	1	1	0	0	0	1	0	0
197	1	1	0	0	0	1	0	1
198	1	1	0	0	0	1	1	0
199	1	1	0	0	0	1	1	1
200	1	1	0	0	1	0	0	0
201	1	1	0	0	1	0	0	1
202	1	1	0	0	1	0	1	0
203	1	1	0	0	1	0	1	1
204	1	1	0	0	1	1	0	0
205	1	1	0	0	1	1	0	1
206	1	1	0	0	1	1	1	0
207	1	1	0	0	1	1	1	1
208	1	1	0	1	0	0	0	0
209	1	1	0	1	0	0	0	1
210	1	1	0	1	0	0	1	0
211	1	1	0	1	0	0	1	1
212	1	1	0	1	0	1	0	0
213	1	1	0	1	0	1	0	1

A	DIP							
	8	7	6	5	4	3	2	1
214	1	1	0	1	0	1	1	0
215	1	1	0	1	0	1	1	1
216	1	1	0	1	1	0	0	0
217	1	1	0	1	1	0	0	1
218	1	1	0	1	1	0	1	0
219	1	1	0	1	1	0	1	1
220	1	1	0	1	1	1	0	0
221	1	1	0	1	1	1	0	1
222	1	1	0	1	1	1	1	0
223	1	1	0	1	1	1	1	1
224	1	1	1	0	0	0	0	0
225	1	1	1	0	0	0	0	1
226	1	1	1	0	0	0	1	0
227	1	1	1	0	0	0	1	1
228	1	1	1	0	0	1	0	0
229	1	1	1	0	0	1	0	1
230	1	1	1	0	0	1	1	0
231	1	1	1	0	0	1	1	1
232	1	1	1	0	1	0	0	0
233	1	1	1	0	1	0	0	1
234	1	1	1	0	1	0	1	0
235	1	1	1	0	1	0	1	1
236	1	1	1	0	1	1	0	0
237	1	1	1	0	1	1	0	1
238	1	1	1	0	1	1	1	0
239	1	1	1	0	1	1	1	1
240	1	1	1	1	0	0	0	0
241	1	1	1	1	0	0	0	1
242	1	1	1	1	0	0	1	0
243	1	1	1	1	0	0	1	1
244	1	1	1	1	0	1	0	0
245	1	1	1	1	0	1	0	1
246	1	1	1	1	0	1	1	0
247	1	1	1	1	0	1	1	1
248	1	1	1	1	1	0	0	0
249	1	1	1	1	1	0	0	1
250	1	1	1	1	1	0	1	0
251	1	1	1	1	1	0	1	1
252	1	1	1	1	1	1	0	0
253	1	1	1	1	1	1	0	1
254	1	1	1	1	1	1	1	0

9.2 Planning without air filter

Sensitivity (% LT/m)	Number of openings											
	1	2	3	4	5	6	7	8	9	10	11	12
0.5	A	A	B	B	B	B	C	C	C	C	C	C
0.6	A	A	B	B	B	C	C	C	C	C	C	C
0.7	A	B	B	B	C	C	C	C	C	C	C	C

Sensitivity (% LT/m)	Number of openings											
	1	2	3	4	5	6	7	8	9	10	11	12
0.8	A	B	B	C	C	C	C	C	C	C	C	C
0.9	A	B	B	C	C	C	C	C	C	C		
1.0	A	B	B	C	C	C	C	C	C			
1.1	A	B	C	C	C	C	C	C				
1.2	A	B	C	C	C	C	C	C				
1.3	B	B	C	C	C	C	C					
1.4	B	B	C	C	C	C						
1.5	B	B	C	C	C	C						
1.6	B	C	C	C	C	C						
1.7	B	C	C	C	C							
1.8	B	C	C	C	C							
1.9	B	C	C	C	C							
2.0	B	C	C	C								

9.2.1 Without any other pipe accessories

Pipe shape	$U_{Fan}[V]$	Number of openings												Max. allowed pipe length (m)
		1	2	3	4	5	6	7	8	9	10	11	12	
I	≥ 9	40	40	40	40	40								Max. allowed pipe length (m)
U	≥ 9		50	50	50	50	50	50	50	50	50	50	50	
M	≥ 9			50	50	50	50	50	50	50	50	50	50	
Double U	≥ 9				50	50	50	50	50	50	50	50	50	

9.2.2 With water separator

Pipe shape	$U_{Fan}[V]$	Number of openings							
		1	2	3	4	5	6	7	8
I	≥ 9	40	40	40					
U	≥ 9	50	50	50	50	50	50		
M	≥ 9	50	50	50	50	50	50		
Double U	≥ 9	50	50	50	50	50	50	50	50

9.3 Planning with Air Filter

Sensitivity (% LT/m)	Number of openings											
	1	2	3	4	5	6	7	8	9	10	11	12
0.5	A	B	B	B	C	C	C	C	C	C	C	C

Sensitivity (% LT/m)	Number of openings											
	1	2	3	4	5	6	7	8	9	10	11	12
0.6	A	B	B	B	C	C	C	C	C	C	C	C
0.7	A	B	B	C	C	C	C	C	C	C	C	
0.8	A	B	B	C	C	C	C	C	C			
0.9	A	B	C	C	C	C	C	C				
1.0	B	B	C	C	C	C	C					
1.1	B	B	C	C	C	C	C					
1.2	B	B	C	C	C	C						
1.3	B	C	C	C	C	C						
1.4	B	C	C	C	C							
1.5	B	C	C	C	C							
1.6	B	C	C	C								
1.7	B	C	C	C								
1.8	B	C	C	C								
1.9	B	C	C	C								
2.0	B	C	C									

9.3.1 Without Any Other Pipe Accessories

Pipe shape	U _{Fan} [V]	Number of openings												Max. allowed pipe length (m)	
		1	2	3	4	5	6	7	8	9	10	11	12		
I	≥9	40	40	40	40	40									Max. allowed pipe length (m)
U	≥9		50	50	50	50	50	50	50	50	50	50	50		
M	≥9			50	50	50	50	50	50	50	50	50	50		
Double U	≥9				50	50	50	50	50	50	50	50	50		

9.3.2 With water separator

Pipe shape	U _{Fan} [V]	1	2	3	4	5	6	7	8
I	≥9	40	40	40					
U	≥9	50	50	50	50	50	50		
M	≥9	50	50	50	50	50	50		
Double U	≥9	50	50	50	50	50	50	50	50

9.4 Test Log for Aspiring Smoke Detectors in the FAS-420-TM Series

Device number									
---------------	--	--	--	--	--	--	--	--	--

Serial number of detection module							
Serial number of housing base							
	---	Measurement value/set value					
Commissioning							
Visual check	+/-						
Negative pressure	[Pa]						
Sensitivity	[%/m]						
Alarm delay	[s]						
Air flow range	[10-50%]						
Fault delay	[min]						
Malfunction saving	[yes/no]						
Dynamic air flow	[yes/no]						
Localization	[yes/no]						
LOGIC·SENS	[yes/no]						
Air-Pressure-Dependent Calibration	[yes/no]						
Air-pressure-independent calibration	[yes/no]						
Height	[m above sea level]						
Air pressure	[hPa]						
Fan voltage	[9-13.5 V]						
Airflow	[m/sec]						
Temperature	[°C]						
Obstruction malfunction							
LED flashes	+/-						
Relay fails after delay	+/-						
Signal transmission to fire panel	+/-						
Cause eliminated, LED off	+/-						
Relay activates after drop below threshold	+/-						
Cause eliminated, LED saved	+/-						
Relay remains off for min. 100 secs	+/-						
Breakage malfunction							
LED flashes	+/-						
Relay fails after delay	+/-						

Signal transmission to fire panel	+/-						
Cause eliminated, LED off	+/-						
Relay activates after drop below threshold	+/-						
Cause eliminated, LED saved	+/-						
Relay remains off for min. 100 secs	+/-						
Main alarm							
LED flashes	+/-						
Relay activates after delay	+/-						
Signal transmission to fire panel	+/-						
LED saved	+/-						
Relay saved	+/-						
Localization							
Blow-out time	[10-255 seconds]						
Blow out fan	[9-13.5 V]						
Intake fan	[9-13.5 V]						
LED localization permanently at air sampling opening A	[yes/no] / [sec]						
LED localization permanently at air sampling opening B	[yes/no] / [sec]						
LED localization permanently at air sampling opening C	[yes/no] / [sec]						
LED localization permanently at air sampling opening D	[yes/no] / [sec]						
LED localization permanently at air sampling opening E	[yes/no] / [sec]						
Response indicators							
Air sampling opening A	[yes/no]						
Air sampling opening B	[yes/no]						
Air sampling opening C	[yes/no]						
Air sampling opening D	[yes/no]						
Air sampling opening E	[yes/no]						
Legend: + OK / - not OK							

Place:

Issuer:

Date:

Signature:

Index

Symbols

"Improved version" LSN mode 57

A

Air conditioning units 9
 Air filter 20, 29, 71, 72, 83, 84
 Air sampling opening 8, 21, 27, 31, 68
 Air-conditioning duct 9, 50, 51
 Air-conditioning unit 50, 69
 Airflow initialization 75, 79
 Airflow malfunction 77, 78, 84, 86
 Airflow monitoring 8, 14, 33
 Airflow sensitivity 33
 Airflow sensor 11, 14, 33
 Airflow sensors 8
 Alarm 12, 27
 Alarm current 55
 Alarm delay 64, 78
 Alarm transfer 76, 81
 Area monitoring 9, 20, 23
 Aspiration boring 8, 68
 Aspiration reducing clips 21
 Aspiration reducing film sheet 8, 21, 26
 Asymmetrical structure 31

B

Bends 33, 66
 Blast air 72, 81
 Blowing out 20, 22
 Branch length 32

C

Calibrating the airflow sensor 15, 75, 85
 Charging current 55
 Concealed installation 23
 Current calculation 55

D

Delay 12, 14, 15
 Double U-pipe 32
 Double U-pipe system - simplified planning 47
 Double U-pipe system activation thresholds 44
 Double-U-pipe system for space protection 40, 44
 Duct cross-section 50, 52

E

End cap 20, 52, 66
 Equipment monitoring 10, 20, 32

F

FAS-ASD-DIAG Diagnostic Software 8, 16, 19, 25, 65,
 74, 75, 77, 80, 87

Fault indication 77, 80
 Fittings 20, 26, 66
 Flow resistance 33, 66
 Flow speed 50
 Functional test 77

H

High-speed units 50

I

I pipe system activation thresholds 41
 I pipe system for space protection 40
 Installation material 71
 Internal alarm 7, 12, 18
 I-pipe system 32

L

Local SecurityNetwork (LSN) improved version 7
 Low-speed units 50
 LSN configuration 63
 LSN connection 16

M

Marking tape 8, 21, 26, 67
 Monitoring window 15, 86
 M-pipe system 32, 43
 M-pipe system activation thresholds 43

O

Obstruction 8, 14, 21, 77, 81, 86, 87

P

Pipe breakage 8, 77, 87
 Pipe elbow 26, 33, 66
 Pipe system components 26
 Planning limits 35
 Plastic clip 22, 27
 Pore width 25
 Pressure area 23, 34, 51
 Programming software 63, 78
 Protection category 28

R

Reset 15, 19
 Response sensitivity 7, 12, 28, 34

S

Sintered metal filter 25, 26
 Sound power level 28
 Special planning 8, 31
 Standby current 55
 Symmetrical structure 31

T

Technical specifications 27

Temperature range	28
T-fitting	20, 69
Three-way tap	20, 26, 29, 72
Transport speed	33
Troubleshooting	77

U

U pipe system for space protection	41
U-pipe system	32
U-pipe system activation thresholds	42

W

Water separator	20, 24, 26, 29
-----------------	----------------



Bosch Sicherheitssysteme GmbH

Robert-Bosch-Ring 5

85630 Grasbrunn

Germany

www.boschsecurity.com

© Bosch Sicherheitssysteme GmbH, 2020