

Security ropes

The electromagnetic lock undergoes repeated shocks and the vibration at the points of fixation on the frame (frequencies of openings / closures, attempt of opening wears closed and attempts of vandalism) which can loosen the fixing bolts/ screws.

To prevent the risk of the electromagnetic block from falling, install both security ropes supplied, to guarantee the safety of the users (see plan above).

.....

The N.O./N.C. signal only switches when the door is closed with the power to it on.

IMPORTANT NOTE

Check the jumper position before connecting the lock to the input current. A wrong position could damage the lock. This type of damage is not covered by the warranty.

BS60

G0301FR1036V01 All the information contained within this document (photos, drawing, features, specifications and dimensions) could be perceptibly different and can be changed without prior notice.

ADC335