

MAKE THE
WORLD SEE

Milestone Systems

Milestone Husky IVO™ 700R Rev. 2

Getting started and maintenance guide

November 2024



Contents

| | |
|------------------------------------------------------|-----------|
| Copyright, trademarks, and disclaimer | 4 |
| Safety | 5 |
| About this guide | 6 |
| Front view | 7 |
| Opening the unit | 7 |
| Back view | 8 |
| Information tag and model label | 9 |
| The information tag | 9 |
| The model label | 9 |
| Link to detailed hardware documentation | 11 |
| Getting started checklist | 12 |
| Before you install | 13 |
| Prepare network and devices | 13 |
| Obtain a software license code | 13 |
| Prepare your unit | 14 |
| Turn on the unit | 15 |
| Windows first run | 15 |
| Complete the Husky Assistant Wizard | 17 |
| Post-installation tasks | 24 |
| Download the XProtect® Device Pack | 24 |
| Update Windows | 24 |
| Install clients on other computers | 24 |
| Husky Assistant | 25 |
| Husky Assistant Properties | 25 |
| Choose your language | 26 |
| Apply optimizations | 27 |
| Storage management | 27 |
| Check RAID status | 27 |

| | |
|------------------------------------------------|-----------|
| Choose RAID type | 28 |
| Change RAID type | 29 |
| Support | 29 |
| Create a diagnostics file | 30 |
| Updates | 30 |
| Monitor and manage your system | 31 |
| Recovery | 32 |
| Factory reset from recovery partition | 32 |
| Factory reset from a bootable USB device | 33 |
| XProtect Upgrade | 35 |
| Accessing Husky software updates | 35 |
| System scaling | 36 |

Copyright, trademarks, and disclaimer

Copyright © 2024 Milestone Systems A/S

Trademarks

XProtect is a registered trademark of Milestone Systems A/S.

Microsoft and Windows are registered trademarks of Microsoft Corporation. App Store is a service mark of Apple Inc. Android is a trademark of Google Inc.

All other trademarks mentioned in this document are trademarks of their respective owners.

Disclaimer

This text is intended for general information purposes only, and due care has been taken in its preparation.

Any risk arising from the use of this information rests with the recipient, and nothing herein should be construed as constituting any kind of warranty.

Milestone Systems A/S reserves the right to make adjustments without prior notification.

All names of people and organizations used in the examples in this text are fictitious. Any resemblance to any actual organization or person, living or dead, is purely coincidental and unintended.

This product may make use of third-party software for which specific terms and conditions may apply. When that is the case, you can find more information in the file `3rd_party_software_terms_and_conditions.txt` located in your Milestone system installation folder.

Safety

Warning!



Risk of explosion if battery is replaced by incorrect battery type.

Dispose of used batteries according to the instructions.

Caution

Replacement of a BATTERY with an incorrect type that can defeat a SAFEGUARD (for example, in the case of some lithium BATTERY types).



Disposal of a BATTERY into fire or a hot oven, or mechanically crushing or cutting of a BATTERY, that can result in an EXPLOSION.

Leaving a BATTERY in an extremely high temperature surrounding environment that can result in an EXPLOSION or the leakage of flammable liquid or gas.

A BATTERY subjected to extremely low air pressure that may result in an EXPLOSION or the leakage of flammable liquid or gas.

Make sure to connect the power cord to a socket-outlet with earthing connection.



Suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75.

About this guide

This getting started and maintenance guide for Milestone Husky IVO is a point of reference to the Milestone Husky software and Milestone Husky hardware.

This guide describes Husky Assistant, an application that helps you install, maintain, and reconfigure your system.

Front view



| | | |
|------------------------------------------|--------------------------------|------------------|
| 1. Bezel lock | 5. Drive activity | 9. USB 2.0 |
| 2. System health and system ID indicator | 6. Information tag | 10. Power button |
| 3. 4 x 3.5" hard drive slots | 7. iDRAC direct indicator | |
| 4. Drive status | 8. iDRAC direct micro-USB port | |


Opening the unit

If you need to unlock and remove the bezel to open the unit and install or remove system components, see the link to the detailed hardware documentation below.

Please read and follow the safety instructions in the detailed hardware documentation when handling the unit.

For more information, see [Link to detailed hardware documentation on page 11](#)

Back view

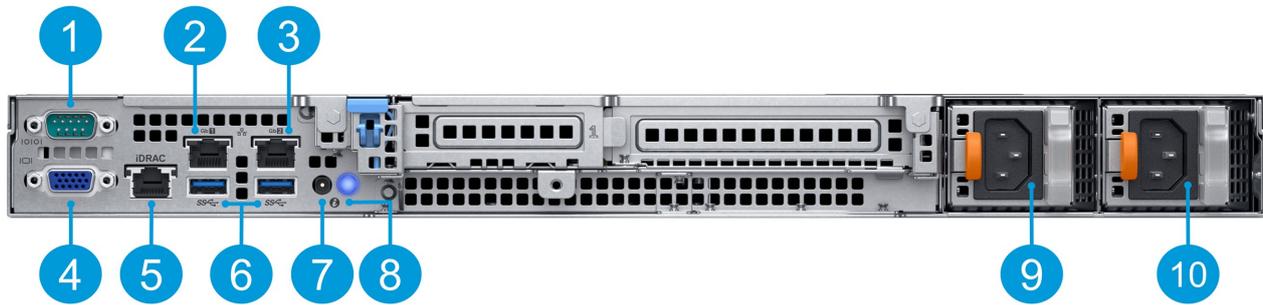

| | | |
|------------------------|---------------------------------------------|-------------------------|
| 1. DB9 serial com port | 5. iDRAC9 dedicated network port | 9. Power supply unit 1 |
| 2. NIC port (Gb 1) | 6. 2 x USB 3.0 Type-A | 10. Power supply unit 2 |
| 3. NIC port (Gb 2) | 7. System status indicator cable port (CMA) | |
| 4. VGA port | 8. System identification button | |

Information tag and model label

The information tag

You can identify your system by the information tag. Pull out the information tag in front of the system to view the unique identifiers. The information tag contains the following information:

| | |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Service tag | The unique express service code and service tag. Refers to the serial number of the unit. Always provide the details when contacting support. |
| iDRAC password | A password used for remote management via the iDRAC interface.  You can find the IP address of the iDRAC interface in Husky Assistant > support. |
| iDRAC port MAC address | The physical address (MAC address) of the iDRAC port. |
| Main board ethernet card MAC address | The physical address (MAC address) of the on-board ethernet card. |



The information tag can sometimes be referred to as the luggage tag.


The model label

The model label displays the revision number of your Husky IVO unit.

Revision numbers change when the physical machine a Husky IVO product is based upon, is changed. This is because a different physical machine may result in different hardware and software configurations, that will in turn require a revision of the Husky IVO product. Sometimes the change is substantial, other times the change is negligible.

The model label is located on top of the unit cover.

The image below illustrates a model label for a Milestone Husky IVO 700R Rev. 2 unit.

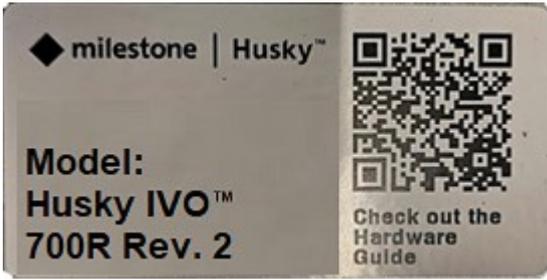

The model label for other Husky IVO products will only vary by product name (Milestone Husky IVO™ 150D, Milestone Husky IVO™ 350R, Milestone Husky IVO™ 350T, Milestone Husky IVO™ 700R, Milestone Husky IVO™ 1000R, or Milestone Husky IVO™ 1800R).



Only revision 2 and above are displayed on the model label. Revision 1 is considered the baseline model and is not displayed.



When contacting support, it is recommended to have the revision number ready as some hardware and software configurations may vary from revision to revision.

Link to detailed hardware documentation

For more information on the specific features and functionality of your unit, see [Installation and service manual](#).



The documentation provided can have slightly different specifications or configurations compared to your Milestone Husky IVO unit.

Getting started checklist

This guide applies to all models of the Milestone Husky IVO. Follow the checklist below to ensure that you carry out the steps of your installation in the right order.

| | | |
|--------------------------|---------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> | Prepare network and devices | <ul style="list-style-type: none"> • Assign static IP addresses to all system components and cameras • Make sure camera models and firmware are supported by the XProtect system • Cameras must be connected to the network, and you can access them from your unit |
| <input type="checkbox"/> | Obtain a software license code | <ul style="list-style-type: none"> • Purchase XProtect software and obtain the license file • Go to the Milestone website (https://online.milestonesys.com/) and register your software license code (SLC) <div style="background-color: #e6f2ff; padding: 10px; border: 1px solid #0070c0; margin-top: 10px;">  This step does not apply if you are using an XProtect Essential+ license </div> |
| <input type="checkbox"/> | Prepare your unit | <ul style="list-style-type: none"> • Mount the unit on a shelf for the desktop and tower models, or use rails for the rack models, to support the chassis • Connect peripherals, LAN, and power |
| <input type="checkbox"/> | Turn on the unit and complete the Husky Assistant | <ul style="list-style-type: none"> • Configure computer name and domain or workgroup settings • Hard drive detection • Select the preferred storage configuration • Select the XProtect software version • Links to detailed description of system installation |
| <input type="checkbox"/> | Download the latest XProtect Device Pack | <ul style="list-style-type: none"> • A device pack is automatically included when you install the XProtect software. For support of new devices and firmware versions, get the latest device pack |
| <input type="checkbox"/> | Update Windows® | <ul style="list-style-type: none"> • Make sure that your Windows operating system is updated with all the latest Windows updates |
| <input type="checkbox"/> | Install clients on other computers | <ul style="list-style-type: none"> • Install XProtect Smart Client and XProtect Management Client on other computers for better system performance |

Before you install

Milestone recommends that you go through the steps described in this article before you start the actual installation.

Prepare network and devices

1. Assign static IP addresses to all system components, devices, and cameras.

To prepare and configure your devices or cameras, follow the instructions provided by the camera manufacturer.

2. Make sure that your cameras and devices are supported and connected to the camera network.

On the Milestone website, you can find a detailed list of supported devices and firmware versions (<https://www.milestonesys.com/support/tools-and-references/supported-devices/>).

Obtain a software license code

Your Milestone Husky unit is shipped with XProtect video management software pre-loaded, and you can use it with any version of the five XProtect VMS products by applying a valid software license code (SLC). You receive the SLC when you purchase the XProtect product. Read more about Milestone XProtect products and Milestone Care™ coverage on the Milestone website to find out which product matches your needs.

The SLC is printed on your order confirmation, and the software license file is named after your SLC. Milestone recommends that you register your SLC on the Milestone website (<https://online.milestonesys.com/>) before installation. Your reseller may have done that for you.

You can also run the free version of XProtect Essential+ on your unit. This version provides you with basic functionality and a limited number of cameras compared to a purchased XProtect VMS system. In this case, the license is provided with the installer. To receive this free license, your unit needs to be connected to the internet during installation.

When you run Husky Assistant, you can see the version of the pre-loaded VMS. If you want a different version, you can choose that option if you have a valid SLC.

If your unit is used as a recording server to an existing VMS system, you do not need an SLC. This setup is covered by the SLC that you bought with the VMS system.

XProtect software is licensed through different types of licenses:

- Base licenses: Controls which XProtect product you can use.
- Device licenses: Controls how many hardware devices you may connect to the Milestone Husky unit. A hardware device can be a camera, encoder, or similar, identified by a separate IP address. You do not need licenses for speakers, microphones, or input and output devices attached to the hardware devices.
- XProtect extensions: Your new Milestone Husky unit can run any XProtect extension. Most XProtect extensions require additional licenses.

After installation, the surveillance system runs on licenses that need to be activated before a certain period ends. This is the grace period. Once the installation is complete, you can get an overview of your licenses for all installations with this SLC on the Basics > License Information node in the Management Client.

Milestone recommends that you activate your licenses before you make the final adjustments.

- For online activation, log in to the Software Registration page with your My Milestone account on the Milestone website (<https://online.milestonesys.com/>).
- For offline activation, you must export a license request (.lrq) file in the Management Client, and then log in to the Software Registration page and upload the .lrq file.

Once you have uploaded the .lrq file, Milestone emails you an activated .lic file for import.

Prepare your unit



Always place the unit on a shelf or use rails to support the chassis.

1. Connect your peripherals: mouse, keyboard, display and audio.
2. Connect your local area network with internet connection, if available, to a NIC port. This network is for management and viewing.
3. Connect your camera network to a different NIC port. If your unit is equipped with a higher bandwidth network card, connect your camera network to the this network port.
4. Connect all power cables and plug them into a power socket.


Turn on the unit

Turn on your Milestone Husky unit and wait for Windows to boot for the first time.


Windows first run

Configure the country, language, keyboard, and account information:

1. Select your region and click **Yes**.

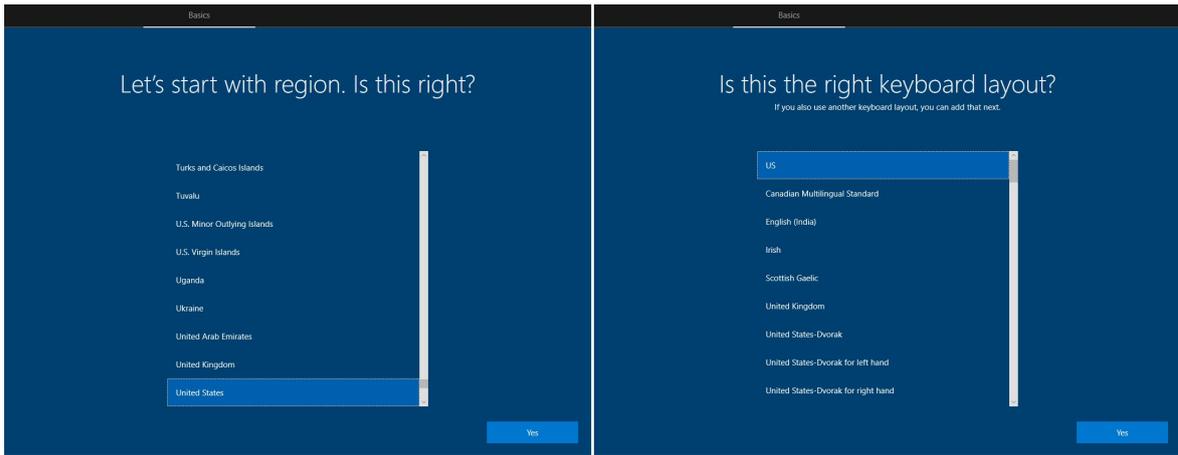


2. Select the right keyboard layout and click **Yes**.
3. Add a second keyboard layout or click **Skip**.
4. Create a user account and click **Next**.

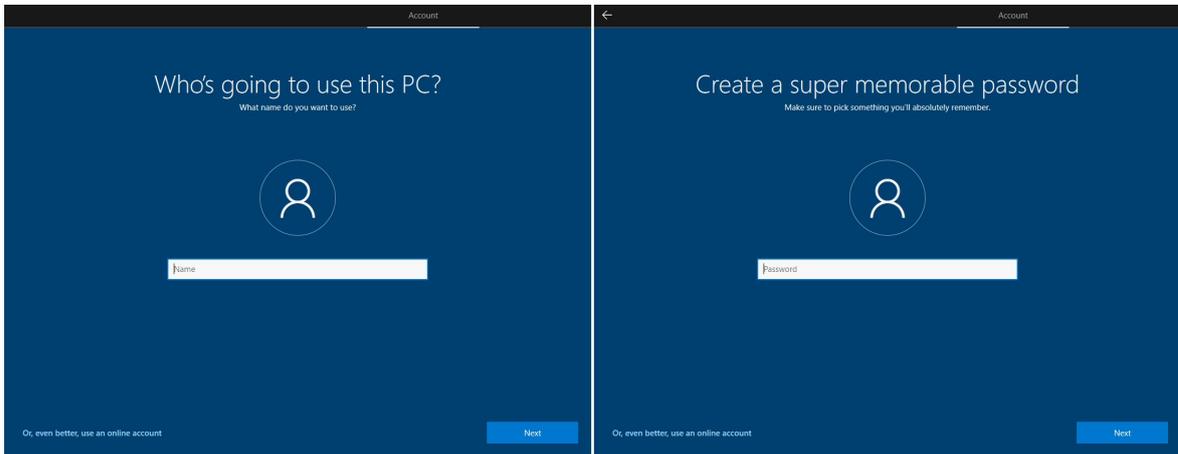

5. Create password and click **Next**.
6. Confirm password and click **Next**.
7. Add a hint and click **Next**.

8. Get the latest Windows updates or click **Skip for now**.

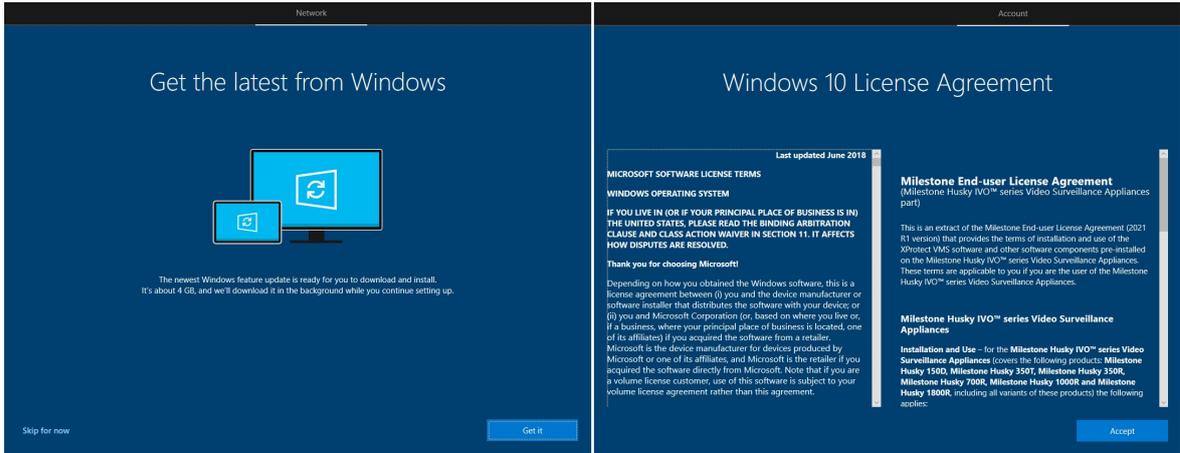

9. Accept the license agreements.

10. Complete the services selection and wait for the Windows desktop to appear.

Complete the Husky Assistant Wizard




Have your Milestone XProtect license file ready if you want to install Milestone XProtect VMS on your Husky IVO unit as part of completing the Husky Assistant wizard. You can complete the Husky Assistant wizard without installing Milestone XProtect but XProtect must then be manually installed later.

Husky Assistant now starts automatically. This wizard helps you check, select, and configure your Milestone Husky IVO with:


- Computer name and domain or workgroup
- Data storage drive detection
- Data storage configuration
- Milestone XProtect version
- Additional system optimizations

To complete the wizard:

1. Select your preferred Husky Assistant language and click **Next**.

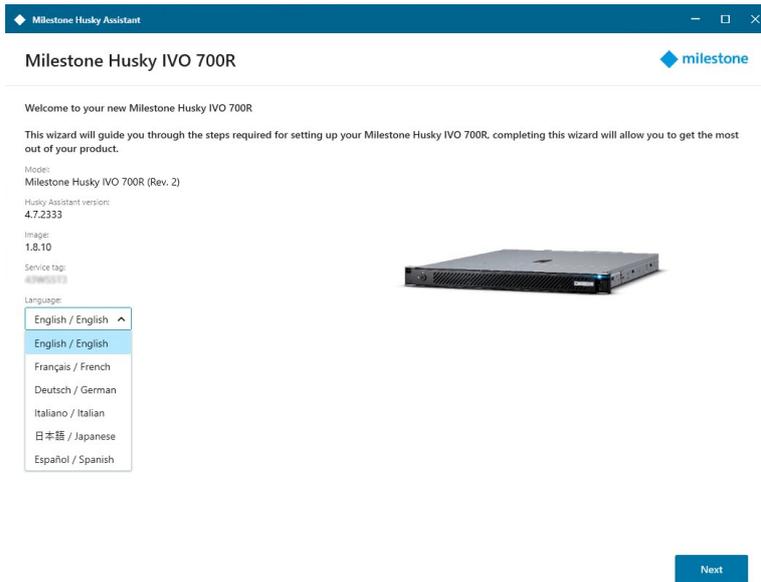

2. Click **Computer name / Domain changes** to configure computer name and domain or workgroup settings.

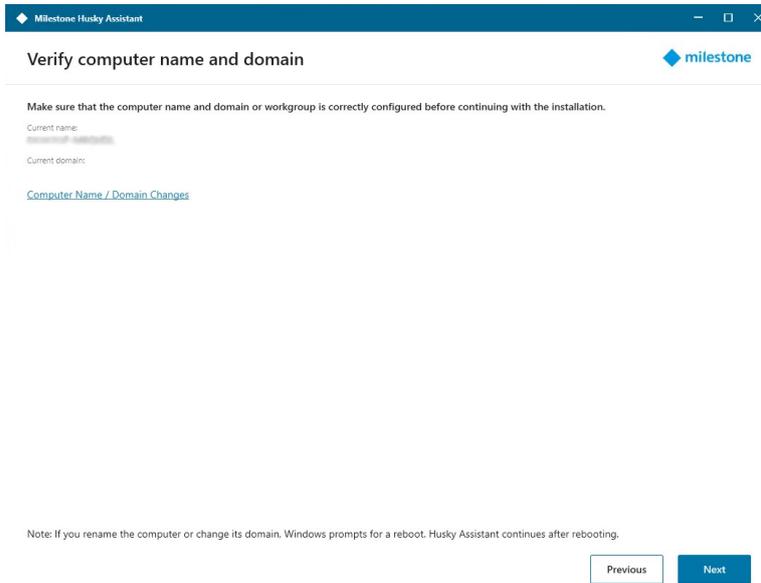

The computer name must be between 1 and 15 characters long and must not be "localhost".

Additional computer naming restrictions

The following characters cannot or should not be used in computer names:

- backslash (\)
- slash (/)
- colon (:)
- asterisk (*)
- question mark (?)
- quotation mark (")
- less than sign (<)
- greater than sign (>)
- vertical bar (|)
- periods (.)
- hyphen (-)
- underscore (_)

 The first character of a computer name must be alphabetic or numerical and computer names may not consist of only numerals if the computers is a member of an Active Directory domain.


 Limit the characters used in the computer name to alphabetic (A-Z) or numerical (0-9) only.

When completed, Windows will require a restart to apply the changes.


3. Restart Windows and wait for Windows to boot.

Husky Assistant restarts. Click **Next**.

4. Because you have already configured the name and domain setting, click **Next**.
5. Make sure that all the hard drives are detected and click **Next**.

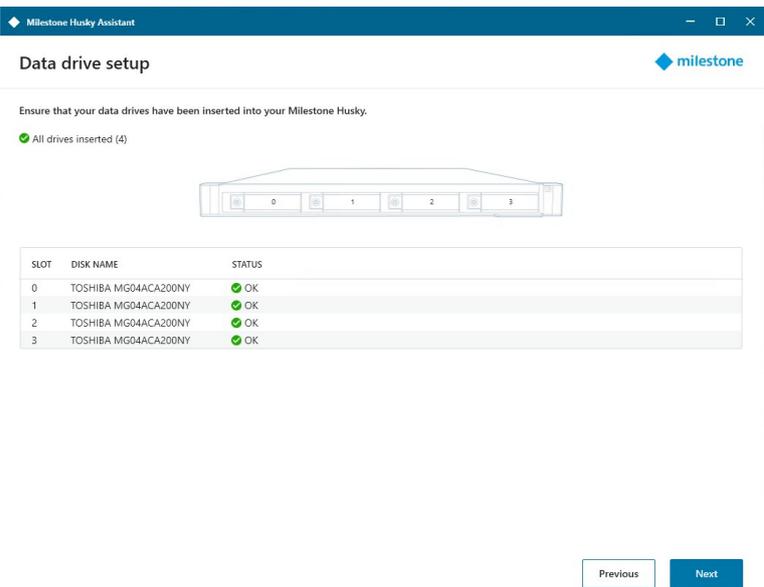


6. Select the preferred RAID configuration to match your storage requirement. Click **Next**.

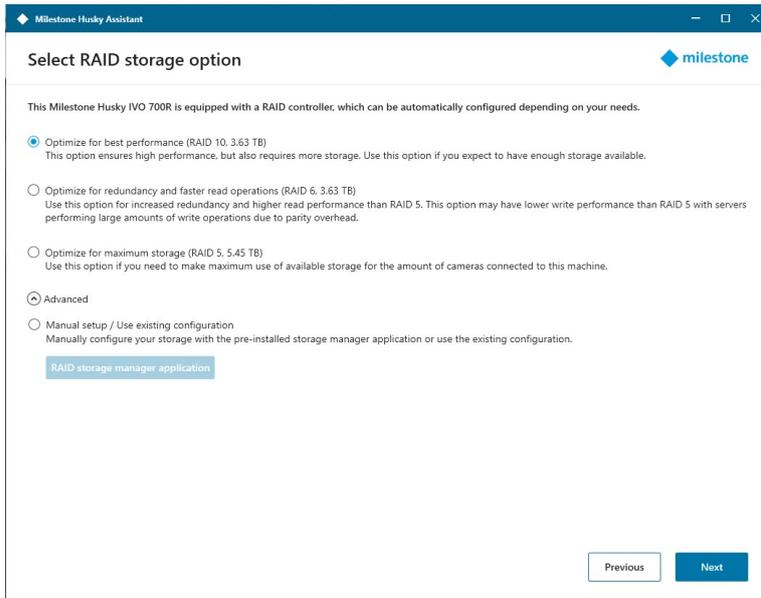

The **Advanced** option is to manually configure the RAID using the RAID storage manager application.

7. You have different options when selecting the Milestone XProtect version to install. Select one of these options:

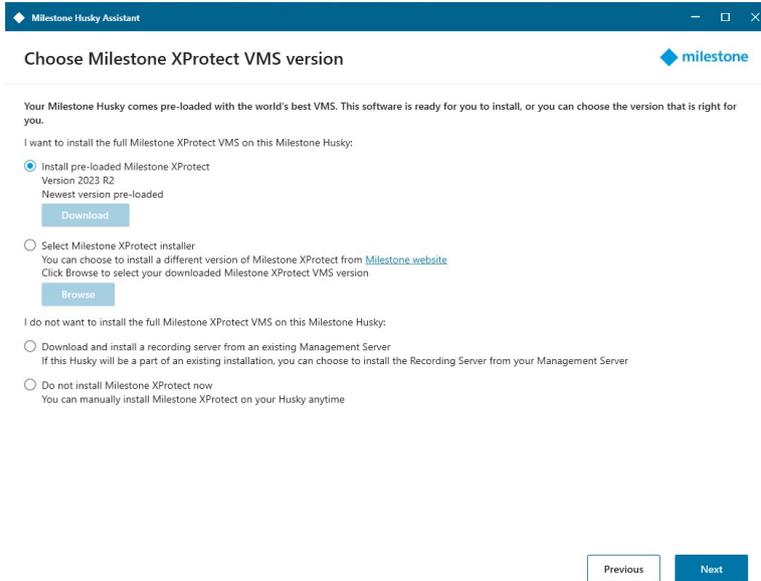


- Check if the pre-loaded XProtect version is the version that you want to install. If yes, select **Install pre-loaded Milestone XProtect** and click **Next**.
- If you want to install an XProtect version different than the pre-loaded one:
 1. Choose **Select Milestone XProtect installer**.
 2. Download the XProtect version that you prefer from the **Milestone website**.
 3. Click **Browse** to select the downloaded installer file and click **Next**.
- To use your unit as a recording server in an already existing Milestone XProtect system:
 1. Select **Download and install a recording server from an existing Management Server** and click **Next**.
 2. Provide the IP address of the computer with the management server installed, and credentials.
 3. Click **Next**. The installation files for the recording server will be downloaded from the management server later.
- Select **Do not install Milestone XProtect now** if you want to install Milestone XProtect later without the aid from Husky Assistant.



Remember to apply optimizations in Husky Assistant after installation.

8. The **Review and apply the configuration** window appears. Verify your selections and click **Apply** to start the process.

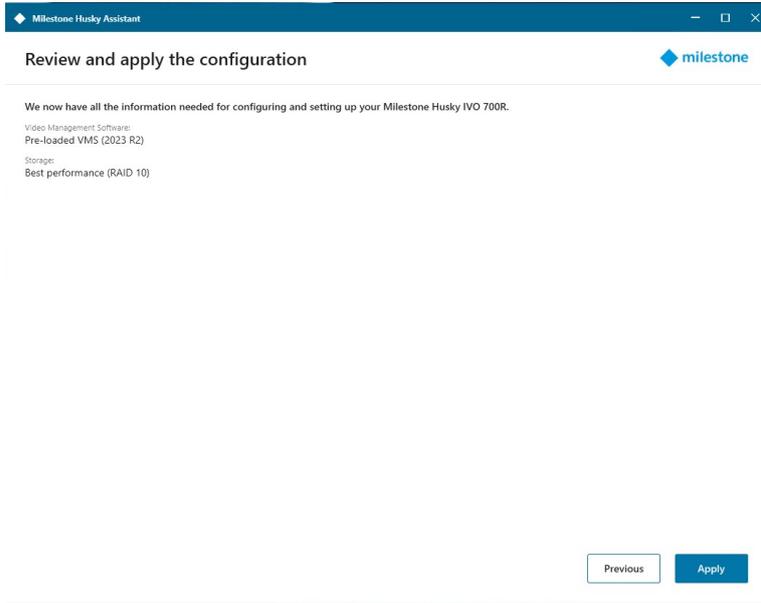

The system automatically starts the Milestone XProtect installation. For more information, see the [administrator manual for XProtect VMS](#).

After you have completed the Husky Assistant wizard, the application changes and Husky Assistant now serves as an application that helps you configure, maintain, and see the status of your Milestone Husky system. Find the Husky Assistant shortcut on the Windows desktop.

Post-installation tasks

Download the XProtect® Device Pack

A device pack is a set of drivers that is installed with your XProtect system to interact with your devices. A device pack is installed on the recording server. Milestone adds support for new devices and firmware versions on an ongoing basis, and releases device packs every two months on average. A device pack is automatically included when you install the XProtect system. To get the latest device pack, manually check for newer versions to download and install.

To update your device pack after installation, go to the download section of the Milestone website (<https://www.milestonesys.com/downloads/>) and download the relevant installation file.



If your system uses very old cameras, you may need to download the device pack for legacy devices. For more information, see <https://www.milestonesys.com/community/business-partner-tools/device-packs/>.

Update Windows

To update your Windows operating system with all the latest Windows updates, go to Windows Update settings and check for updates. Make sure to install all available updates and restart the Husky unit if required.

Install clients on other computers


You can access your XProtect system from other computers via the clients. Accessing the clients from remote computers will give you better system performance and free up system resources on your Milestone Husky unit. The clients are:

- XProtect Smart Client (used for viewing video)
See also how to [install XProtect Smart Client](#) in the user manual for Smart Client.
- XProtect Management Client (used for configuring and managing the system)
For more information, see how to [install new XProtect components](#) in the administrator manual for your XProtect VMS.

Husky Assistant

Husky Assistant is an application that helps you configure, maintain, and see the status of your Milestone Husky system. Find the Husky Assistant shortcut on the Windows desktop.

Husky Assistant Properties

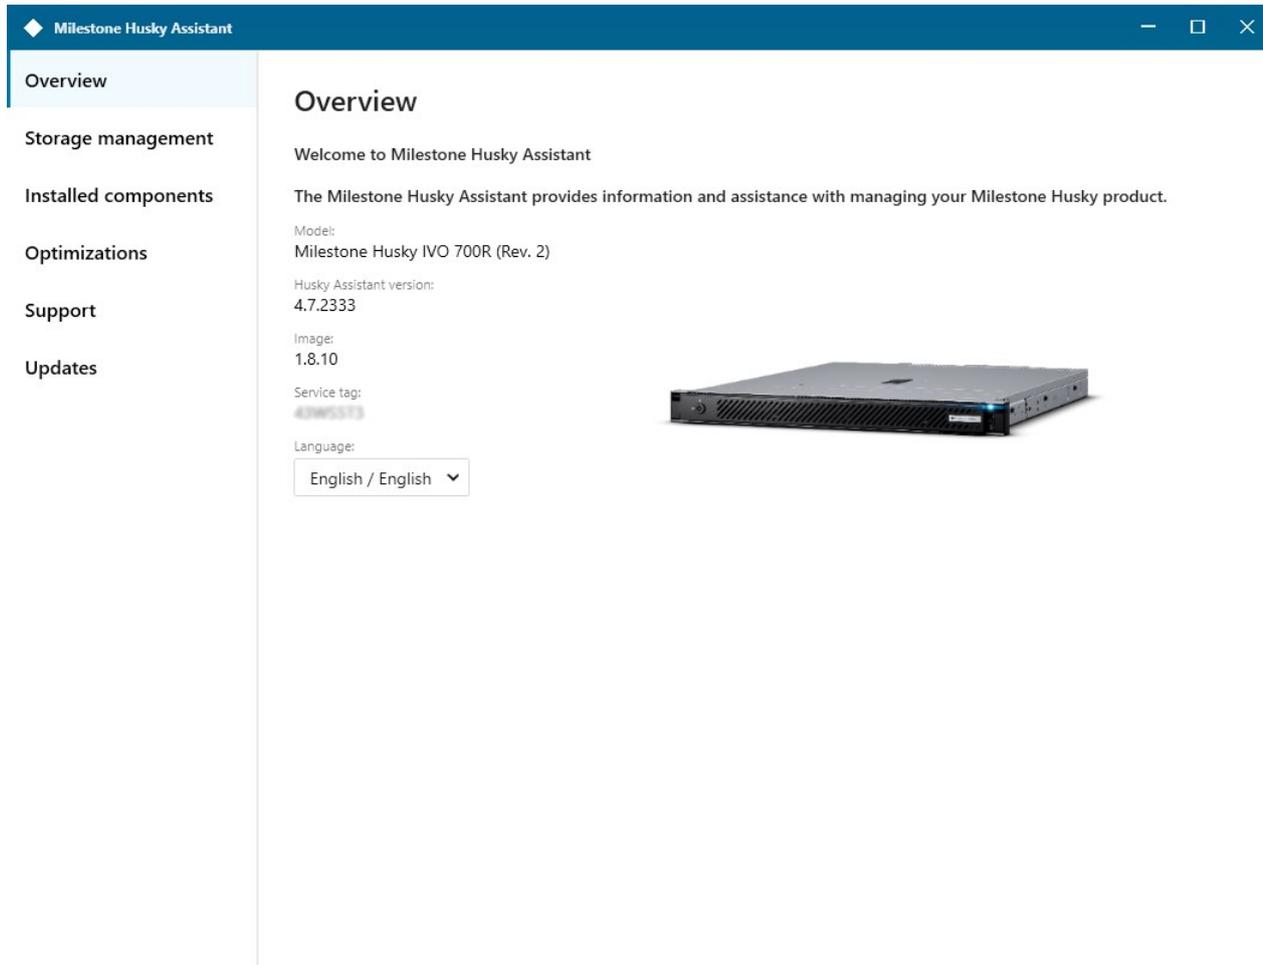

The Husky Assistant has the following features:

| Navigation element | Description |
|--------------------|------------------------------------------------------------------------------------------------------------------|
| Overview | A list of details about the unit: <ul style="list-style-type: none">• Model: Milestone Husky model |

| Navigation element | Description |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | <ul style="list-style-type: none"> • Version: Milestone Husky Assistant version • Image: Husky firmware version • Serial number: Refers to the service tag of the unit <p>You can change the language in which Husky Assistant appears.</p> |
| Storage management | <p>See the status of the current data RAID array.</p> <p>Change the data RAID configuration.</p> |
| Installed components | <p>A list of installed Milestone software components and versions.</p> |
| Optimizations | <p>A list of applied or available optimizations you can apply.</p> |
| Support | <p>Run the Milestone Diagnostics Tool to create files that are needed for the Milestone reseller when the reseller helps you troubleshoot.</p> <p>Lists the information that you need to contact Milestone Support. Always contact your Milestone reseller that you have bought the unit from before contacting Milestone Support.</p> <p>Find the iDRAC remote management IP address.</p> <div style="background-color: #e6f2ff; padding: 5px; border: 1px solid #0070c0;">  Will only be present when the iDRAC port is connected to a network. </div> |
| Updates | <p>Update your Husky software components.</p> <p>Displays the installed versions of the Milestone Husky Services Installer and the Milestone Husky System Health Services Installer and indicates if the installed versions are up to date.</p> <p>If you can update your unit, you can start the update on the unit in question. If you have multiple Husky units, you must manually start the update on each unit.</p> |

Choose your language

To select your preferred language:

1. Open Husky Assistant.
2. On the **Overview** tab, select your preferred language from the list of available languages.



Husky Assistant chooses English by default. All language changes require a restart of Husky Assistant.

Apply optimizations

Husky Assistant can help you to optimize Windows for running XProtect software and to optimize XProtect software for running on your Husky unit. If you have installed Milestone XProtect VMS without using Husky Assistant, you need to apply the available optimizations. To check if any optimizations are available:

1. Select the **Optimizations** tab.
2. A list of the available optimizations appears.
3. If an optimization is available, click **Optimize**.
4. Accept any user account control warning and wait for the optimization to be applied.
5. Check that the optimization is applied.

Storage management

On the Storage management tab, you can see the RAID type and status of the current data storage RAID array. You can also change the RAID type to fit your storage needs for capacity, redundancy, and performance.

Check RAID status

To check the type and status of the data RAID configuration:

1. Select the **Storage management** tab.
2. The type and status of the current RAID array appears. The different types and statuses are:

| Type | Description |
|---------|------------------------------------------|
| RAID 10 | For best performance and most redundancy |
| RAID 6 | For high capacity and more redundancy |
| RAID 5 | For maximum capacity |

| Status | Description |
|----------------|--------------------------------------------------------------------------------------------------|
| Good | Normal working state |
| Degraded | The RAID is missing a hard drive, but it is still available |
| Offline | Too many hard drives are missing from the RAID array, so the RAID is now unavailable or offline. |
| Not Configured | No RAID is configured |
| Unsupported | A RAID configuration other than RAID 5, RAID 6, or RAID 10 is in use |
| Unknown | The status of the RAID array could not be detected |

Choose RAID type

Your Milestone Husky IVO unit holds several hard drives. You can configure these hard drives as a data storage for Milestone XProtect based on your capacity, performance, and redundancy needs. The options are:

- **RAID 10**

Select RAID 10 for best performance and most redundancy. The storage capacity will be half the combined storage capacity of the hard drives because half the number of drives are redundant hard drives.

- **RAID 6**

Select RAID 6 for higher capacity. The storage capacity will be two hard drives fewer than the combined storage capacity of the hard drives because you have two redundant hard drives.

- **RAID 5**

Select RAID 5 for maximum capacity. The storage capacity will be one hard drive fewer than the combined storage capacity of the four hard drives because you have one redundant hard drive.

[Husky IVO Product Guide](#) can help you choose the right storage capacity or other dimensioning of the unit depending on some of these parameters:

- Number of cameras
- Retention time
- Codec
- Resolution
- Frame rate
- Data rate

Go to [Husky IVO Product Guide](#) and log in with your My Milestone credentials.

For more information, see [Monitor and manage your system on page 31](#)

Change RAID type

To change the RAID array type:

1. Check if the current RAID array status is **Good** and click **Configure**.
2. Accept any user account control warning and click **Next**.
3. Select the type of RAID that you would like to configure for data storage and click **Apply**.



Read the warning stating that all data will be deleted if you continue. Your XProtect system records no video during the configuration.

4. Click **Format** to accept the data deletion and start the configuration of the data RAID storage.
5. A summary window of the RAID configuration appears. Check the type and status of your current RAID array.

Support

If you have a problem and need support, contact your Milestone reseller that you bought the unit from.

Create a diagnostics file

To help your Milestone reseller get logs and details about your system, create a Milestone diagnostics .zip file that lists the system information:

1. Select the **Support** tab.
2. Click **Milestone Diagnostics Tool**.
3. Accept any user account control warning. The **Main Page** appears.
4. Click the **Collect Defaults** icon to start creating a diagnostics .zip file.
5. When finished, the diagnostics .zip file is saved on the Windows desktop. You can now move or transfer the file to any preferred location.
6. Close Milestone Diagnostics Tool.
7. Provide your Milestone reseller with the diagnostics .zip file when they assist you in troubleshooting a problem.

Updates

Update your Husky software components to improve performance, increase security, obtain better stability, receive new features and update existing functionality.

If you update your Husky software components, existing functionality may change and new features may be introduced.

Updating requires the unit is connected to the internet.

Monitor and manage your system

The Broadcom LSI Storage Authority application

Your Milestone Husky unit contains the Broadcom LSI Storage Authority software (LSA), which is a browser-based application that can help you configure, monitor, maintain and troubleshoot your system and storage hardware.

The LSI Storage Authority application enables you to monitor controllers and configure hard drives on the controller. The status of the controller cards, virtual drives and physical drives on the controller is displayed with status icons and event texts.

You can also perform system maintenance tasks, such as update controller firmware and configure as well as rebuild RAID hard drives.

In addition to displaying information related to drive or device failures, the LSI Storage Authority application also provides recommendations and helps you locate and troubleshoot drives or devices that have issues.

Accessing the LSI Storage Authority application

The shortcut to the LSI Storage Authority application is located on the desktop of your Milestone Husky unit and is named **Launch LSA**.



You must use your Windows username and password and you must have administrator privileges to make changes.

For more information, see [LSI Storage Authority user's guide](#).

Recovery

You can do a recovery on your Milestone Husky unit, which resets your unit to the factory default state and lets you start over and reconfigure your unit from scratch.

Recovery will:

- Reset your Husky unit to the factory default
- Run Husky Assistant wizard to configure your unit
- Help you install Milestone XProtect



All data on the Windows (C:) drive will be lost, and your XProtect system will not record any video during the recovery of your unit. You can save the Milestone XProtect VMS configuration before you start the recovery.



Data on the Data (D:) drive will not be deleted.

For detailed feature descriptions and procedures for configuration and maintenance, see the [administrator manual for XProtect VMS](#).

Factory reset from recovery partition

You can perform a factory reset from the recovery partition of your unit if you are running Husky Assistant version 4.2 or later and using the Husky Image version 1.3 or later.



The Husky Assistant version and the Husky Image version are displayed on the **Overview** page of the Husky Assistant properties.

Your Husky IVO unit must also have successfully completed first use installation and configuration as the recovery partition is created by the Husky Assistant during the first use configuration process.

If your Husky product does not contain the recovery partition or if you do not want to use the recovery partition on the unit, you can perform a factory reset by using a bootable USB flash drive from Milestone support.

To perform a factory reset from the recovery partition from within Husky Assistant

If you are running a Husky IVO unit with a recovery partition and Husky Assistant version 4.6 or newer, you can perform a factory reset from the recovery partition from within Husky Assistant.

1. On your Husky IVO unit, open Husky Assistant in maintenance mode, open the **Support** page and click the **Factory Reset** button to open the **Choose an option** page.
The **Factory Reset** button will not be available if you use Remote Desktop to access your Husky IVO unit.
2. On the **Choose an option page**, click **Troubleshoot** and select **Husky factory reset** to start the **Husky IVO Recovery Tool**.
3. When the **Husky IVO Recovery Tool** is displayed, press **Start** to start the factory reset process and follow the instructions.

To perform a factory reset from the recovery partition from within Microsoft Windows

1. On your Husky IVO unit, open the **Recovery** page in **Windows settings > Update and Security** page and press **Restart now** in **Advanced startup** to start your Husky unit in Windows recovery mode. When the **Choose an option** page is displayed, click **Troubleshoot** and select **Husky factory reset** to open the **Husky IVO Recovery Tool**.
2. In **Husky IVO Recovery Tool**, press **Start** to initiate the factory reset process and follow the instructions.

To perform a factory reset from the recovery partition outside Microsoft Windows

If you cannot access your Microsoft Windows operating system, you can start a factory reset of your Husky unit during the initial boot sequence before Windows is loaded.

1. When your Husky IVO unit is turned off, turn on the unit, and during the startup sequence, press **F8** to open the **Advanced Boot options** page.
You may have to press **F8** several times to ensure the system boots into the menu and doesn't start your Windows operating system. If Windows does start, let Windows load and turn off the unit again to repeat this step until the **Advanced Boot options** page opens.
2. On the **Advanced Boot options** page, click **Repair your Computer** to open the **Choose an option** page.
3. On the **Choose an option** page, select **Troubleshoot** to open the **Troubleshoot** page and click **Husky factory reset** to open the **Husky IVO Recovery Tool**.
4. In the **Husky IVO Recovery Tool**, press **Start** to initiate the factory reset process and follow the instructions.

Factory reset from a bootable USB device

You can also perform a factory reset by using a bootable USB flash drive from Milestone support and starting your Husky IVO unit from the USB device.

Before the recovery process:

1. Contact Milestone support to get the latest recovery software.
2. Get help from Milestone support to create a bootable USB flash drive.
3. Connect the USB flash drive to your Milestone Husky IVO unit.
4. Prepare the BIOS settings to boot from USB flash drive.

To start the recovery process:

1. Restart your unit.
2. Boot from the USB flash drive.
3. Your unit boots into recovery mode. Follow the instructions to complete the process.



For more information on first time use, see [Turn on the unit on page 15](#) and [Complete the Husky Assistant Wizard on page 17](#).

XProtect Upgrade

Your Milestone Husky unit can run with any product variant and version of Milestone XProtect VMS determined by the Software License Code (SLC). Your Milestone Husky unit has a preloaded XProtect VMS version ready to be installed, but you can always download and install a newer or older version of Milestone XProtect VMS that matches your license.

You can upgrade your entire system configuration from one product version to another, for example from XProtect 2020 R3 to XProtect 2021 R1. You can install the new product on top of the old version without removing the previous version.



Remember to apply available VMS optimizations after the upgrade. For more information, see [Husky Assistant on page 25](#) > Apply optimizations.

Accessing Husky software updates

Please contact Milestone support for access to upgrades and other related software update packages for your Husky unit.

In some cases, you can access software update packages directly by logging in to My Milestone.

System scaling

To be able to scale to thousands of cameras across multiple sites, the system consists of components that handle specific tasks. If you have installed all components on a standalone Milestone Husky IVO unit, you can expand your system by installing the components on separate dedicated servers in a distributed system to scale and distribute the load.

Not all components are needed in all installations. You can always add additional recording servers, failover recording servers, or XProtect Mobile servers for hosting and providing access to XProtect Mobile client and XProtect Web Client.



helpfeedback@milestone.dk

About Milestone

Milestone Systems is a leading provider of open platform video management software; technology that helps the world see how to ensure safety, protect assets and increase business efficiency. Milestone Systems enables an open platform community that drives collaboration and innovation in the development and use of network video technology, with reliable and scalable solutions that are proven in more than 150,000 sites worldwide. Founded in 1998, Milestone Systems is a stand-alone company in the Canon Group. For more information, visit <https://www.milestonesys.com/>.

